

Switch[®] bowling with style



ST-1 (380V 50HZ)
&
ST-1*(220V 60HZ)
Parts manual

ver: 2.00.7.1




CONTENTS

FRONT END FRAME & PLATFORM ASSEMBLY L.H.....	2
FRONT END FRAME & PLATFORM ASSEMBLY R.H.....	4
FRONT END DRIVE ASSEMBLY ST1 005 00	6
TABLE DRIVE ASSEMBLY ST1 005 01	8
SHUTTLE OPERATOR & SOLENOID ASSEMBLY	
ST1 005 02	10
SWEEP DRIVE & CAM ASSEMBLY ST1 005 36	12
BIN ASSEMBLY ST1 013 00	14
SHUTTLE ASSEMBLY ST1 015 00	16
SWEEP ASSEMBLY ST1 017 00	18
YOKE AND SPOTTING CUP ASSEMBLY ST1 019 00	20
SPOT AND RESPOT CONTROL ASSEMBLY ST1 021 00.....	22
TABLE WIREWAY ASSEMBLY ST1 023 00	24
TABLE ASSEMBLY ST1 025 00	26
CELL ASSEMBLY(-RESPOT) ST1 027 00	27
DISTRIBUTOR ASSEMBLY ST1 028 00	28
DISTRIBUTOR SUPPORT ASSEMBLY ST1 028 01	30
TUBE ASSEMBLY ST1 028 02	32
SUPPORT ASSEMBLY ST1 028 03	33
TRIP STOP SUPPORT ASSEMBLY ST1 028 04	34
DISTRIBUTOR TRANSMISSION ASSEMBLY ST1 028 05	36
SWITCH BOX & CABLE SUPPORT ASSEMBLY ST1 037 00	38

KICKBACK PLATE ASSEMBLY BALL EXIT SIDE	
ST1 038 00 (00*)	40
KICKBACK PLATE ASSEMBLY SIDE OPPOSITE BALL EXIT	
ST1 041 00 (00*)	42
ROLLER ASSEMBLY ST1 043 00	43
BOUNCE PLATE ASSEMBLY ST1 044 00 (00*)	44
CUSHION, SHOCK ABSORBER & CURTAIN ASSEMBLY	
ST1 045 00 (00*)	46
REAR MACHINE TRANSMISSION ASSEMBLY	
ST1 047 00 (00*)	48,50
BACK END ASSEMBLY ST1 051 00 (00*)	52
PIN ELEVATOR WHEEL ASSEMBLY ST1 053 00 (00*)	54
BACK END MOTOR MOUNT BRACKET ASSEMBLY	
ST1 055 00 (00*)	56
PIT LIGHT ASSEMBLY LUXSW.....	57
INDEX	

ITEM WITH "*" NOT SHOWN IN THIS MANUAL


FRONT END FRAME AND PLATFORM ASSEMBLY L.H.

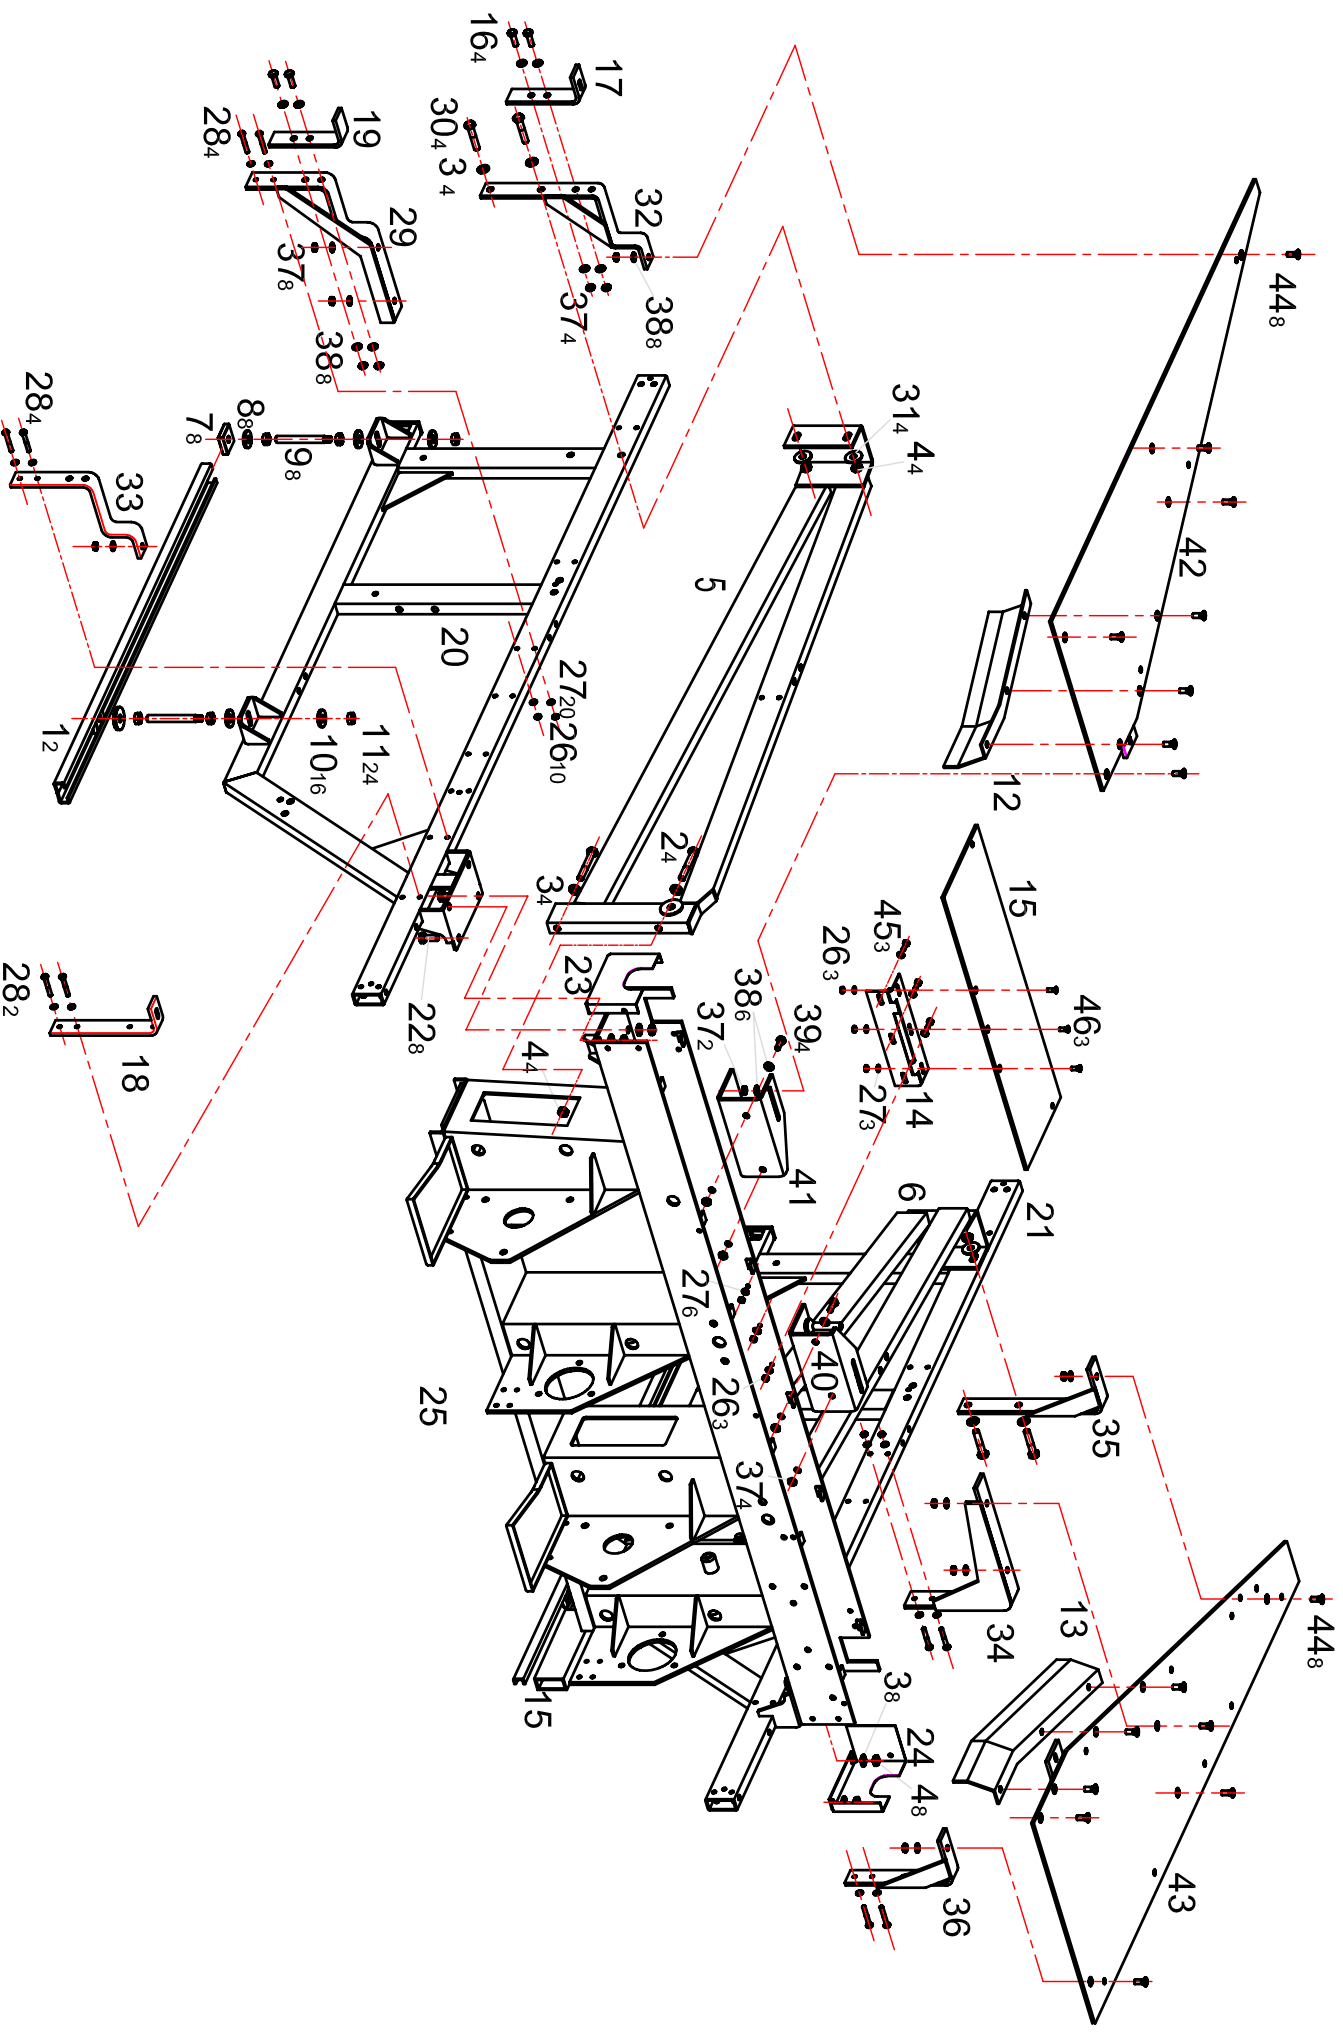




FRONT END FRAME & PLATFORM ASSEMBLY L.H.

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 001 01	LONG UNISTRUT	27	ST1 076 03	FLAT WASHER Ø6
2	ST1 065 17	HEX CAP SCREW M10X70	28	ST1 064 06	HEX CAP SCREW M6X45
3	ST1 076 06	FLAT WASHER Ø10	29	ST1 001 29	BRACKET
4	ST1 067 05	LOCK NUT M10	30	ST1 064 22	HEX CAP SCREW M10X50
5	ST1 001 05	FRAME BRACE WELDMENT, L.H.	31	ST1 076 05	LARGE WASHER Ø10
6	ST1 001 06	FRAME BRACE WELDMENT, R.H.	32	ST1 001 32	BRACKET
7	ST1 001 07	UNISTRUT NUT	33	ST1 001 33	BRACKET
8	ST1 001 08	SPECIAL WASHER	34	ST1 001 34	NORMAL BRACKET
9	ST1 001 09	SPECIAL BOLT	35	ST1 001 35	LONG BRACKET
10	ST1 001 10	SPECIAL WASHER	36	ST1 001 36	SHORT BRACKET
11	ST1 067 06	LOCK NUT M12	37	ST1 067 04	LOCK NUT M8
12	ST1 001 12	GUARD, L.H.	38	ST1 076 04	FLAT WASHER Ø8
13	ST1 001 13	GUARD, R.H.	39	ST1 065 09	HEX CAP SCREW M8X20
14	ST1 001 14	HINGE	40	ST1 001 40	FIXING PANEL R.H.
15	ST1 001 15	CENTER PLATFORM	41	ST1 001 41	FIXING PANEL L.H.
16	ST1 065 12	HEX CAP SCREW M8X50	42	ST1 001 42	NORMAL BRACKET
17	ST1 001 17	BRACKET	43	ST1 001 43	NARROW PLATFORM
18	ST1 001 18	BRACKET	44	ST1 062 07	FLAT SOCKET CAP SCREW M8X25
19	ST1 001 19	BRACKET	45	ST1 064 03	HEX CAP SCREW M6X20
20	ST1 001 20	SIDE FRAME, L. H.	46	ST1 062 02	FLAT SOCKET CAP SCREW M6X16
21	ST1 001 21	SIDE FRAME, R. H.			
22	ST1 065 14	HEX CAP SCREW M10X25			
23	ST1 001 23	END CAP			
24	ST1 001 24	END CAP			
25	ST1 001 25	CROSSBEAM WELDMENT			
26	ST1 067 03	LOCK NUT M6			

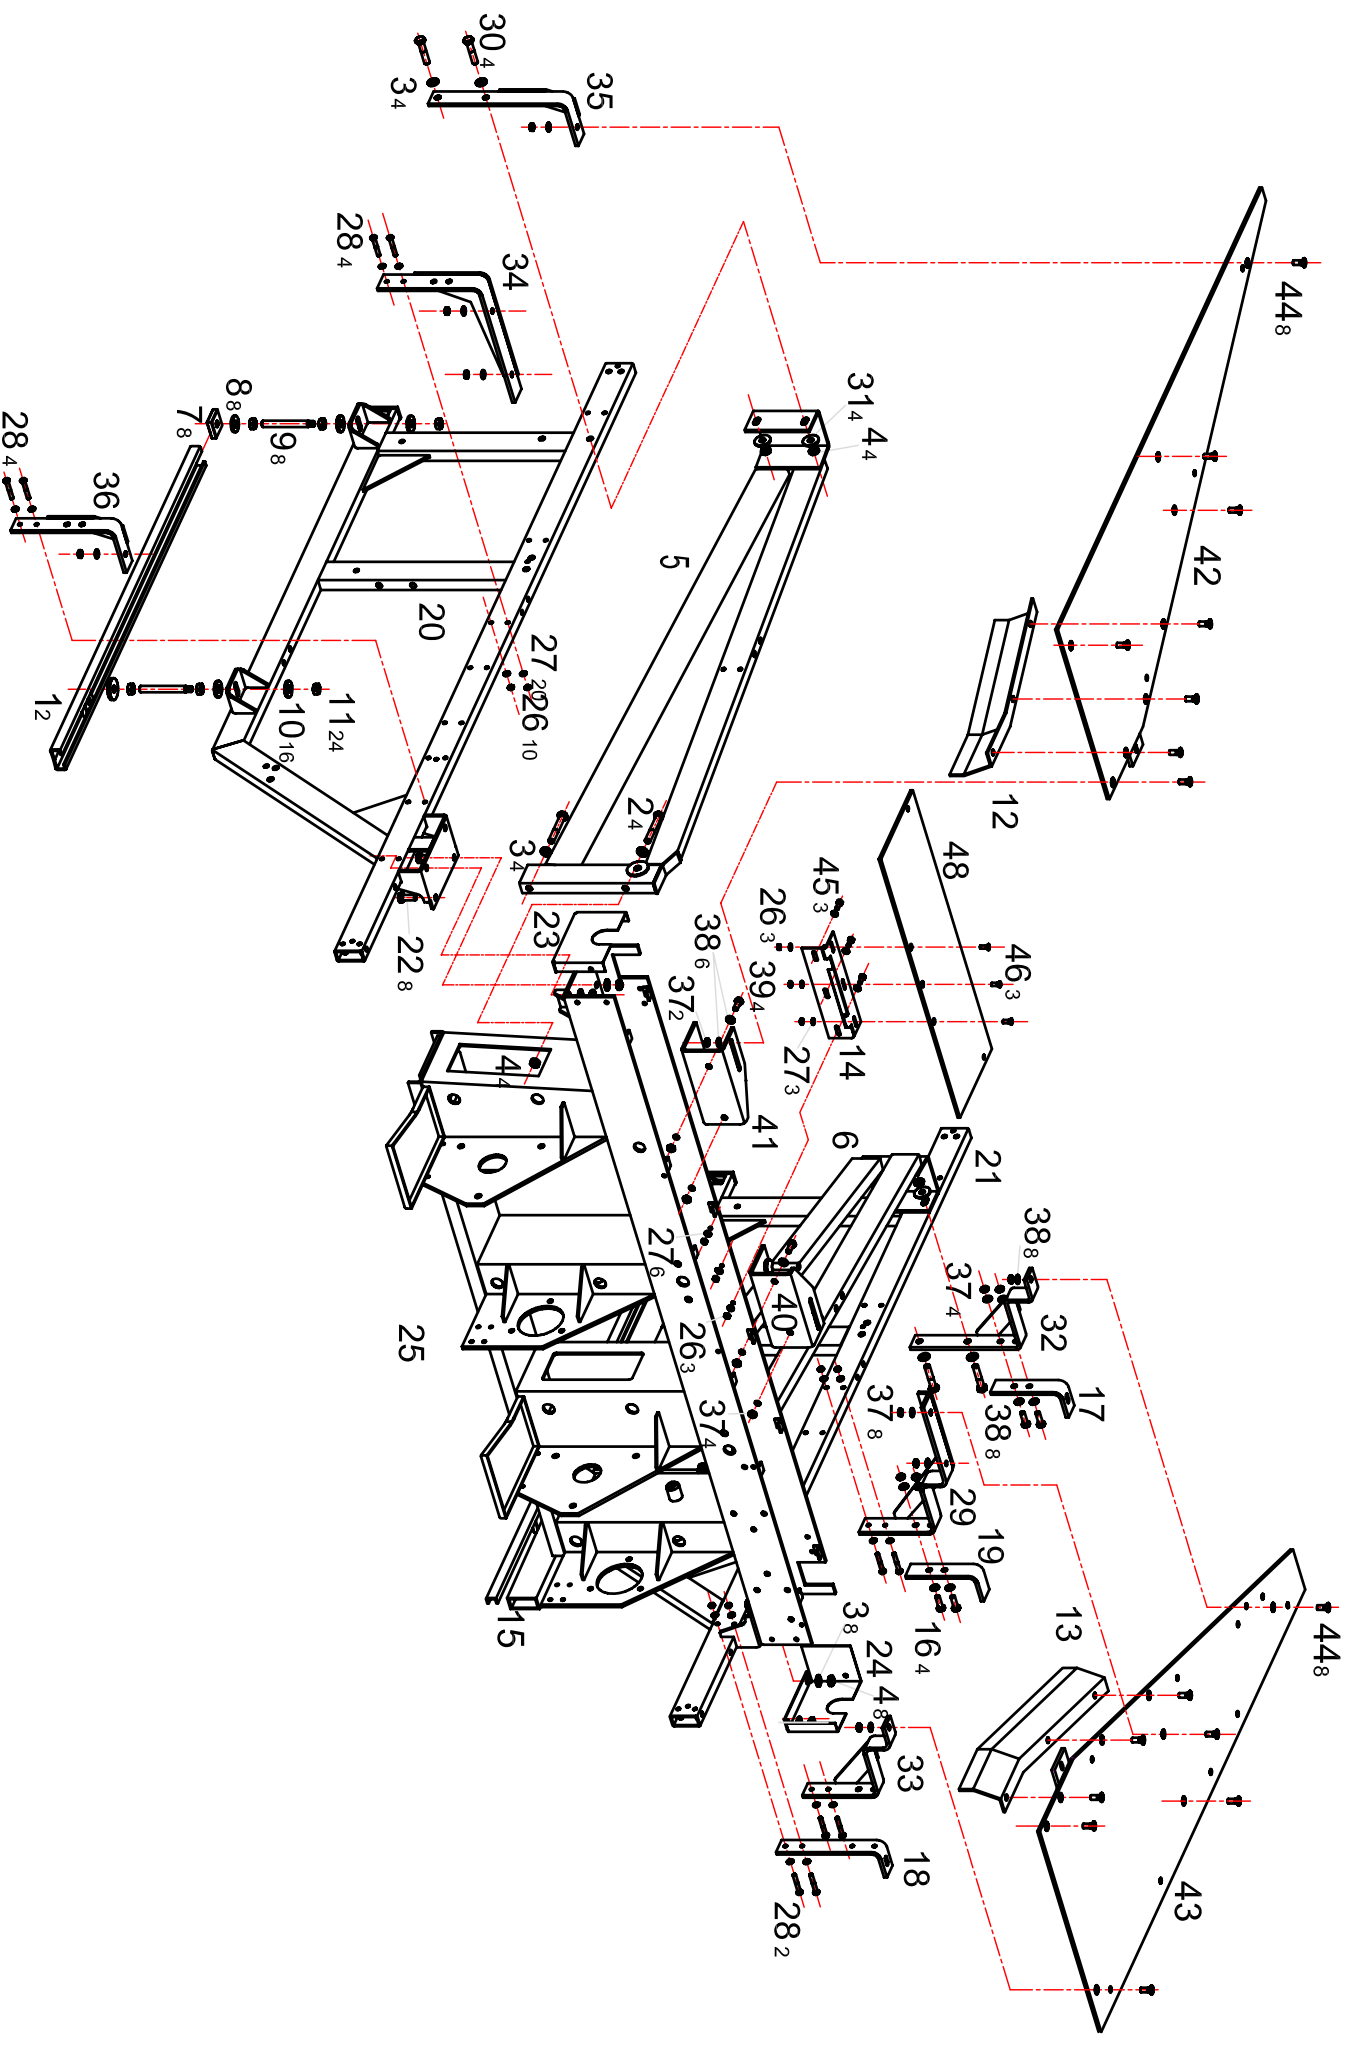

FRONT END FRAME & PLATFORM ASSEMBLY R.H.

ITEM		PART NO.	DESCRIPTION	ITEM		PART NO.	DESCRIPTION
1	ST1 001 01	LONG UNISTRUT		27	ST1 076 03	FLAT WASHER Ø6	
2	ST1 065 17	HEX CAP SCREW M10X70		28	ST1 064 05	HEX CAP SCREW M6X40	
3	ST1 076 06	FLAT WASHER Ø10		29	ST1 001 29	SUPPORT	
4	ST1 067 05	LOCK NUT M10		30	ST1 064 22	HEX CAP SCREW M10X50	
5	ST1 001 05	FRAME BRACE WELDMENT, L.H.		31	ST1 076 05	LARGE WASHER Ø10	
6	ST1 001 06	FRAME BRACE WELDMENT, R.H.		32	ST1 001 32	SUPPORT	
7	ST1 001 07	UNISTRUT NUT		33	ST1 001 33	SUPPORT	
8	ST1 001 08	SPECIAL WASHER		34	ST1 001 34	SUPPORT	
9	ST1 001 09	SPECIAL BOLT		35	ST1 001 35	SUPPORT	
10	ST1 001 10	SPECIAL WASHER		36	ST1 001 36	SUPPORT	
11	ST1 067 06	LOCK NUT M12		37	ST1 067 04	LOCK NUT M8	
12	ST1 001 12	GUARD, L.H.		38	ST1 076 04	FLAT WASHER Ø8	
13	ST1 001 13	GUARD, R.H.		39	ST1 065 09	HEX CAP SCREW M8X20	
14	ST1 001 14	HINGE		40	ST1 001 40	FIXING PANEL R.H.	
15	ST1 001 15	CENTER PLATFORM		41	ST1 001 41	FIXING PANEL L.H.	
16	ST1 065 10	HEX CAP SCREW M8X25		42	ST1 001 42	NORMAL BRACKET	
17	ST1 001 17	BRACKET		43	ST1 001 43	NARROW PLATFORM	
18	ST1 001 18	BRACKET		44	ST1 062 06	FLAT SOCKET CAP SCREW M8X20	
19	ST1 001 19	BRACKET		45	ST1 064 02	HEX CAP SCREW M6X16	
20	ST1 001 20	SIDE FRAME, L. H.	46	ST1 062 02	FLAT SOCKET CAP SCREW M6X16		
21	ST1 001 21	SIDE FRAME, R. H.					
22	ST1 065 14	HEX CAP SCREW M10X25					
23	ST1 001 23	END CAP					
24	ST1 001 24	END CAP					
25	ST1 001 25	CROSSBEAM WELDMENT					
26	ST1 067 03	LOCK NUT M6					

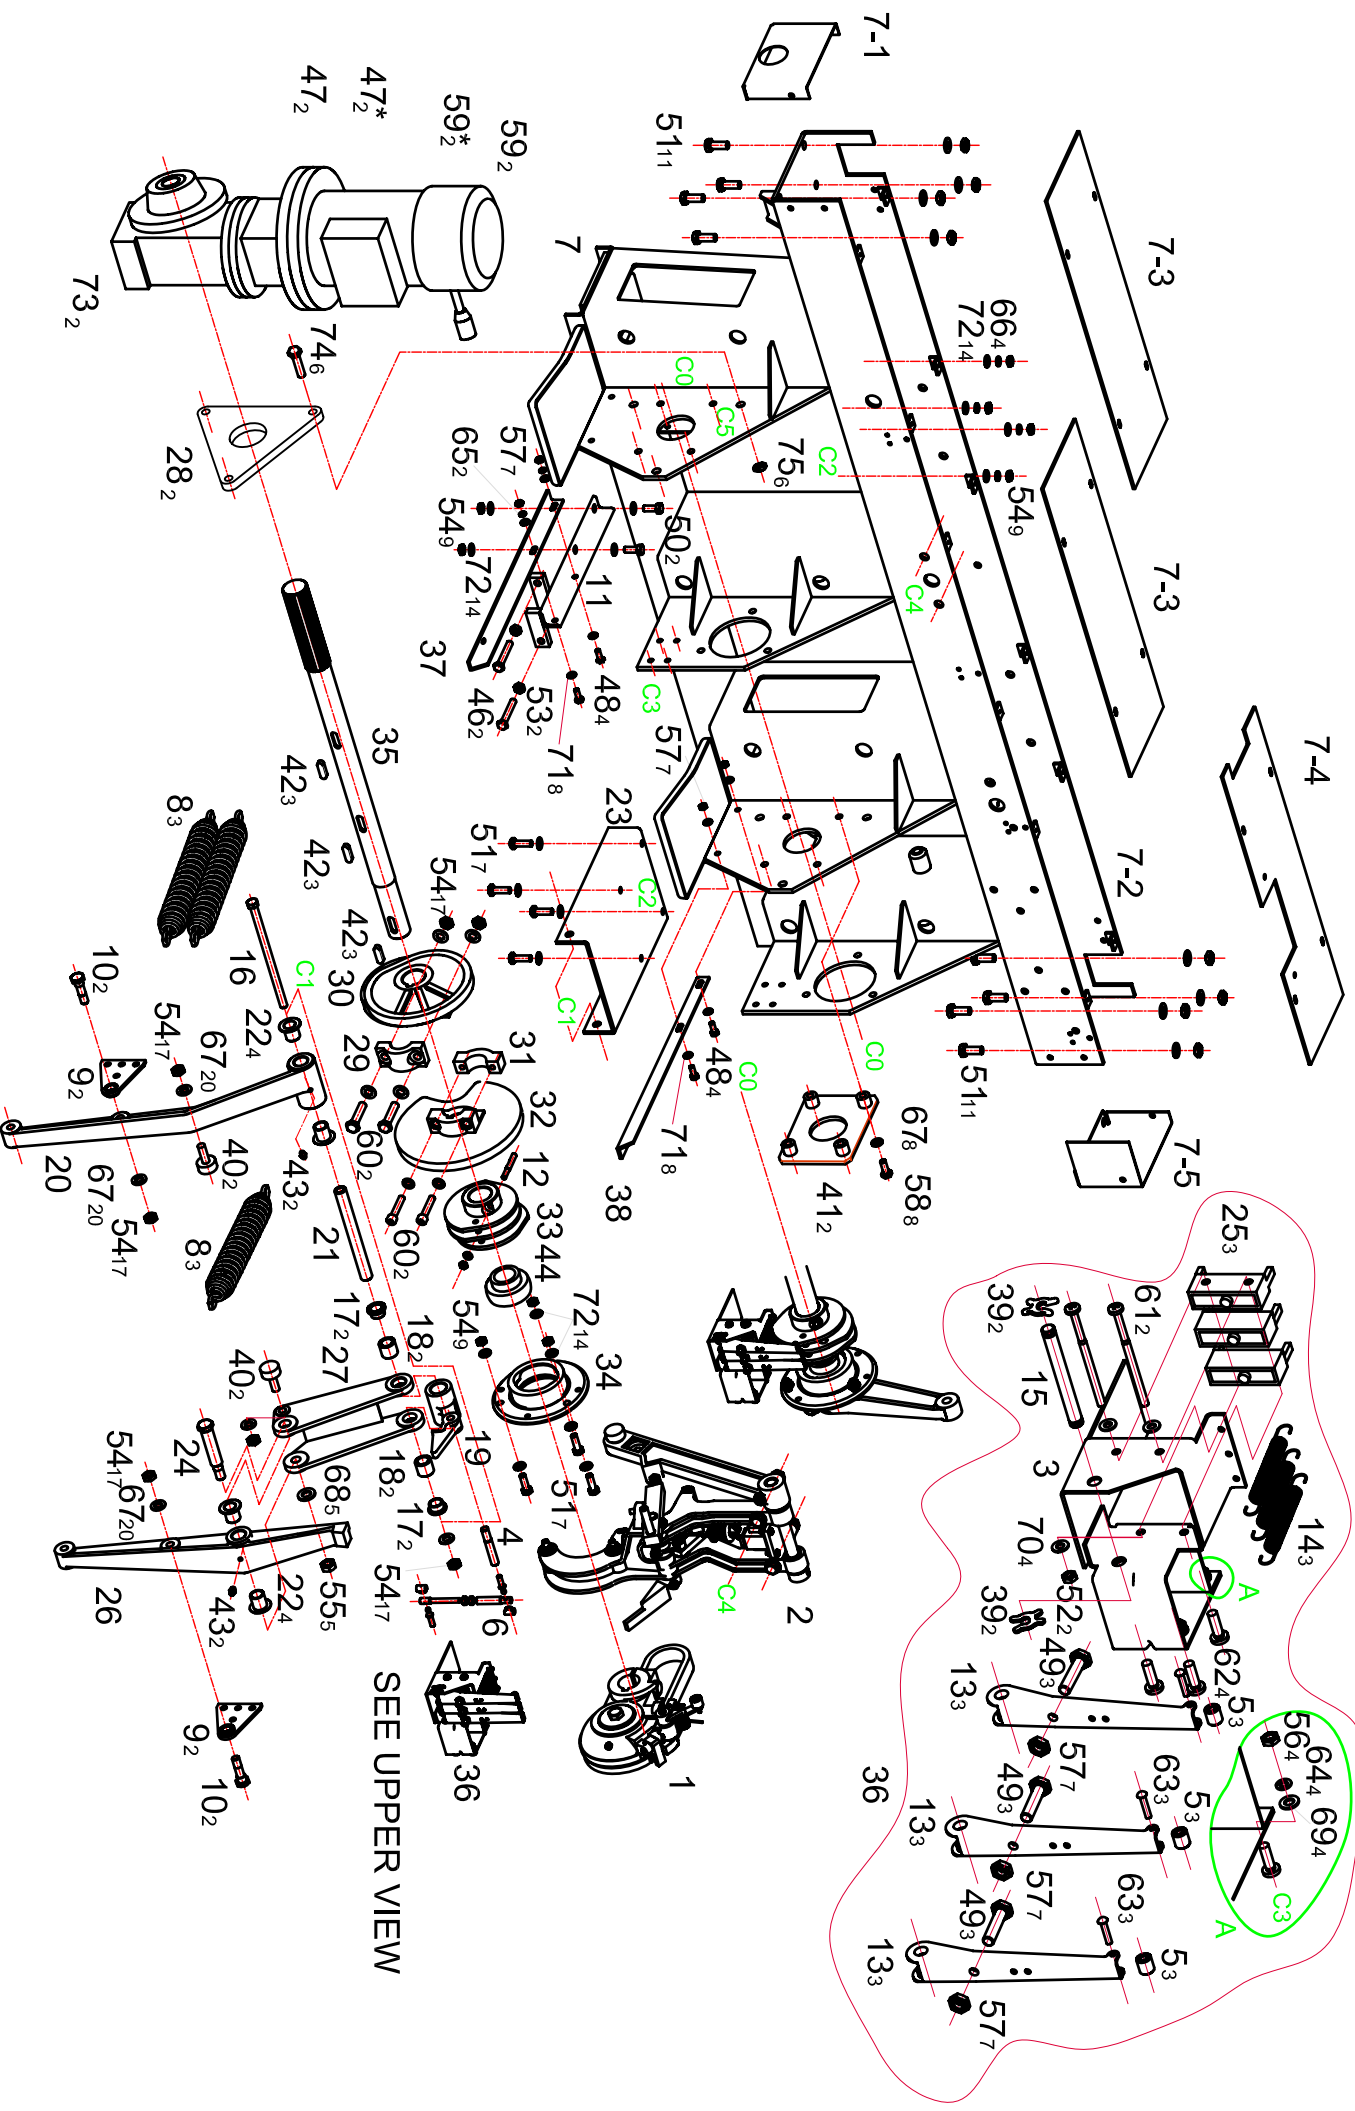

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 005 01	TABLE DRIVE ASSEMBLY	41	ST1 005 41	FLANGE
2	ST1 005 02	SOLENOID OPERATED SHUTTLE ASS.	42	ST1 060 09	KEY 28X7X8
3	ST1 005 03	HOUSING WELDMENT	43	ST1 061 01	GREASE FITTING M6
4	ST1 005 04	ROLL PIN Ø10X62	44	ST1 063 01	BEARING UC206
5	ST1 005 05	ROLL PIN Ø8X9	46	ST1 064 12	HEX CAP SCREW M8X50
6	ST1 005 06	BALL JOINT	47	ST1 005 47	MOTOR SWITCH ASSY (380V 50HZ)
7	ST1 005 07	CROSSBEAM WELDMENT	47*	ST1 005 47*	MOTOR SWITCH ASSY (220V 60HZ)
8	ST1 005 08	SPRING	48	ST1 065 04	HEX CAP SCREW M6X16
9	ST1 005 09	SPRING HANGER	49	ST1 064 04	SPECIAL BOLT M6X25
10	ST1 005 10	SPRING HANGER PIN	50	ST1 065 09	HEX CAP SCREW M8X20
11	ST1 005 11	CONFINE PANEL	51	ST1 065 10	HEX CAP SCREW M8X25
12	ST1 005 12	CLAMP STUD	52	ST1 066 01	NUT M4
13	ST1 005 13	SWITCH LEVER ASSY (WITH 5,63)	53	ST1 066 06	NUT M8
14	ST1 005 14	SPRING	54	ST1 067 04	LOCK NUT M8
15	ST1 005 15	SHAFT	55	ST1 067 06	LOCK NUT M12
16	ST1 005 16	SPECIAL BOLT M10X183	56	ST1 067 02	LOCK NUT M5
17	ST1 005 17	FLANGE BUSHING	57	ST1 067 03	LOCK NUT M6
18	ST1 005 18	FLANGE BUSHING	58	ST1 065 11	HEX CAP SCREW M8X30
19	ST1 005 19	ALTERNATE LATCH ASSY (WITH 4,18 ₂)	59	ST1 005 59	STATOR (380V 50Hz)
20	ST1 005 20	RESPOT ARM LINK ASSY (WITH 22 ₂)	59*	ST1 005 59*	STATOR (220V 60Hz)
21	ST1 005 21	SPOTTING ARM SHAFT	60	ST1 069 08	SOCKET HEAD CAP SCREW M8X45
22	ST1 005 22	FLANGE BUSHING	61	ST1 071 04	PAN HEAD SCREW M4X65
23	ST1 005 23	BRACKET	62	ST1 071 07	PAN HEAD SCREW M5X20
24	ST1 005 24	STOP LINK PIN	63	ST1 072 02	RIVET 3X15
25	ST1 005 25	MICRO-SWITCH Z-15G-B	64	ST1 075 02	SPRING WASHER Ø5
26	ST1 005 26	SPOTTING ARM LINK ASSY (WITH 22 ₂)	65	ST1 075 03	SPRING WASHER Ø6
27	ST1 005 27	UPPER SPOTING LINK ASSY (WITH 17 ₂)	66	ST1 075 04	SPRING WASHER Ø8
28	ST1 005 28	FLANGE MOTOR	67	ST1 076 06	FLAT WASHER Ø10
29	ST1 005 29	SPOT & RESPOT CAM HUB CAP	68	ST1 076 07	FLAT WASHER Ø12
30	ST1 005 30	SPOT & RESPOT CAM	69	ST1 076 01	FLAT WASHER Ø4
31	ST1 005 31	SHUTTLE CAM HUB CAP	70	ST1 076 02	FLAT WASHER Ø5
32	ST1 005 32	SHUTTLE CAM	71	ST1 076 03	FLAT WASHER Ø6
33	ST1 005 33	TABLE CAM WELDMENT	72	ST1 076 04	FLAT WASHER Ø8
34	ST1 005 34	BEARING RETAINER	73	ST1 005 73	GEAR BOX
35	ST1 005 35	TABLE DRIVE SHAFT	74	ST1 065 16	HEX CAP SCREW M10X40
36	ST1 005 36	SWEEP DRIVE ASSEMBLY	75	ST1 067 05	LOCK NUT M10
37	ST1 005 37	LIGHT BRACKET			
38	ST1 005 38	LIGHT BRACKET			
39	ST1 005 39	X WASHER			
40	ST1 005 40	CAM FOLLOWER CF10KZ			


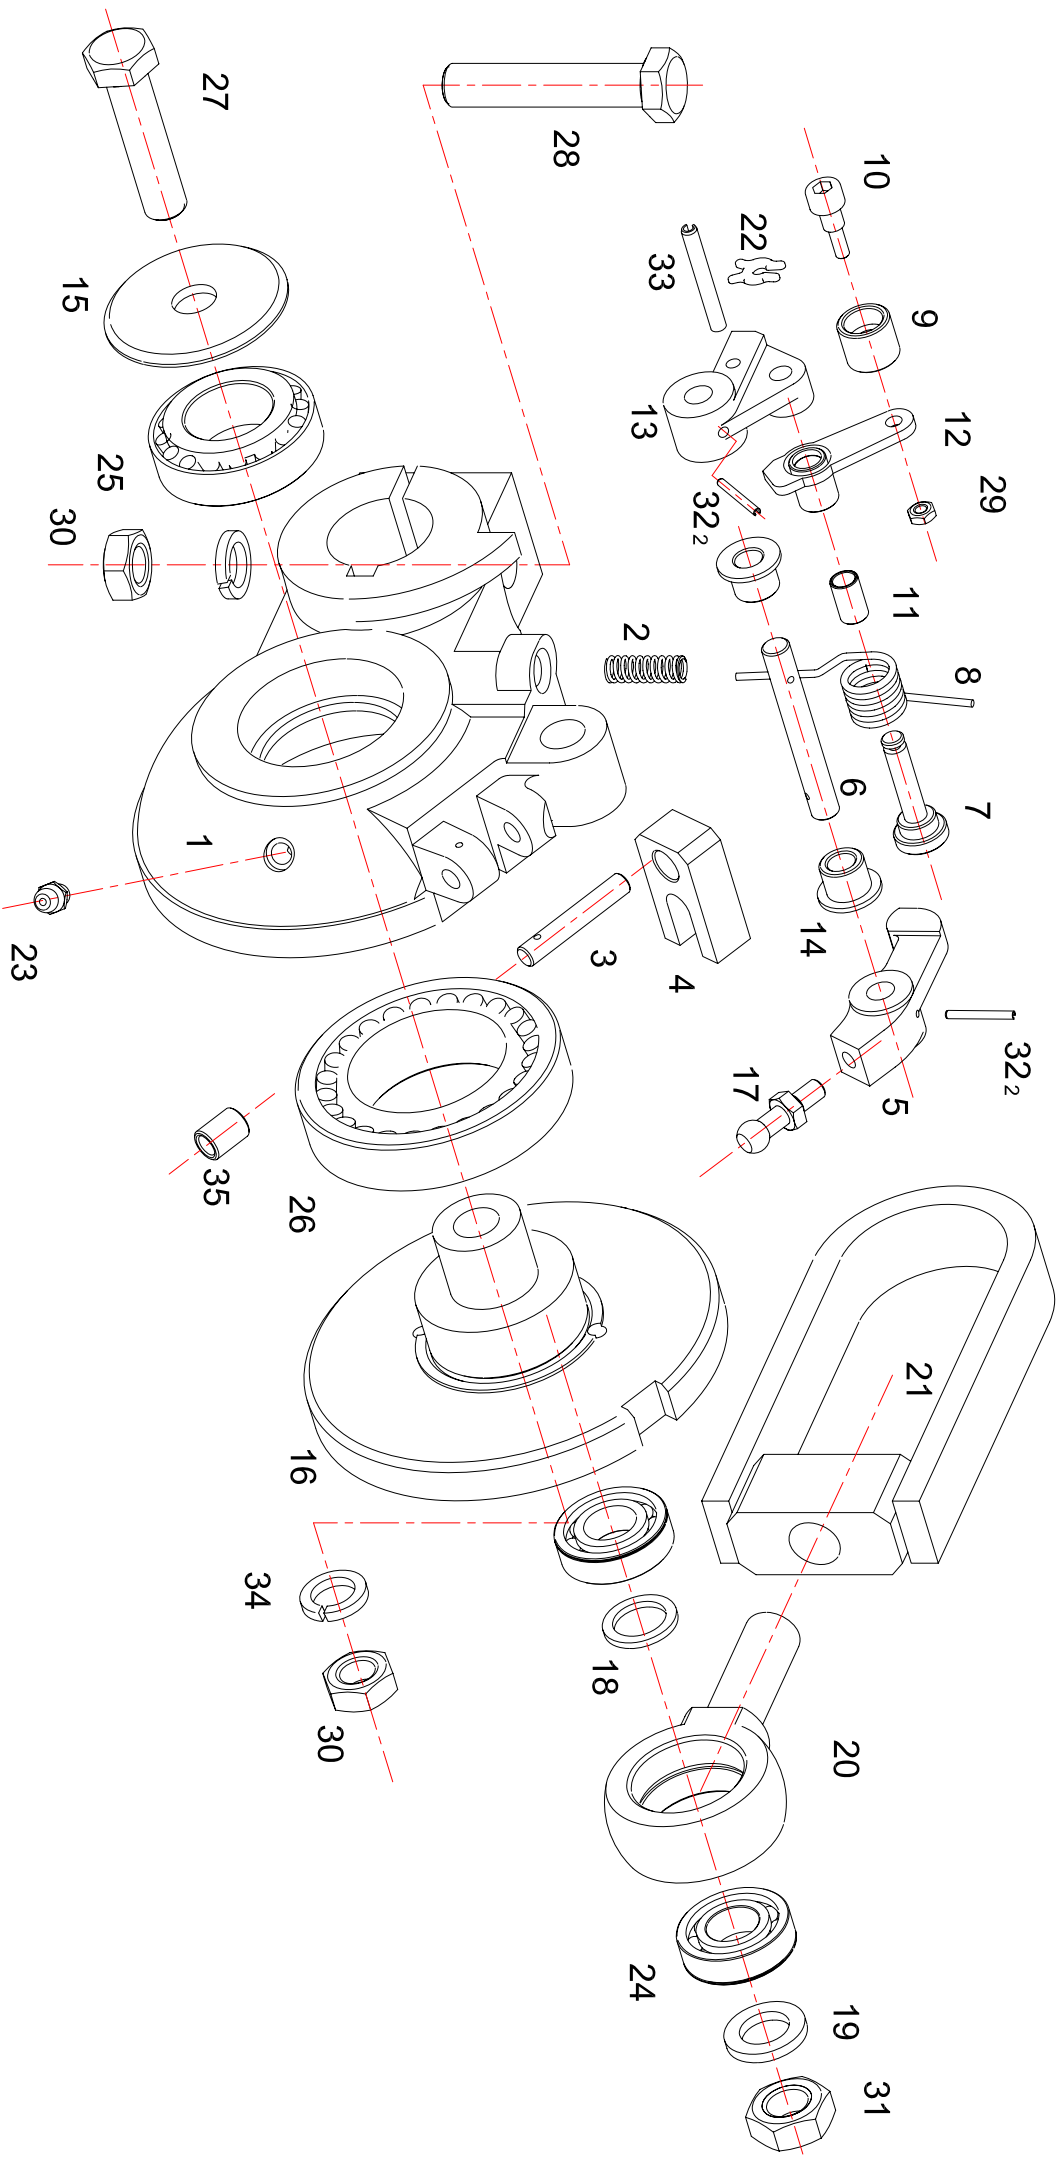






TABLE DRIVE ASSEMBLY ST1 005 01

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 007 01	CRANK HOUSING & CUP	27	ST1 064 27	HEX CAP SCREW M12X50
2	ST1 007 02	SPRING	28	ST1 064 29	HEX CAP SCREW M12X60
3	ST1 007 03	PIVOT PIN	29	ST1 067 01	LOCK NUT M4
4	ST1 007 04	LATCH	30	ST1 067 06	LOCK NUT M12
5	ST1 007 05	ARM LATCH	31	ST1 067 07	LOCK NUT M14
6	ST1 007 06	PIN	32	ST1 073 02	ROLL PIN Ø2X20
7	ST1 007 07	PIN	33	ST1 073 08	ROLL PIN Ø4X40
8	ST1 007 08	SPRING	34	ST1 075 06	SPRING WASHER Ø12
9	ST1 007 09	ROLLER	35	ST1 007 35	SELEEVE BUSHING
10	ST1 007 10	SHOULDER SCREW			
11	ST1 007 11	SLEEVE BUSHING			
12	ST1 007 12	LINK HUB WELDMENT ASSY (WITH 11)			
13	ST1 007 13	LINK			
14	ST1 007 14	FLANGE BUSHING			
15	ST1 007 15	DISC SPRING			
16	ST1 007 16	TABLE DRIVE ECCENTRIC			
17	ST1 007 17	CAM BALL ASSEMBLY			
18	ST1 007 18	SPACER			
19	ST1 007 19	SPACER			
20	ST1 007 20	ROD END			
21	ST1 007 21	YOKE WELDMENT			
22	ST1 007 22	X WASHER			
23	ST1 061 01	GREASE FITTING M6			
24	ST1 063 02	BEARING 80102			
25	ST1 063 10	BEARING 2007105E			
26	ST1 063 11	BEARING 2007109E			

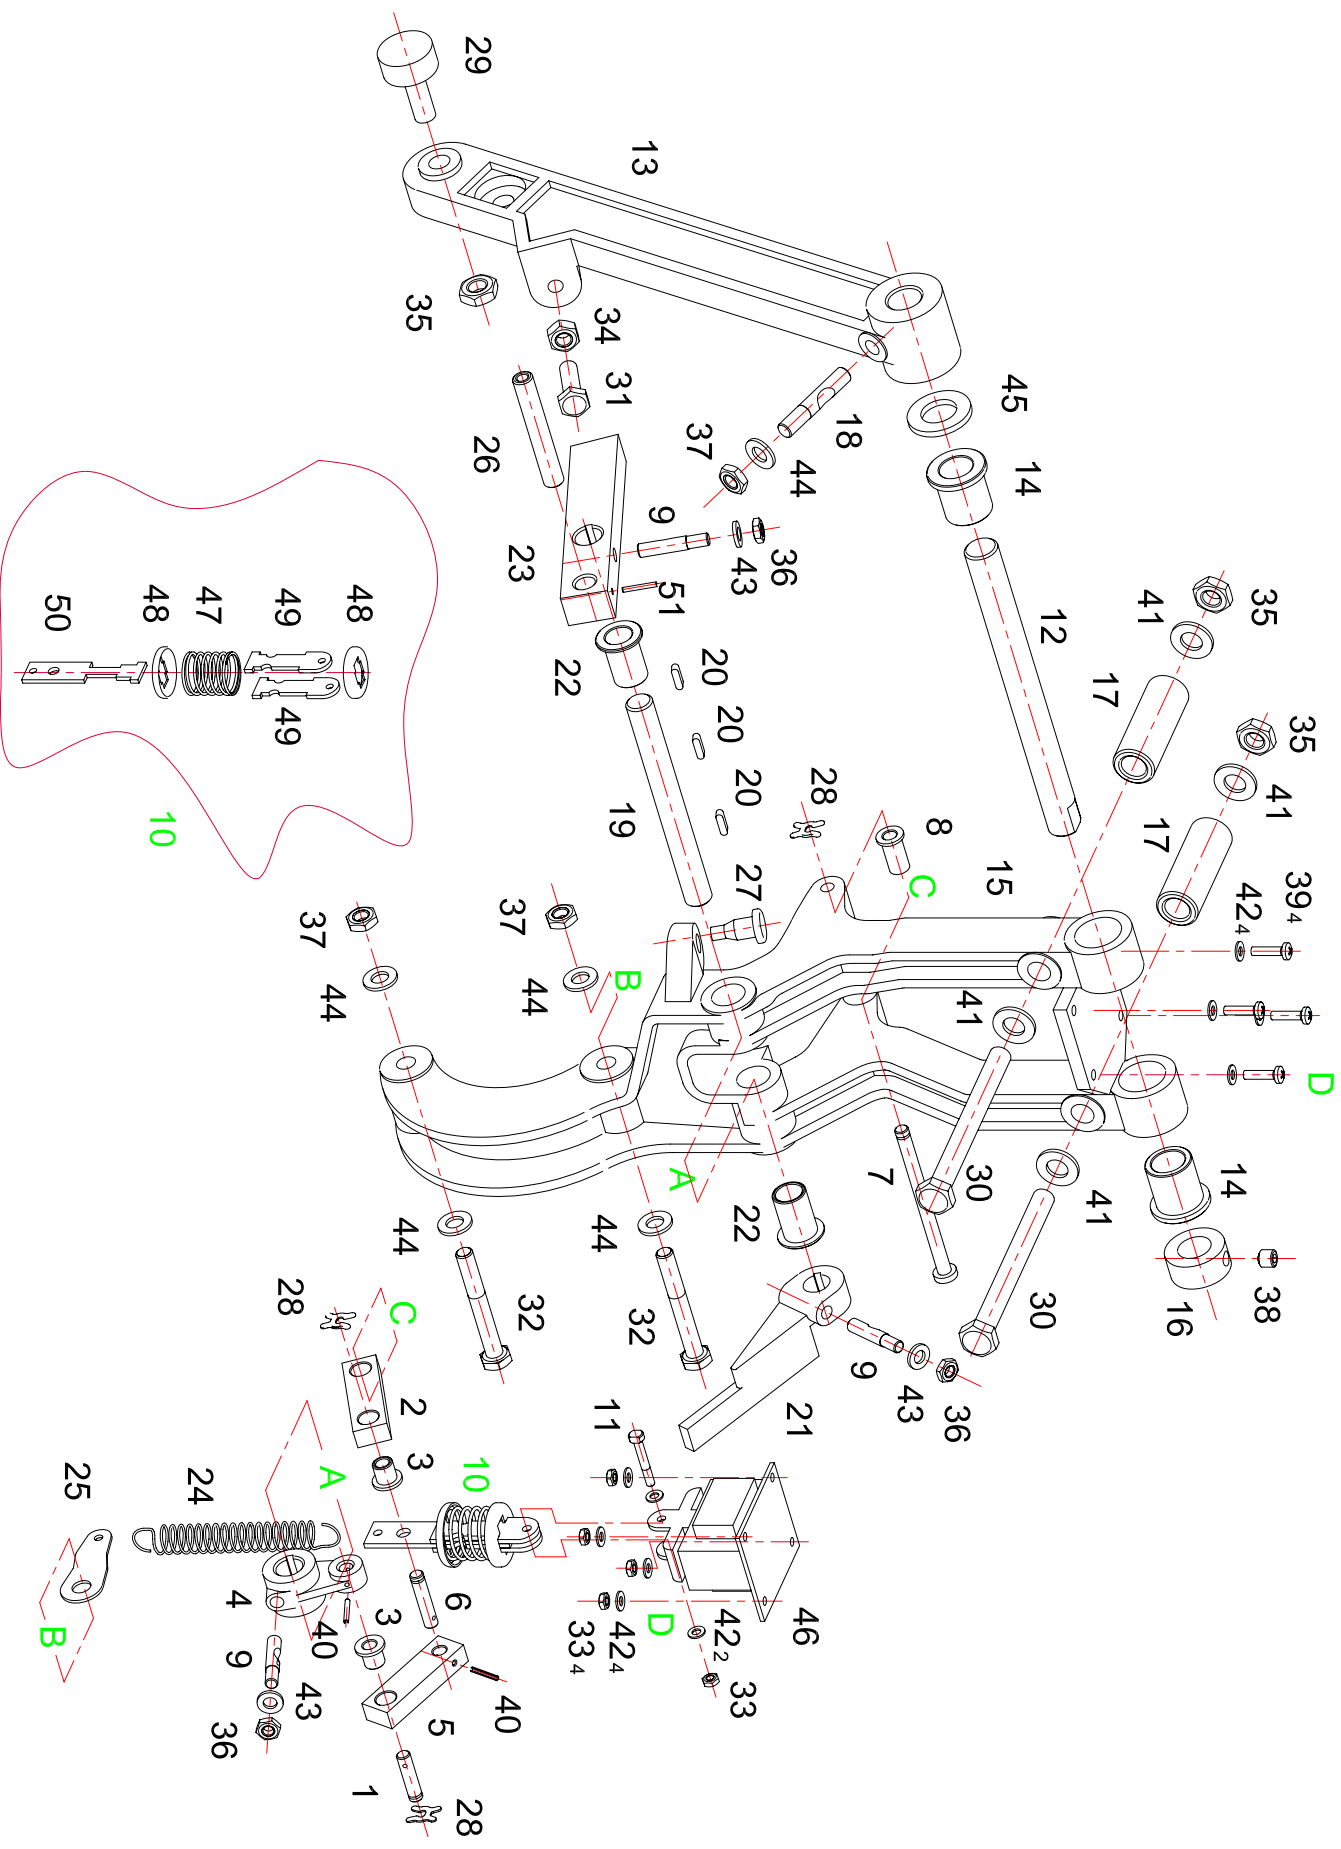

SOLENOID OPERATED SHUTTLE ASSEMBLY ST1 005 02

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 009 01	PIN	27	ST1 009 27	RUBBER BUMPER
2	ST1 009 02	LINK ASSY (WITH 3,8)	28	ST1 007 22	X WASHER
3	ST1 009 03	FLANGE BUSHING	29	ST1 005 40	CAM FOLLOWER CF10KZ
4	ST1 009 04	LINK ASSY (WITH 1,40)	30	ST1 064 26	HEX CAP SCREW M10X100
5	ST1 009 05	KIT LINK REPL. ASSY (WITH 3,6,40)	31	ST1 064 09	HEX CAP SCREW M8X25
6	ST1 009 06	PIN	32	ST1 064 14	HEX CAP SCREW M8X60
7	ST1 009 07	SHAFT	33	ST1 066 01	NUT M4
8	ST1 009 08	FLANGE BUSHING	34	ST1 066 06	NUT M8
9	ST1 009 09	CLAMP STUD	35	ST1 067 05	LOCK NUT M10
10	ST1 009 10	SPRING LINK ASSEMBLY	36	ST1 067 03	LOCK NUT M6
11	ST1 009 11	ROLL PIN Ø4X22	37	ST1 067 04	LOCK NUT M8
12	ST1 009 12	SHAFT	38	ST1 070 06	SOCKET SET SCREW M8X8
13	ST1 009 13	LEVER	39	ST1 071 01	PAN HEAD SCREW M4X16
14	ST1 009 14	FLANGE BUSHING	40	ST1 073 01	ROLL PIN Ø2X16
15	ST1 009 15	SHAFT ASSY (WITH 14 ²)	41	ST1 076 06	FLAT WASHER Ø10
16	ST1 009 16	COLLAR	42	ST1 076 01	FLAT WASHER Ø4
17	ST1 009 17	SPACER	43	ST1 076 03	FLAT WASHER Ø6
18	ST1 009 18	CLAMP STUD	44	ST1 076 04	FLAT WASHER Ø8
19	ST1 009 19	SHAFT	45	ST1 076 08	FLAT WASHER Ø16
20	ST1 009 20	KEY 12X3X4	46	ST1 009 46	SOLENOID (220V 50Hz)
21	ST1 009 21	CAM LINK	47	ST1 009 47	SPRING
22	ST1 009 22	FLANGE BUSHING	48	ST1 009 48	SPECIAL WASHER
23	ST1 009 23	STOP LEVER	49	ST1 009 49	SPRING LINK OUTSIDE
24	ST1 009 24	SPRING	50	ST1 009 50	SPRING LINK
25	ST1 009 25	SPRING CLIP	51	ST1 073 05	ROLL PIN Ø3X30
26	ST1 005 04	ROLL PIN			

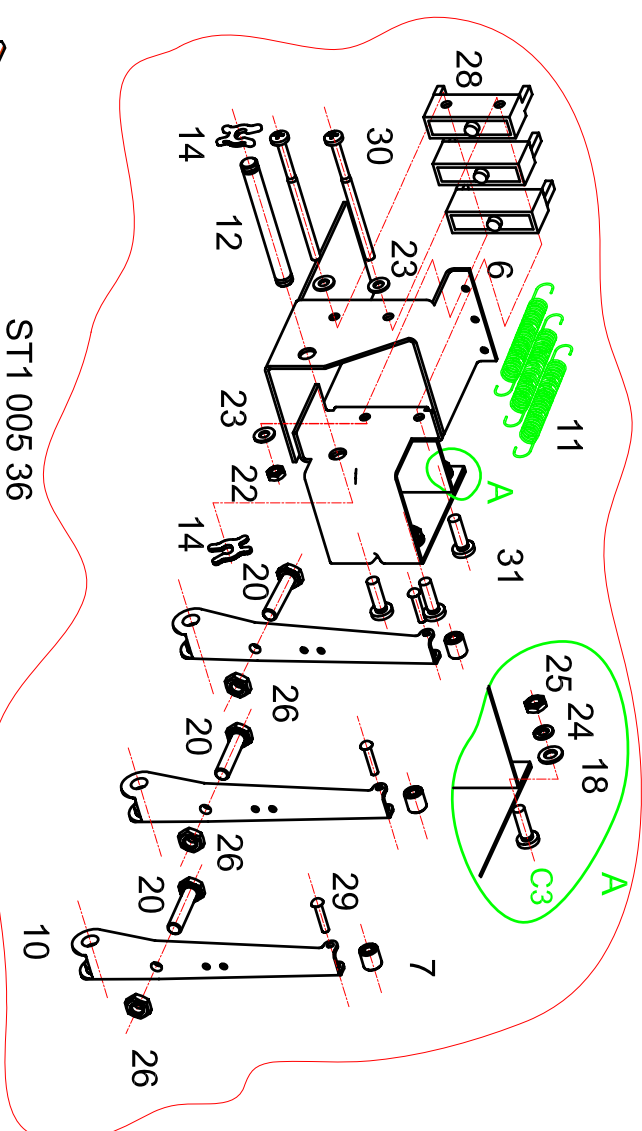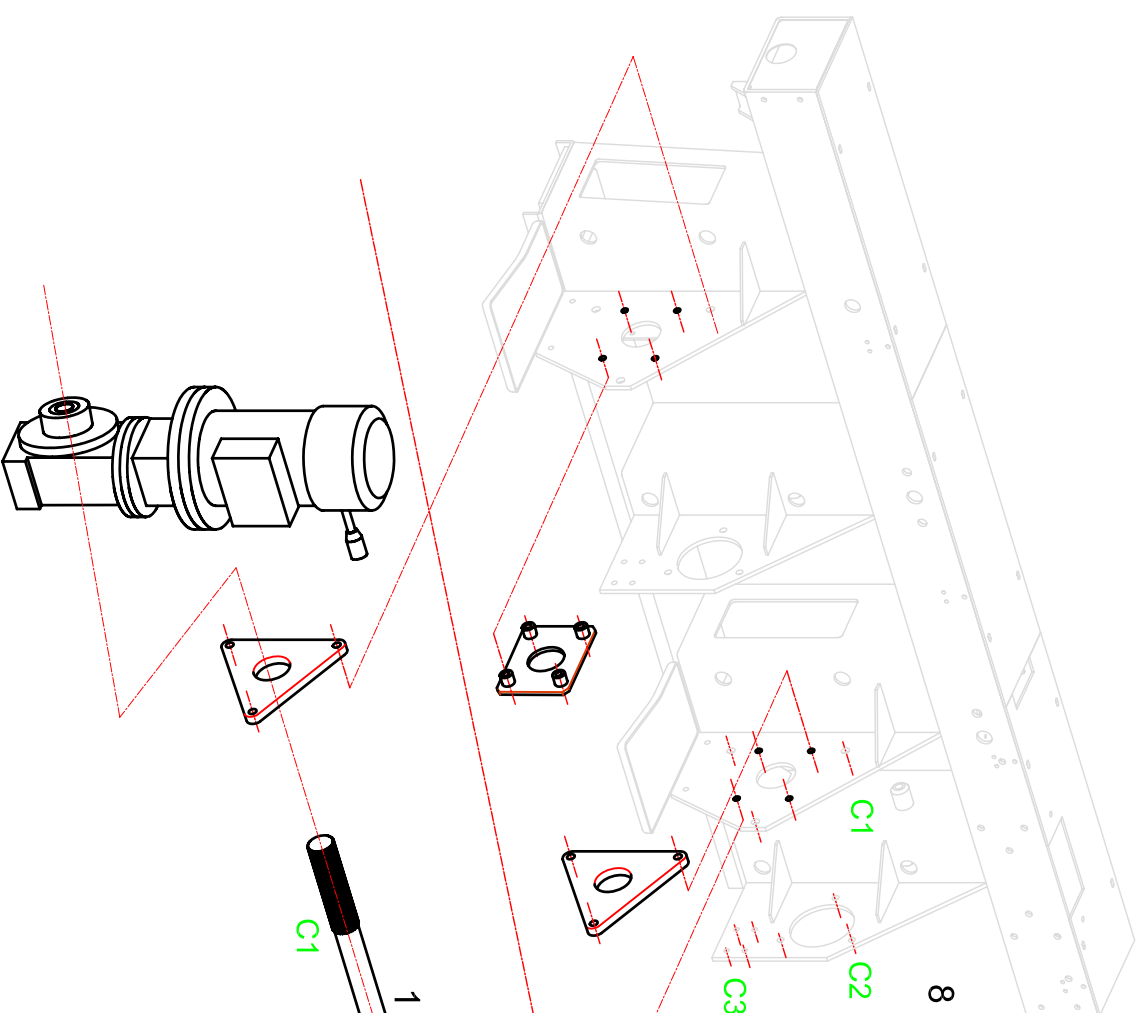


SEE UPPER VIEW

ST1 005 36


ST1 005 36

SWEEP DRIVE & CAM ASSEMBLY ST1 005 36


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 011 01	SWEEP DRIVE SHAFT	27	ST1 066 06	LOCK NUT M8
2	ST1 011 02	CAM WELDMENT, SWEEP	28	ST1 005 25	MICRO-SWITCH Z-15G-B
3	ST1 011 03	CAM WELDMENT, SWEEP	29	ST1 072 02	RIVET 3X15
4	ST1 011 04	CRANK ARM	30	ST1 071 04	PAN HEAD SCREW M4X65
5	ST1 076 04	FLAT WASHER Ø8	31	ST1 071 06	PAN HEAD SCREW M5X16
6	ST1 005 03	HOUSING WELDMENT	32	ST1 076 07	WASHER Ø12
7	ST1 005 05	ROLLER	33	ST1 075 06	SPRING WASHER Ø12
8	ST1 005 07	CROSSBEAM WELDMENT	34	ST1 067 06	LOCK NUT M12
9	ST1 005 12	CLAMP STUD			
10	ST1 005 13	SWITCH LEVER ASSY (WITH 7,29)			
11	ST1 005 14	SPRING			
12	ST1 005 15	SHAFT			
13	ST1 005 34	BEARING RETAINER			
14	ST1 005 39	X WASHER			
15	ST1 076 03	FLAT WASHER Ø6			
16	ST1 060 09	KEY 28X7X8			
17	ST1 063 01	BEARING UC206			
18	ST1 076 02	FLAT WASHER Ø5			
19	ST1 064 30	HEX CAP SCREW M12X65			
20	ST1 064 04	HEX CAP SCREW M6X25			
21	ST1 064 09	HEX CAP SCREW M8X25			
22	ST1 066 01	NUT M4			
23	ST1 076 01	FLAT WASHER Ø4			
24	ST1 075 02	SPRING WASHER Ø5			
25	ST1 067 02	LOCK NUT M5			
26	ST1 067 03	LOCK NUT M6			

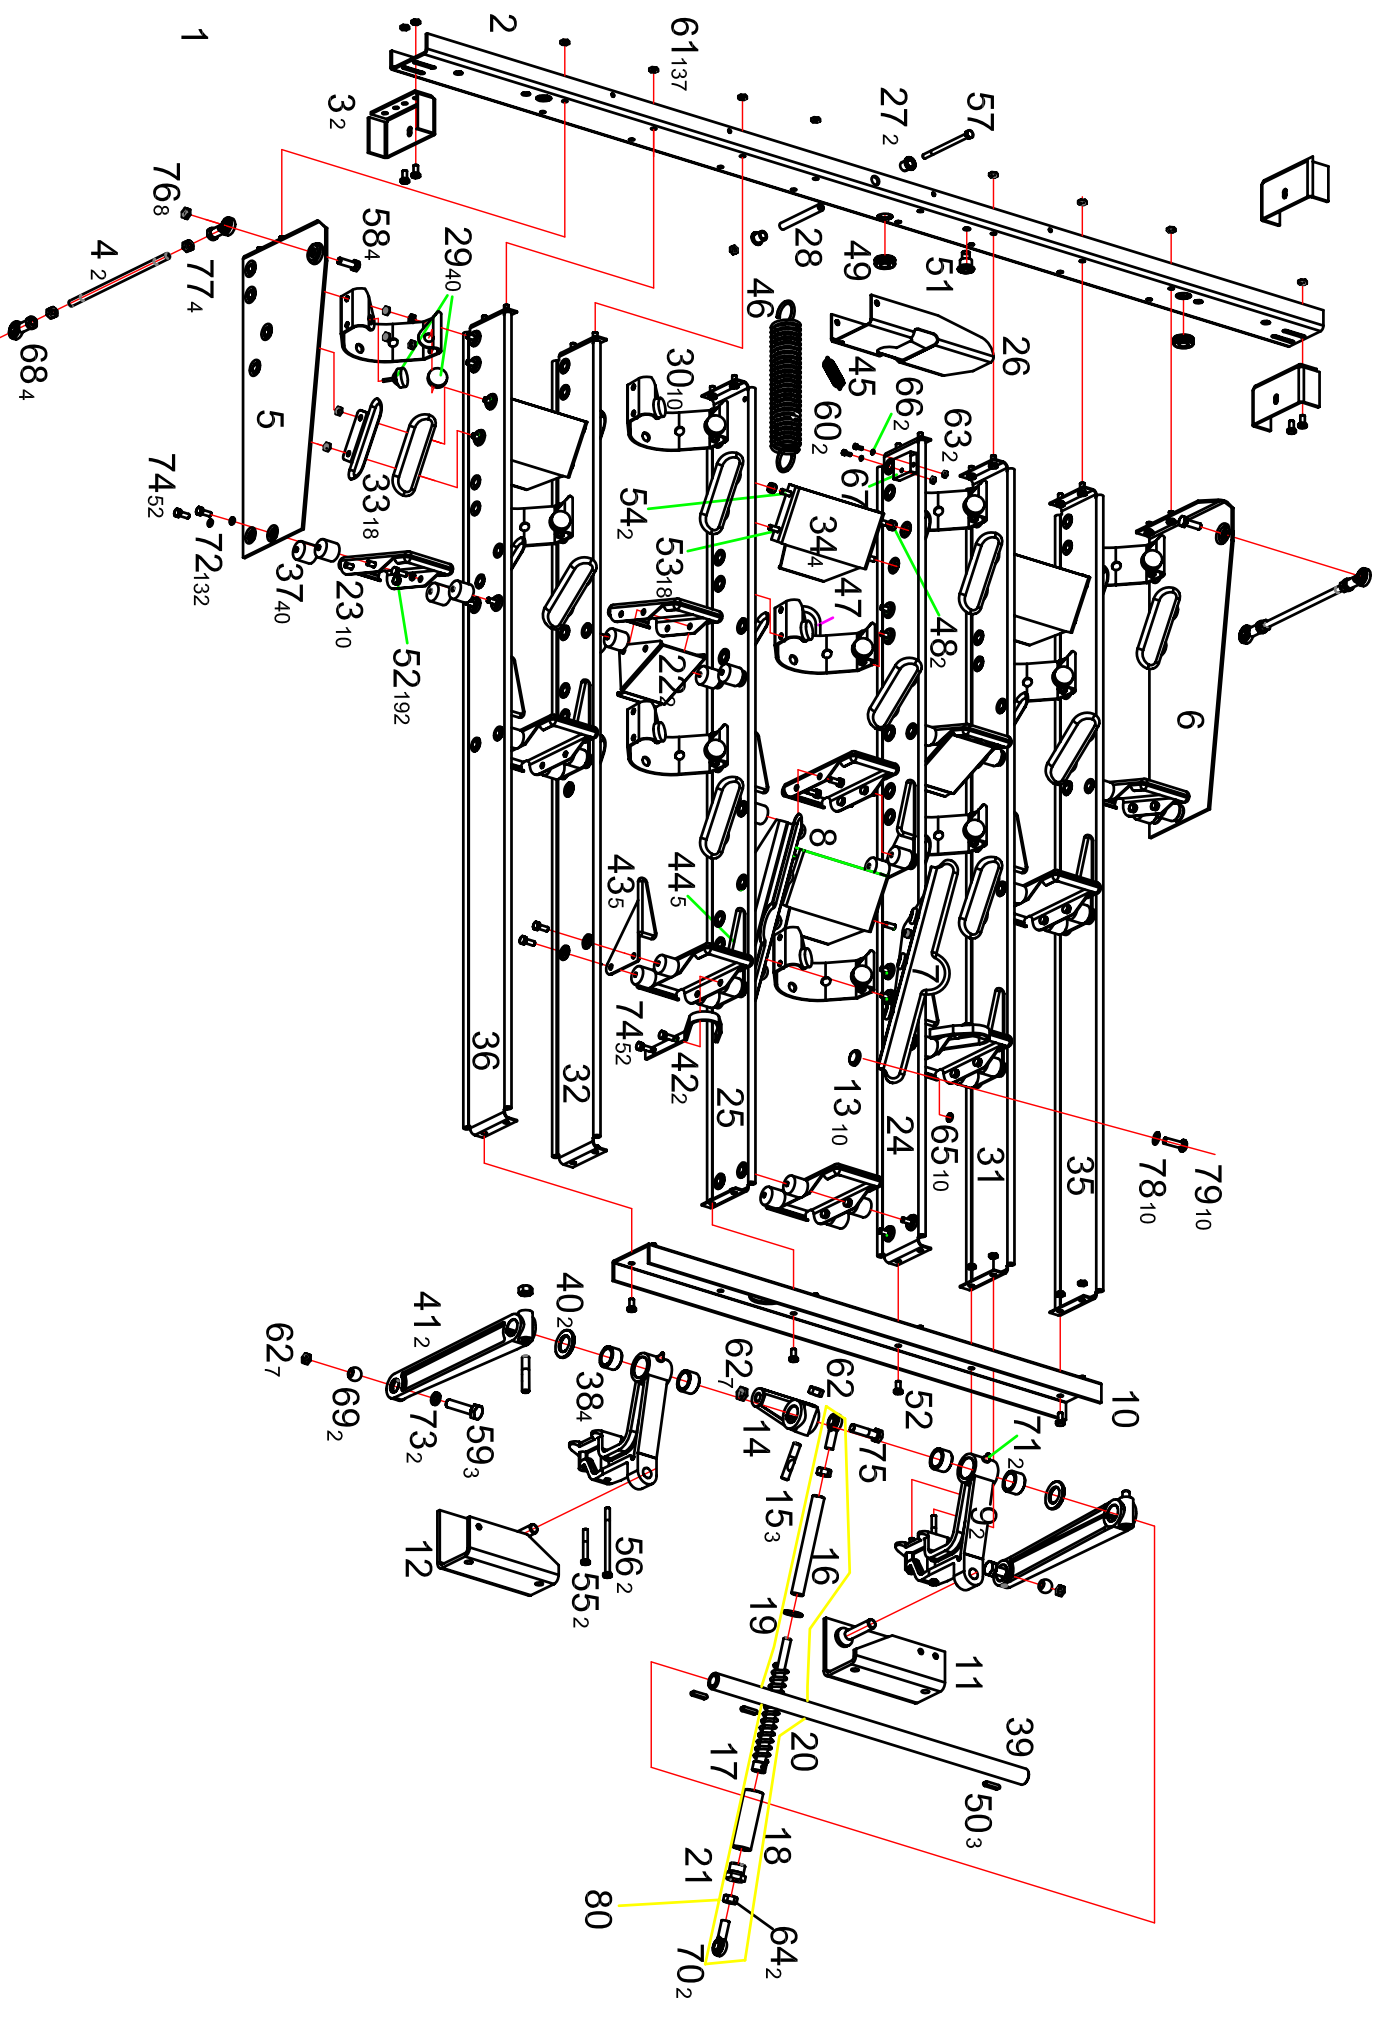

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 013 01	SHUTTLE ASSEMBLY(NOT SHOW)	41	ST1 013 41	SHUTTLE OPERATING ARM
2	ST1 013 02	CHANNEL WELDMENT	42	ST1 013 42	GUIDE PIN #1
3	ST1 013 03	BRACKET SUPPORT	43	ST1 013 43	PIN GUIDE
4	ST1 013 04	ROD	44	ST1 013 44	PIN GUIDE
5	ST1 013 05	PIN GUIDE L. H.	45	ST1 013 45	SPRING
6	ST1 013 06	PIN GUIDE R. H.	46	ST1 013 46	SPRING
7	ST1 013 07	TRACK ASSEMBLY R. H.	47	ST1 013 47	BRACKET WELDMENT
8	ST1 013 08	TRACK ASSEMBLY L. H.	48	ST1 013 48	SPECIAL WASHER Ø7
9	ST1 013 09	BRACKET ASSY (WITH 38 ₂ ,71)	49	ST1 013 49	RUBBER SPACER
10	ST1 013 10	CHANNEL SHORT	50	ST1 013 50	SPECIAL KEY 25X5X5
11	ST1 013 11	BRACKET WELDMENT R. H.	51	ST1 009 27	RUBBER BUMPER
12	ST1 013 12	BRACKET WELDMENT L. H.	52	ST1 065 03	HEX CAP SCREW M6X12
13	ST1 013 13	BEARING	53	ST1 065 05	HEX CAP SCREW M6X20
14	ST1 013 14	LEVER BIN	54	ST1 065 06	HEX CAP SCREW M6X25
15	ST1 013 15	STUD CLAMP	55	ST1 064 06	HEX CAP SCREW M6X45
16	ST1 013 16	LONG TUBE	56	ST1 064 07	HEX CAP SCREW M6X75
17	ST1 013 17	ROD	57	ST1 064 08	HEX CAP SCREW M6X95
18	ST1 013 18	TUBE	58	ST1 065 10	HEX CAP SCREW M8X25
19	ST1 013 19	SPECIAL WASHER Ø11	59	ST1 065 15	HEX CAP SCREW M10X35
20	ST1 013 20	SPRING	60	ST1 071 02	PAN HEAD SCREW M4X25
21	ST1 013 21	TUBE PLUG	61	ST1 067 03	LOCK NUT M6
22	ST1 013 22	SPACER PIN GUIDE #4 & #6	62	ST1 067 05	LOCK NUT M10
23	ST1 013 23	SPACER PIN BUTT GUIDE	63	ST1 066 01	NUT M4
24	ST1 013 24	STRINGER CENTER R.H.& L.H.	64	ST1 066 07	NUT M10
25	ST1 013 25	STRINGER CENTER R.H.& L.H.	65	ST1 076 02	FLAT WASHER Ø5
26	ST1 013 26	SWITCH ACTUATOR	66	ST1 076 01	FLAT WASHER Ø4
27	ST1 013 27	FLANGE BUSHING	67	ST1 013 67	MICRO-SWITCH Z-15GD-B
28	ST1 013 28	SPACER	68	ST1 013 68	ROD END BEARING BNF-8
29	ST1 013 29	BUMPER	69	ST1 013 69	SPHERICAL BEARING SCP 10F
30	ST1 013 30	PIN HEAD BRACKET	70	ST1 013 70	ROD END BEARING BNM-10
31	ST1 013 31	STRINGER CENTER R.H.& L.H.	71	ST1 061 01	GREASE FITTING M6
32	ST1 013 32	STRINGER CENTER R.H.& L.H.	72	ST1 075 03	SPRING WASHER Ø6
33	ST1 013 33	PIN GUIDE	73	ST1 076 06	FLAT WASHER Ø10
34	ST1 013 34	SPACER PIN HEAD GUIDE	74	ST1 065 04	HEX CAP SCREW M6X16
35	ST1 013 35	STRINGER OUTSIDE R.H.	75	ST1 064 20	HEX CAP SCREW M10X40
36	ST1 013 36	STRINGER OUTSIDE L.H.	76	ST1 067 04	LOCK NUT M8
37	ST1 013 37	SHOCK MOUNT	77	ST1 066 06	NUT M8
38	ST1 013 38	SLEEVE BUSHING	78	ST1 013 78	STAR WASHER Ø5
39	ST1 013 39	SHAFT	79	ST1 013 79	PHILIPS HEAD TRUSS SCREW M5X25
40	ST1 013 40	WASHER THRUST OILITE Ø22	80	ST1 013 80	SHUTTLE LINK ASSY

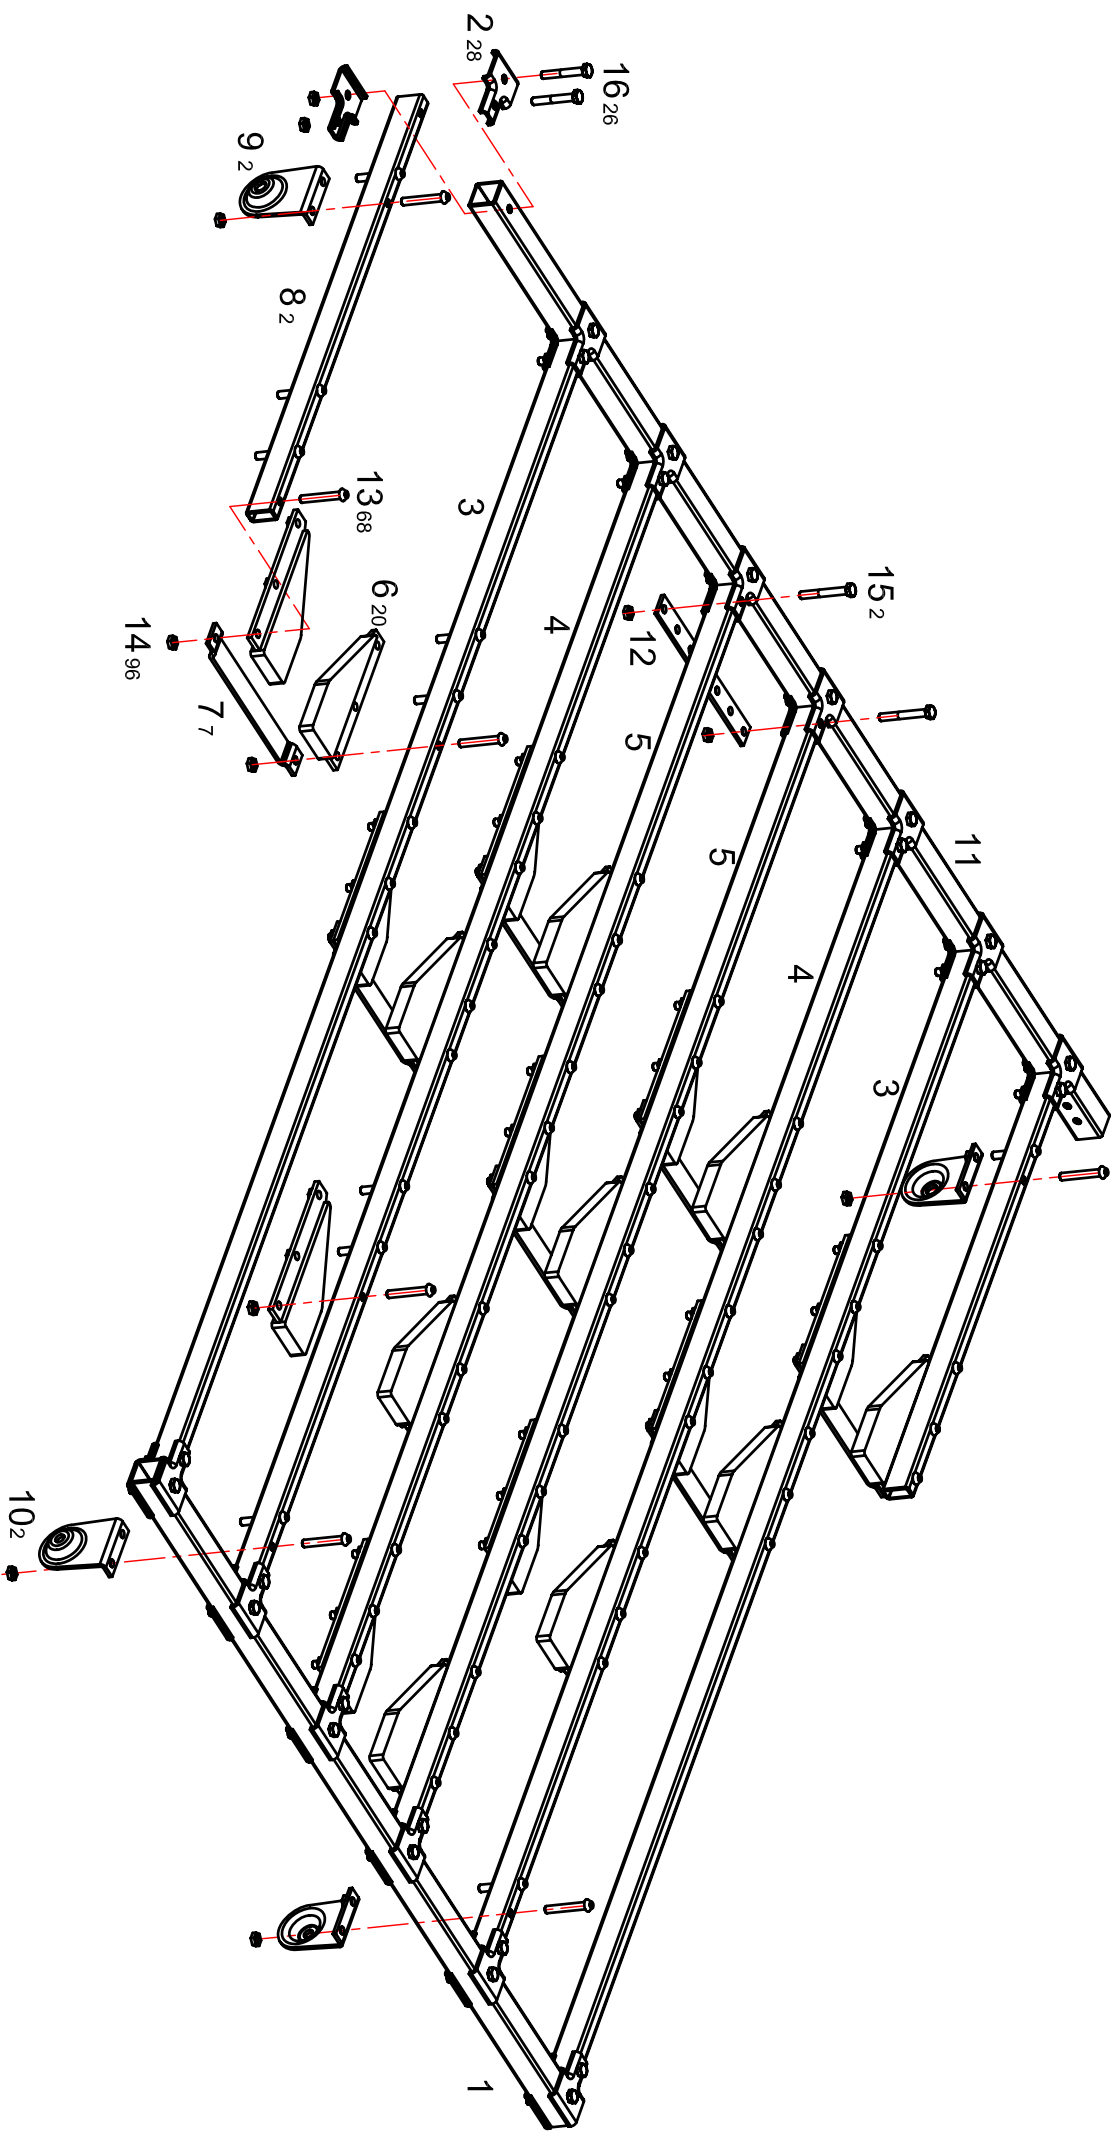

ITEM	PART NO.	DESCRIPTION
1	ST1 015 01	TUBE, CROSS(SHORT)
2	ST1 015 02	CLAMP END
3	ST1 015 03	TUBE, OUTSIDE
4	ST1 015 04	TUBE, SIDE(LONG)
5	ST1 015 05	TUBE, CENTER
6	ST1 015 06	PIN OLDER
7	ST1 015 07	BIN STRAP
8	ST1 015 08	TUBE, SIDE(SHORT)
9	ST1 015 09	BRACKET ARM Ø8
10	ST1 015 10	BRACKET ARM Ø10
11	ST1 015 11	SHUTTLE CROSS TUBE(LONG)
12	ST1 015 12	STRIP
13	ST1 062 05	FLAT SOCKET CAP SCREW M6X40
14	ST1 067 03	LOCK NUT M6
15	ST1 064 06	HEX CAP SCREW M6X45
16	ST1 064 05	HEX CAP SCREW M6X40

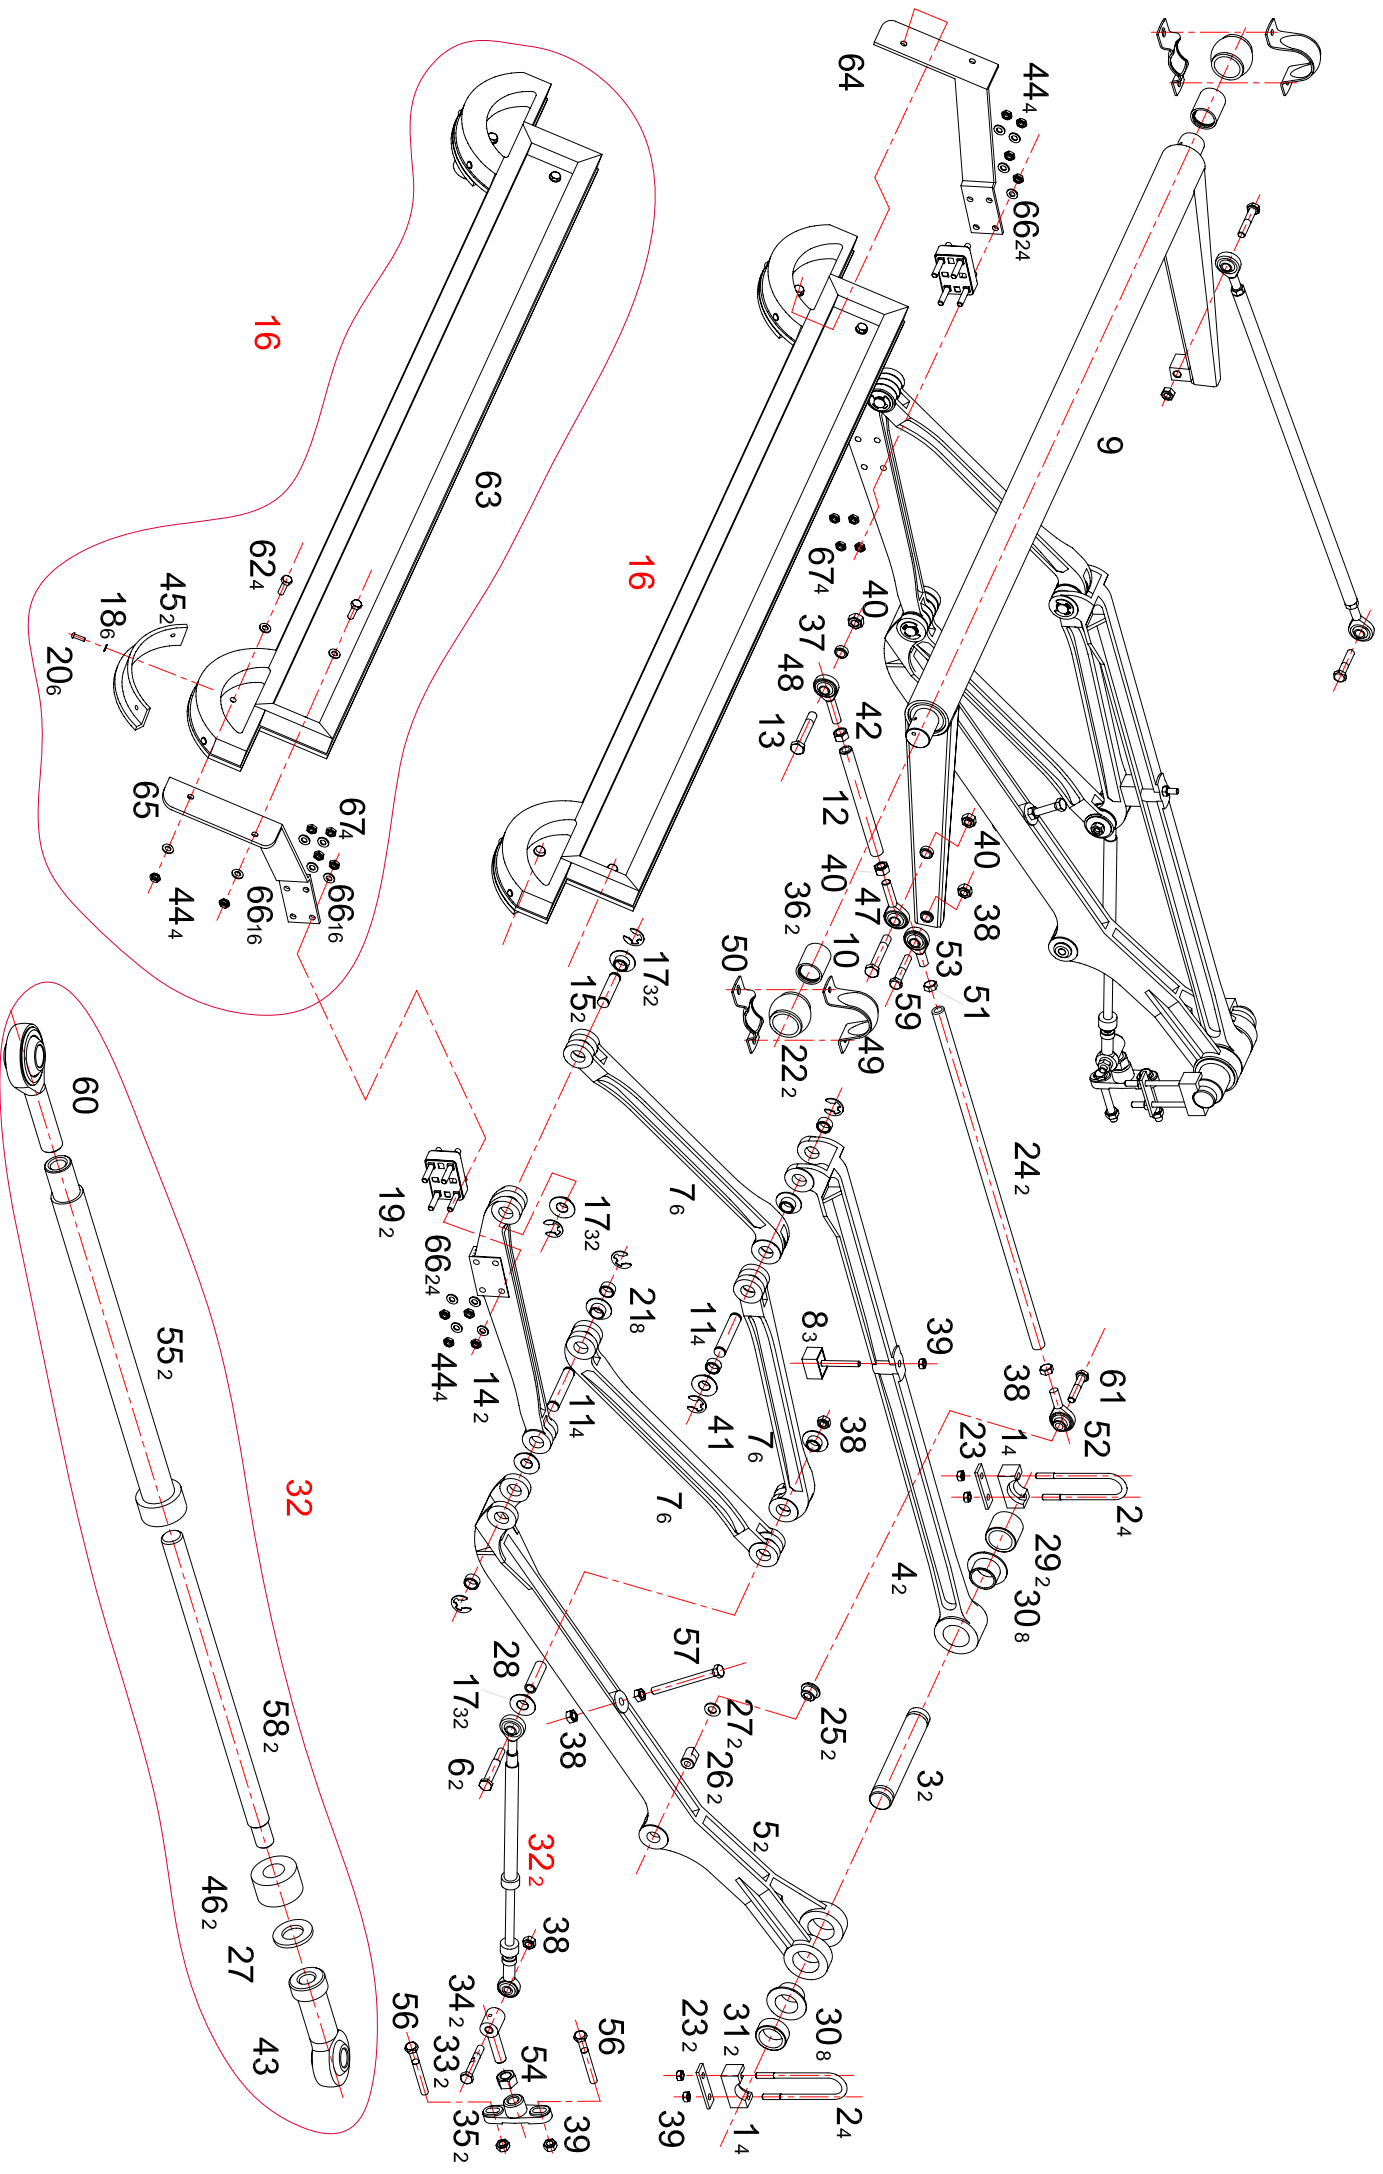


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 017 01	SADDLE	41	ST1 074 10	SPLIT RETAINING RING Ø16
2	ST1 017 02	"U" BOLT	42	ST1 066 10	NUT M12 L.H.
3	ST1 017 03	SHAFT MAIN PIVOT	43	ST1 017 43	ROD END BEARING BNF-10
4	ST1 017 04	STABILIZING LINK ASSY (WITH 30 ₂ ,21 ₂)	44	ST1 067 04	LOCK NUT M8
5	ST1 017 05	DRIVE LINK ASSY (WITH 30 ₂ ,21 ₂)	45	ST1 017 45	CAP SWEEP BAR
6	ST1 017 06	SPECIAL BOLT	46	ST1 017 46	BUMPER
7	ST1 017 07	LINK ASSY (WITH 17 ₄)	47	ST1 017 47	ROD END BEARING BNM-12
8	ST1 017 08	BUMPER	48	ST1 017 48	ROD END BEARING L.H BNM 12 L
9	ST1 017 09	SWEEP ROCK ARM WELDMENT	49	ST1 017 49	PILLOW BLOCK CAP
10	ST1 017 10	SPECIAL BOLT M12X70	50	ST1 017 50	PILLOW BLOCK BASE
11	ST1 017 11	PIN BEARING	51	ST1 066 08	NUT M10 L.H.
12	ST1 017 12	TUBE	52	ST1 013 70	ROD END BEARING BNM-10
13	ST1 064 34	HEX CAP SCREW M12X55	53	ST1 017 53	ROD END BEARING L.H BNM 10 L
14	ST1 017 14	SUPPORT LINK ASSY (WITH 17 ₄)	54	ST1 066 11	NUT M16
15	ST1 017 15	PIN BEARING	55	ST1 017 55	TELESCOPING SLEEVE WELDMENT
16	ST1 017 16	SWEEP BAR ASSEMBLY	56	ST1 064 18	HEX CAP SCREW M8X80
17	ST1 017 17	FLANGE BUSHING	57	ST1 065 18	HEX CAP SCREW M10X110
18	ST1 076 03	FLAT WASHER Ø5	58	ST1 017 58	ROD
19	ST1 017 19	SHOCK MOUNT	59	ST1 064 23	HEX CAP SCREW M10X55
20	ST1 072 04	RIVET 5X16	60	ST1 013 70	ROD END BEARING BNM-10
21	ST1 017 21	SLEEVE BUSHING	61	ST1 064 22	HEX CAP SCREW M10X50
22	ST1 017 22	PILLOW BLOCK ASSY (WITH 36)	62	ST1 064 09	HEX CAP SCREW M8X25
23	ST1 017 23	CLAMP BAR	63	ST1 017 63	SWEEP BAR
24	ST1 017 24	TUBE	64	ST1 017 64	SWEEP BRACKET L.H.
25	ST1 017 25	FLANGE BUSHING	65	ST1 017 65	SWEEP BRACKET R.H.
26	ST1 017 26	FLANGE BUSHING	66	ST1 076 04	FLAT WASHER Ø8
27	ST1 076 07	FLAT WASHER Ø12	67	ST1 066 15	ACORN NUT M8
28	ST1 076 06	FLAT WASHER Ø10			
29	ST1 017 29	SPACER, MAIN PIVOT-LONG			
30	ST1 017 30	FLANGE BUSHING			
31	ST1 017 31	SPACER, MAIN PIVOT-SHORT			
32	ST1 017 32	TELESCOPING LINK ASSEMBLY			
33	ST1 064 24	HEX CAP SCREW M10X60			
34	ST1 017 34	THREADED LINK			
35	ST1 017 35	SHOCK MOUNT BRACKET			
36	ST1 017 36	BRASS SLEEVE			
37	ST1 017 37	BUSHING			
38	ST1 066 07	NUT M10			
39	ST1 066 06	NUT M8			
40	ST1 066 09	NUT M12			

This diagram is an exploded view of a mechanical assembly, likely a vehicle's rear suspension or steering component. It shows various parts such as springs, dampers, and structural beams, each labeled with a number. Red dashed lines indicate the assembly sequence and alignment of the components. The parts are arranged in a way that shows their relative positions and how they fit together. Key components include a central beam (27), multiple springs (e.g., 31, 313, 43, 49), dampers (e.g., 30, 45), and various mounting brackets and bolts (e.g., 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 28, 29, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 8



YOKE AND SPOTTING CUP ASSEMBLY ST1 019 00

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 019 01	STUD-SPRING	27	ST1 019 27	SHAFT #3
2	ST1 019 02	SPRING	28	ST1 019 28	LEVER OUTER
3	ST1 019 03	SPOTTING CUP	29	ST1 019 29	SHAFT #2
4	ST1 019 04	SPOTTING CUP LINER	30	ST1 019 30	SPRING COLLAR
5	ST1 019 05	YOKE ASSY (WITH 18 ₈)	31	ST1 019 31	SPRING SLEEVE YOKE
6	ST1 019 06	SPRING L.H.	32	ST1 019 32	SPACER
7	ST1 019 07	ACTUATOR ARM	33	ST1 019 33	SPHERICAL BUSHING
8	ST1 019 08	SHAFT #1	34	ST1 019 34	RUBBER WASHER
9	ST1 013 50	SPECIAL KEY 25X5X5	35	ST1 065 15	HEX CAP SCREW M10X35
10	ST1 019 10	COLLAR WITH SET SCREW	36	ST1 064 20	HEX CAP SCREW M10X40
11	ST1 019 11	LEG ASSY (WITH 18 ₂ ,33,48 ₂)	37	ST1 064 24	HEX CAP SCREW M10X60
12	ST1 019 12	SPACER	38	ST1 066 06	NUT M8
13	ST1 019 13	SPECIAL BOLT M16X70	39	ST1 066 07	NUT M10
14	ST1 019 14	SPOTTING CUP CAP	40	ST1 067 08	LOCK NUT M16
15	ST1 019 15	"U" BOLT	41	ST1 067 03	LOCK NUT M6
16	ST1 019 16	LEVER INNER	42	ST1 067 04	LOCK NUT M8
17	ST1 019 17	LEG REAR ASSY (WITH 20 ₂ ,33,48 ₂)	43	ST1 067 05	LOCK NUT M10
18	ST1 019 18	BEARING R14ZZ	44	ST1 070 04	SOCKET SET SCREW M6X30
19	ST1 019 19	PIN	45	ST1 070 11	SOCKET SET SCREW M8X25
20	ST1 019 20	FLANGE BUSHING	46	ST1 070 07	SOCKET SET SCREW M8X10
21	ST1 019 21	SPRING R.H.	47	ST1 073 11	ROLL PIN Ø5X40
22	ST1 019 22	SPECIAL BOLT M6X33	48	ST1 074 07	RETAINING RING Ø40
23	ST1 019 23	THRUST WASHER Ø8	49	ST1 076 06	FLAT WASHER Ø10
24	ST1 019 24	LINK ASSY (WITH 25 ₄)	50	ST1 076 04	FLAT WASHER Ø8
25	ST1 019 25	FLANGE BUSHING			
26	ST1 019 26	SHAFT #4			

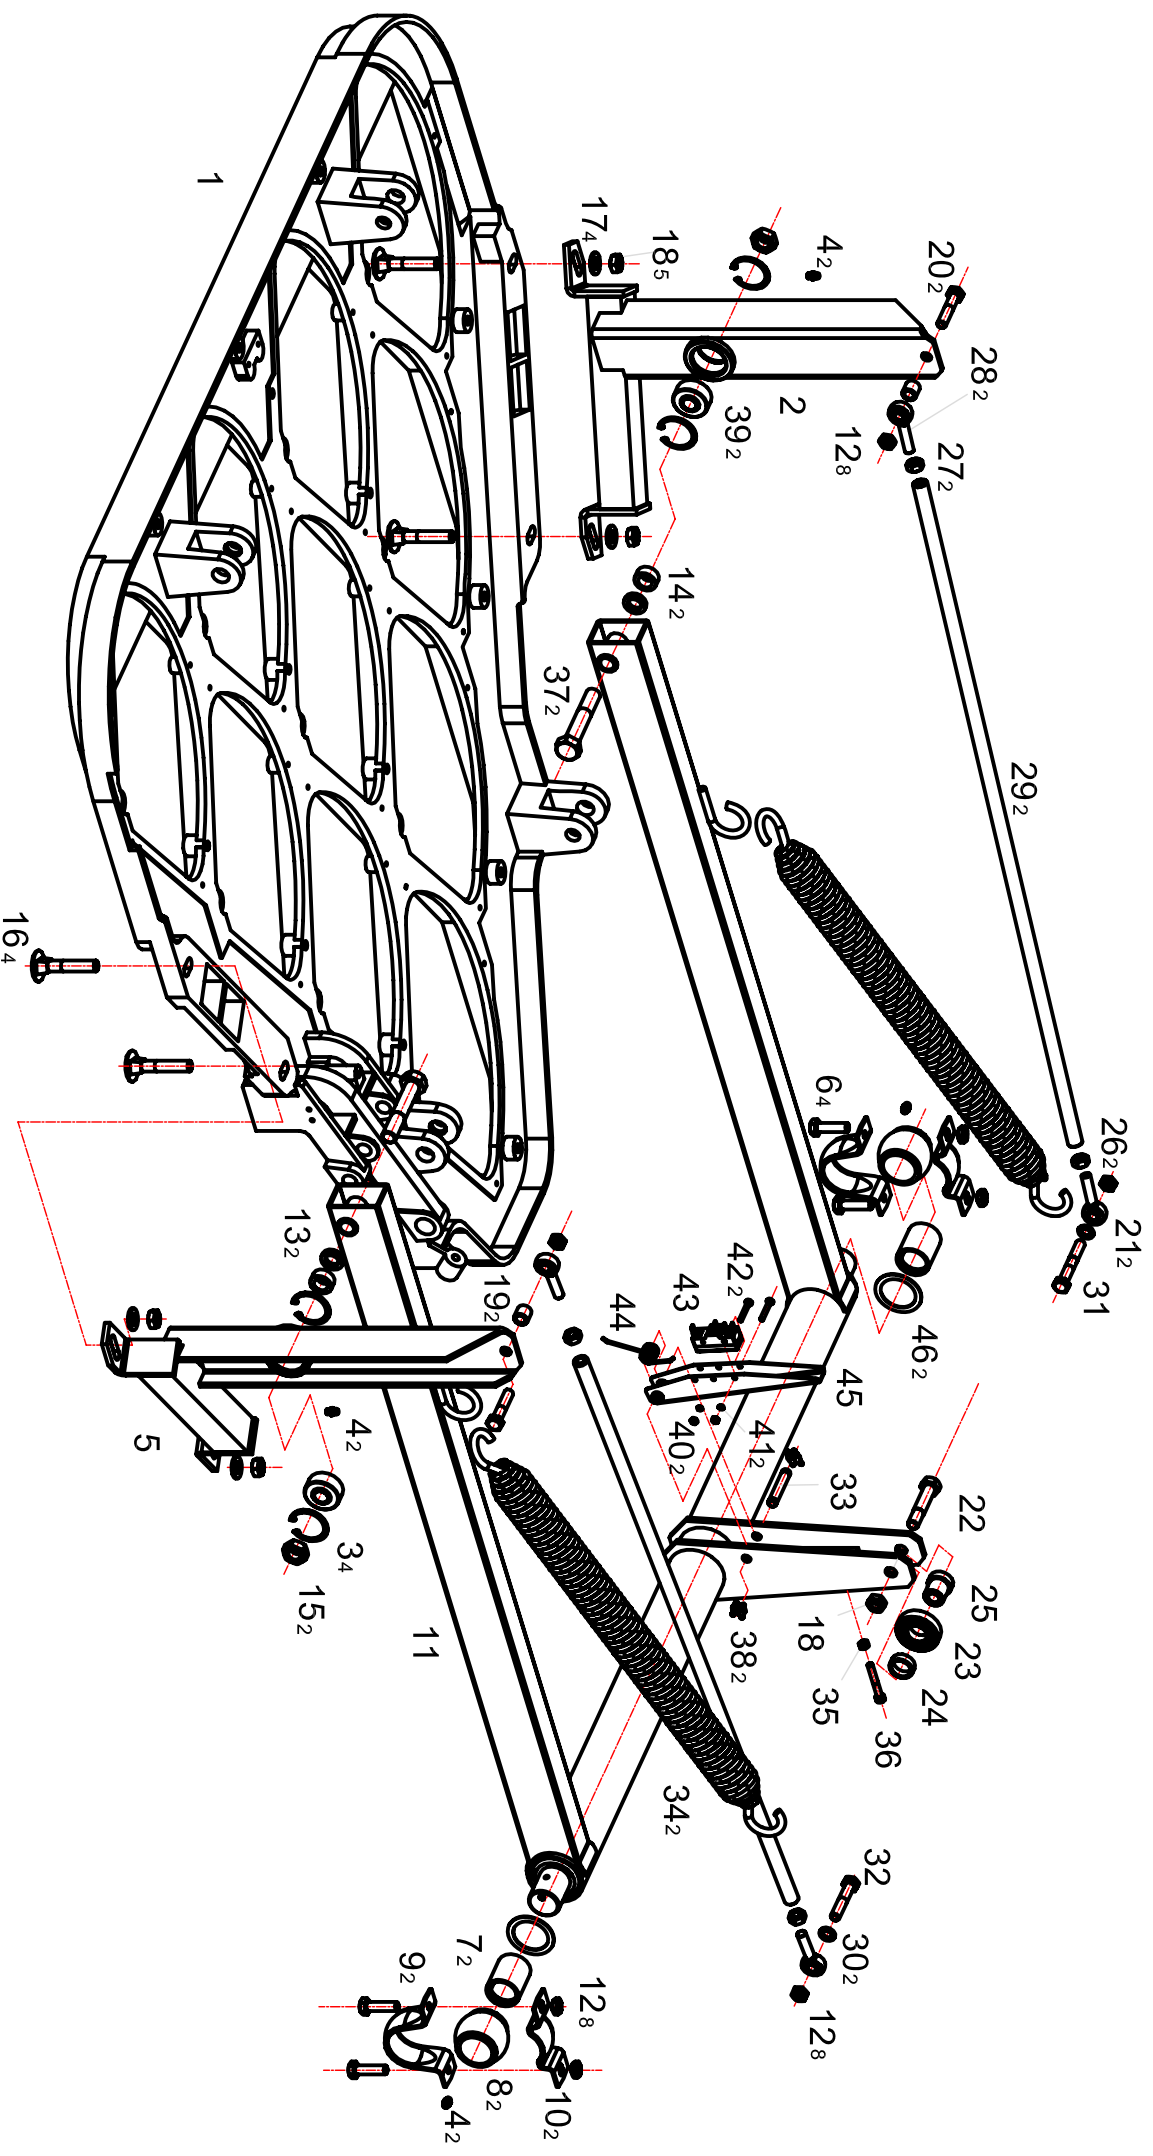

SPOT & RESPOT CONTROL ASSEMBLY ST1 021 00

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 021 01	TABLE CASTING	27	ST1 066 07	NUT M10
2	ST1 021 02	TABLE SUPPORT WELDMENT	28	ST1 013 70	ROD END BEARING BNM-10
3	ST1 074 07	RETAINING RING Ø40	29	ST1 021 29	TIE ROD
4	ST1 061 01	GREASE FITTING M6	30	ST1 076 06	FLAT WASHER Ø10
5	ST1 021 05	TABLE SUPPORT WELDMENT L.H.	31	ST1 064 25	HEX CAP SCREW M10X70
6	ST1 065 15	HEX CAP SCREW M10X35	32	ST1 064 23	HEX CAP SCREW M10X55
7	ST1 017 36	BRASS SLEEVE	33	ST1 021 33	PIN
8	ST1 017 22	PILLOW BLOCK	34	ST1 021 34	SPRING
9	ST1 017 49	PILLOW BLOCK BASE	35	ST1 066 04	NUT M6
10	ST1 017 50	PILLOW BLOCK CAP	36	ST1 070 05	SOCKET SET SCREW M6X45
11	ST1 021 11	TORQUE-TUBE WELDMENT	37	ST1 021 37	SPECIAL BOLT M16X100
12	ST1 067 05	LOCK NUT M10	38	ST1 021 38	X WASHER
13	ST1 021 13	SPACER	39	ST1 021 39	BEARING SPHERIAL
14	ST1 021 14	SPACER	40	ST1 066 01	NUT M4
15	ST1 067 08	LOCK NUT M16	41	ST1 075 01	SPRING WASHER Ø4
16	ST1 064 28	CARRIAGE BOLT M12X60	42	ST1 071 03	PAN HEAD SCREW M4X30
17	ST1 076 07	FLAT WASHER Ø12	43	ST1 013 67	MICRO-SWITCH Z-15GD-B
18	ST1 067 06	LOCKNUT M12	44	ST1 021 44	SPRING
19	ST1 021 19	SPACER	45	ST1 021 45	LEVER
20	ST1 064 22	HEX CAP SCREW M10X50	46	ST1 021 46	WASHER Ø32
21	ST1 017 53	ROD END BEARING L.H BNM-10 L			
22	ST1 021 22	SPECIAL BOLT M12X63			
23	ST1 019 18	BEARING R14ZZ			
24	ST1 021 24	SLEEVE			
25	ST1 021 25	FLANGE BUSHING			
26	ST1 066 08	NUT M10 L.H.			

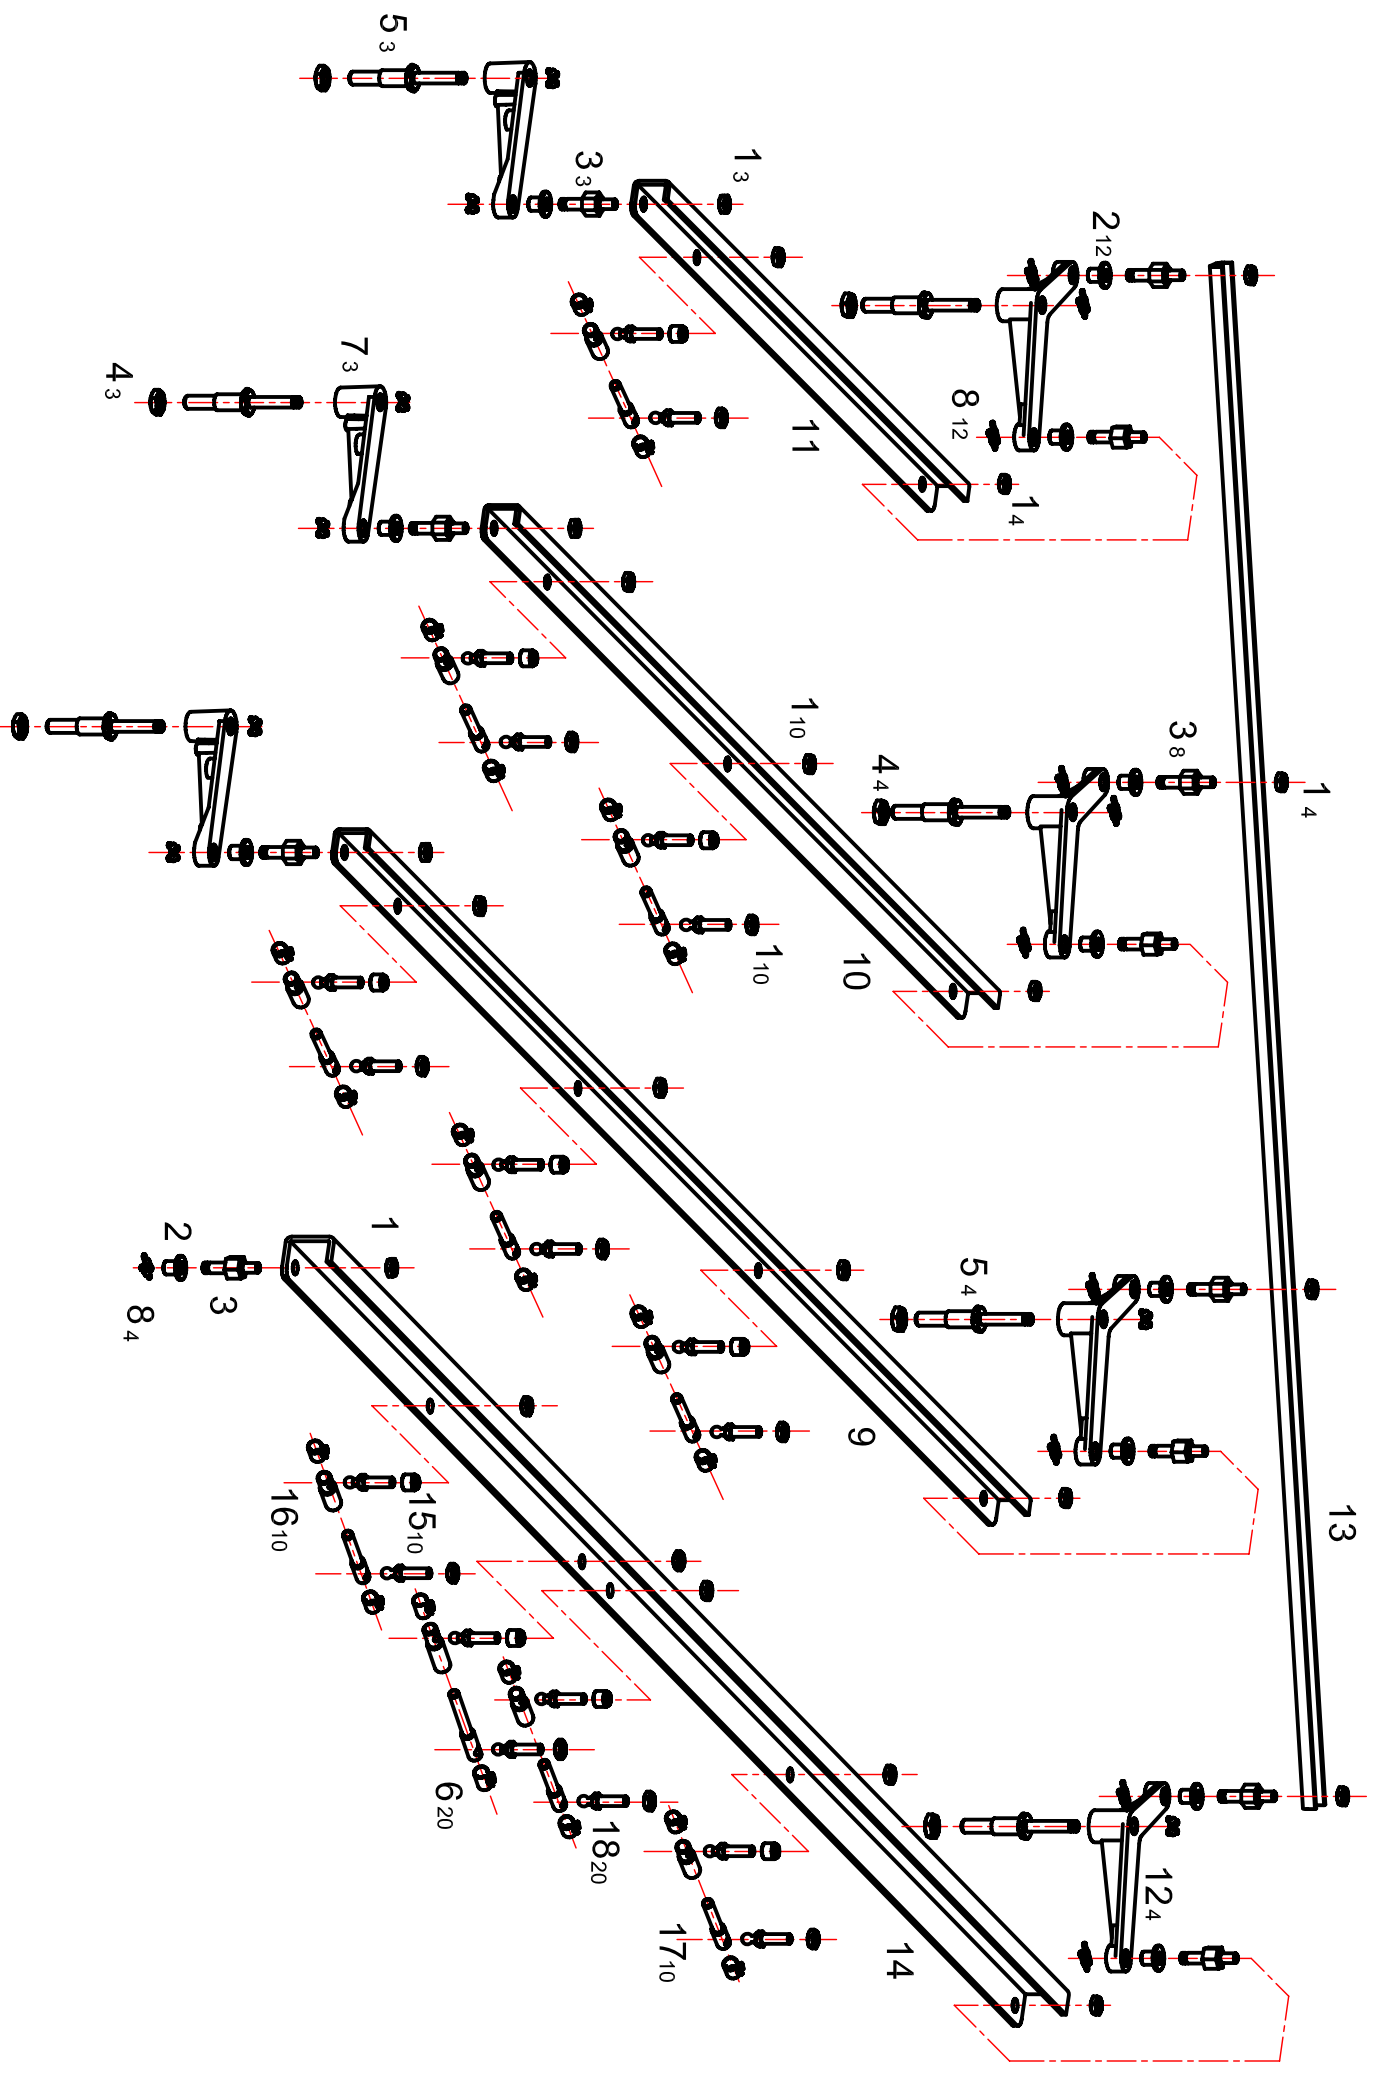




TABLE WIREWAY ASSEMBLY ST1 023 00

ITEM	PART NO.	DESCRIPTION
1	ST1 067 03	LOCK NUT M6
2	ST1 023 02	FLANGE BUSHING
3	ST1 023 03	PIN
4	ST1 067 04	LOCK NUT M8
5	ST1 023 05	PIN
6	ST1 023 06	CLIP
7	ST1 023 07	LEVER RESPOT ASSY (WITH 2 ₂)
8	ST1 007 22	X WASHER
9	ST1 023 09	LINK
10	ST1 023 10	LINK
11	ST1 023 11	LINK
12	ST1 023 12	LEVER RESPOT ASSY (WITH 2 ₃)
13	ST1 023 13	LINK RESPOT CONNECTOR
14	ST1 023 14	LINK
15	ST1 023 15	SPACER BUSHING
16	ST1 023 16	PIN
17	ST1 023 17	LINK
18	ST1 023 18	BALL STUD


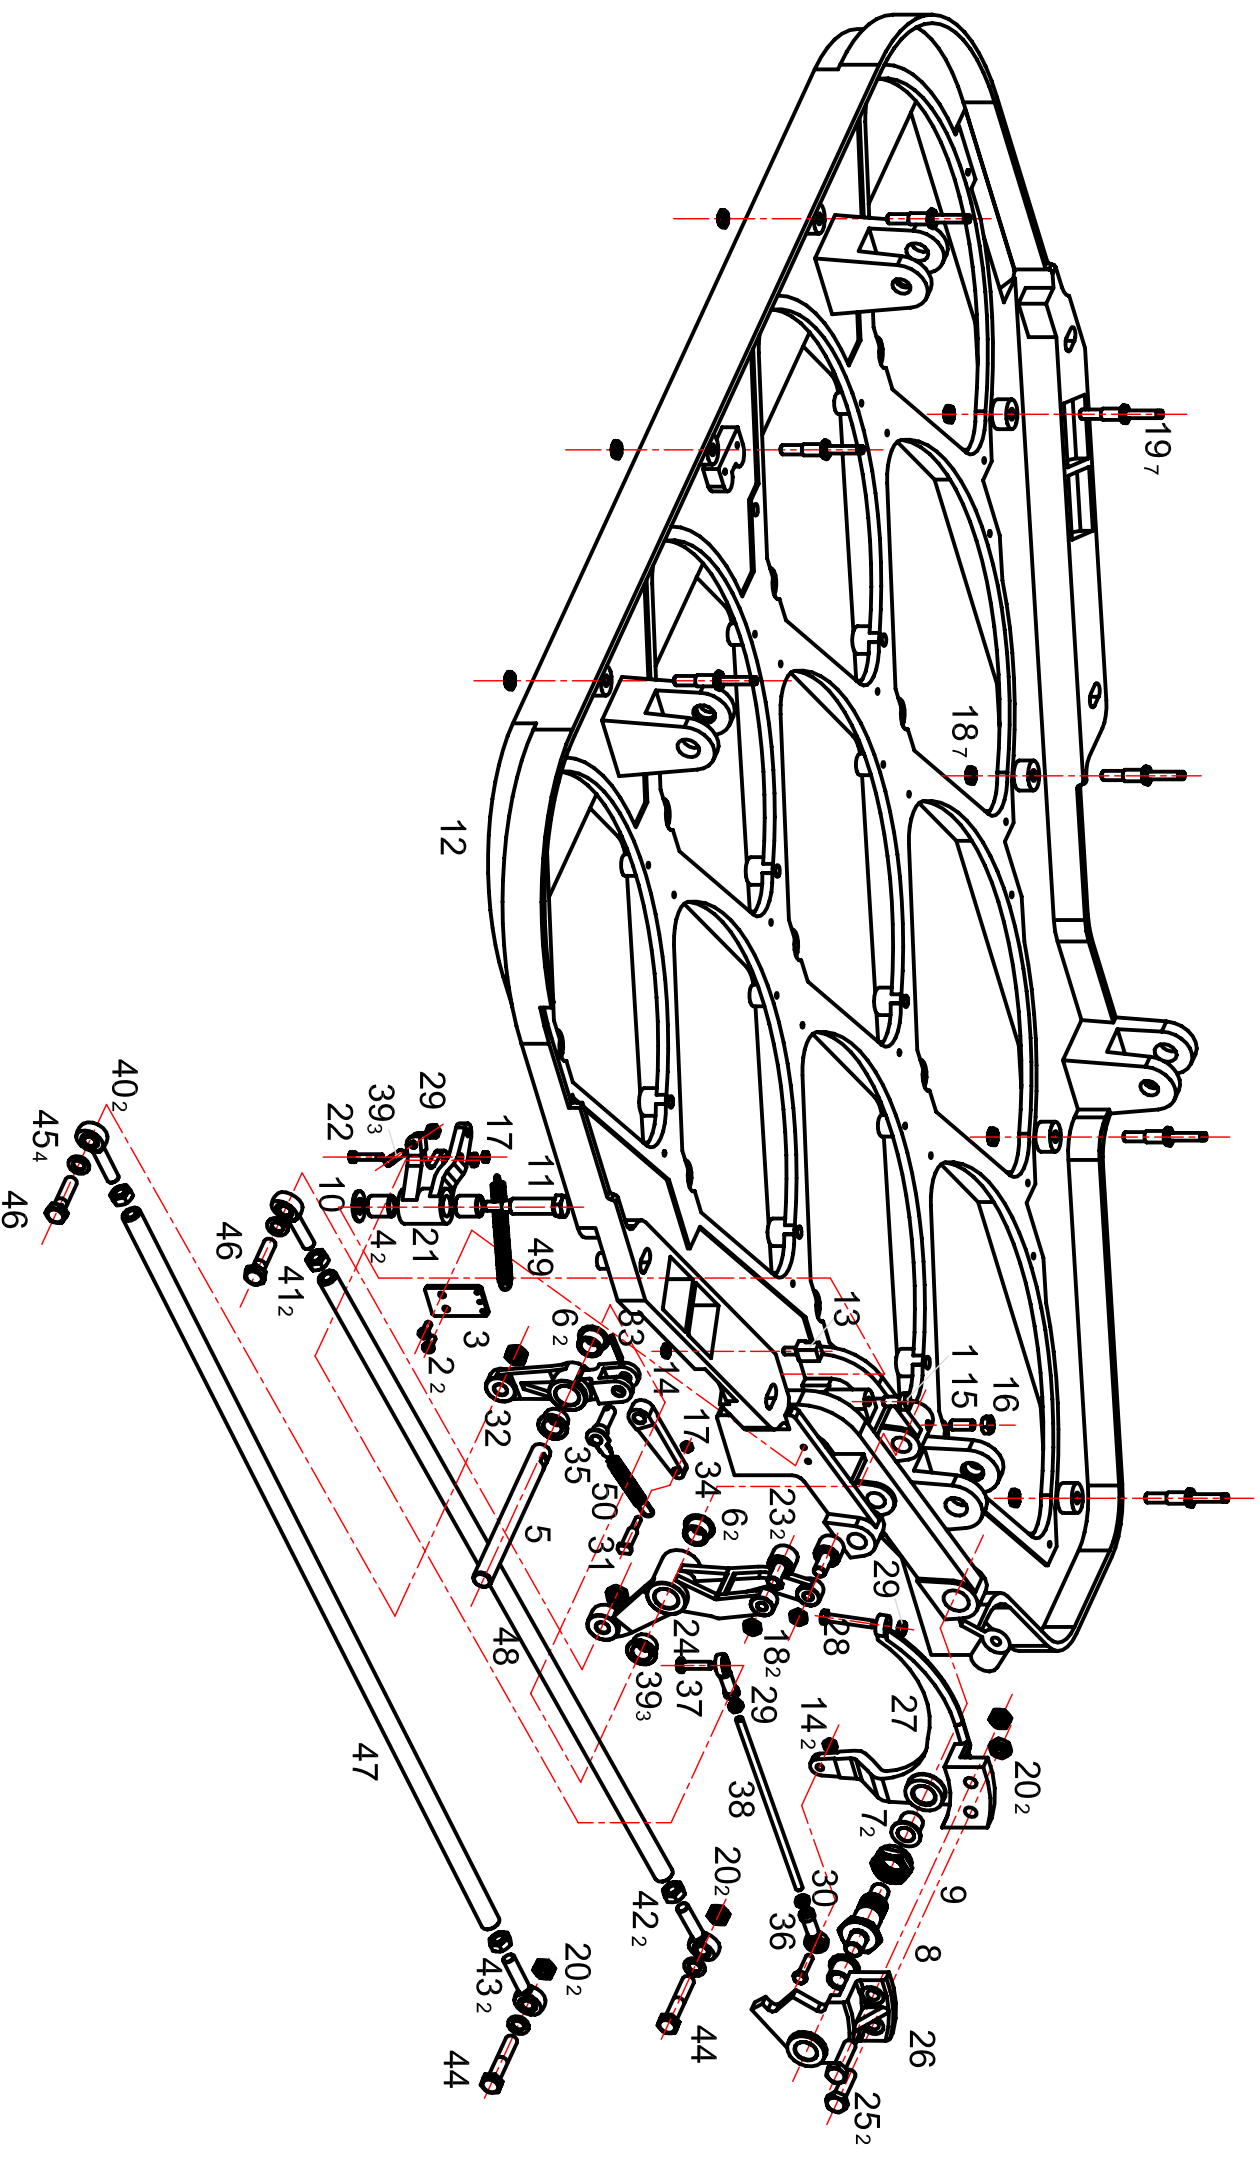




TABLE ASSEMBLY ST1 025 00

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 065 08	HEX CAP SCREW M8X16	27	ST1 025 27	CAM LINK BEARING ASSY (WITH 7)
2	ST1 071 05	PAN HEAD SCREW M5X12	28	ST1 080 21	SQUARE BOLT M6X40
3	ST1 025 03	BRACKET	29	ST1 066 04	NUT M6
4	ST1 025 04	SLEEVE BUSHING	30	ST1 066 05	NUT M6 L.H.
5	ST1 025 05	SHAFT	31	ST1 025 31	PIN
6	ST1 019 20	BUSHING	32	ST1 025 32	FINGER LEVER ASSY (WITH 6 ₂)
7	ST1 025 07	BUSHING	33	ST1 073 04	ROLL PIN Ø3X24
8	ST1 025 08	SHAFT	34	ST1 025 34	FINGER LINK
9	ST1 025 09	SPECIAL NUT M22	35	ST1 025 35	PIVOT WELDMENT
10	ST1 025 10	SLEEVE BUSHING	36	ST1 025 36	ROD END BEARING L.H. BNF-6L
11	ST1 025 11	SPECIAL BOLT M8X61	37	ST1 025 37	ROD END BEARING BNF-6
12	ST1 021 01	TABLE CASTING	38	ST1 025 38	LINK
13	ST1 025 13	STOP, RESPOT	39	ST1 065 06	HEX CAP SCREW M6X25
14	ST1 067 03	LOCK NUT M6	40	ST1 013 70	ROD END BEARING BNM-10
15	ST1 070 10	SOCKET SET SCREW M8X20	41	ST1 066 07	NUT M10
16	ST1 066 06	NUT M8	42	ST1 066 08	NUT M10 L.H.
17	ST1 067 02	LOCK NUT M5	43	ST1 017 53	ROD END BEARING L.H. BNM 10 L
18	ST1 067 04	LOCK NUT M8	44	ST1 064 23	HEX CAP SCREW M10X55
19	ST1 023 05	PIN	45	ST1 076 06	FLAT WASHER Ø10
20	ST1 067 05	LOCK NUT M10	46	ST1 064 20	HEX CAP SCREW M10X40
21	ST1 025 21	ACTUATING LINK ASSY (WITH 4 ₂)	47	ST1 025 47	TIE ROD
22	ST1 025 22	SPECIAL BOLT M5X25	48	ST1 025 48	TIE ROD
23	ST1 025 23	CAM FOLLOWER CF 8	49	ST1 025 49	SPRING
24	ST1 025 24	LEVER ASSEMBLY SPOT (WITH 6 ₂)	50	ST1 025 50	SPRING
25	ST1 065 16	HEX CAP SCREW M10X40			
26	ST1 025 26	LINK AND BEARING ASSEMBLY (WITH 7)			


CELL ASSEMBLY(-RESPOT) ST1 027 00

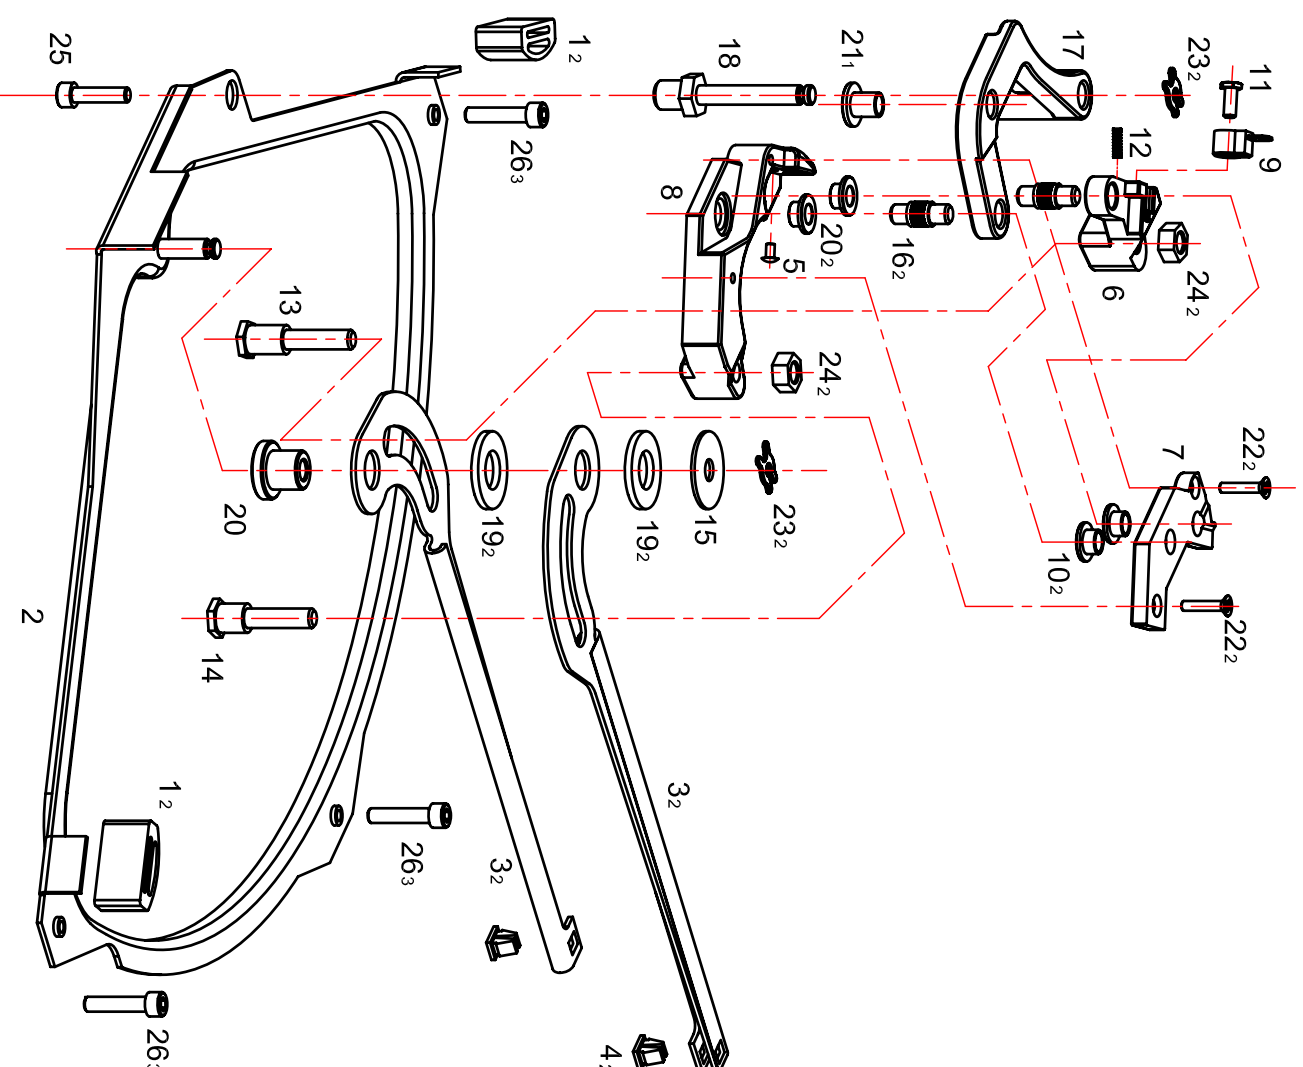


ITEM	PART NO.	DESCRIPTION
1	ST1 027 01	BUMPER
2	ST1 027 02	RESPOT CELL FRAME WELDMENT
3	ST1 027 03	FINGER
4	ST1 027 04	INSERT
5	ST1 027 05	RIVET
6	ST1 027 06	ARM RESPOT YOKE(WITH 9,11,16)
7	ST1 027 07	PLATE ASSY(WITH 10 ₂)
8	ST1 027 08	YOKE,ARM ASSY(WITH 10 ₂)
9	ST1 027 09	INSERT ASSEMBLY
10	ST1 027 10	FLANGE BUSHING
11	ST1 027 11	STOP SCREW M4X12
12	ST1 027 12	SPRING
13	ST1 027 13	STUD-LONG
14	ST1 027 14	STUD-SHORT
15	ST1 027 15	WASHER Ø6
16	ST1 027 16	SHAFT
17	ST1 027 17	LEVER RESPOT(WITH 16,21)
18	ST1 027 18	STUD-PIVOT
19	ST1 027 19	SPACER
20	ST1 027 20	BUSHING
21	ST1 023 02	FLANGE BUSHING
22	ST1 080 05	COUNTERSUNK HEAD SCREW M3X16
23	ST1 007 22	X WASHER
24	ST1 067 03	LOCK NUT M6
25	ST1 069 03	SOCKET HEAD CAP SCREW M5X16
26	ST1 069 01	SOCKET HEAD CAP SCREW M5X10

DISTRIBUTOR ASSEMBLY ST1 028 00


ITEM	PART NO.	DESCRIPTION
1	ST1 028 01	MAIN SUPPORT ASSEMBLY
2	ST1 028 02	TUBE ASSEMBLY
3	ST1 028 03	SUPPORT ASSEMBLY
4	ST1 028 04	TRIP STOP SUPPORT ASSY
5	ST1 028 05	TRANSMISSION ASSEMBLY
6	ST1 028 06	SPECIAL NUT M5X7
7	ST1 080 01	BELT DISTRIBUTOR
8	ST1 080 10	COUNTERSUNK HEAD SCREW M6X16
9	ST1 028 09	CONNECTING PINS

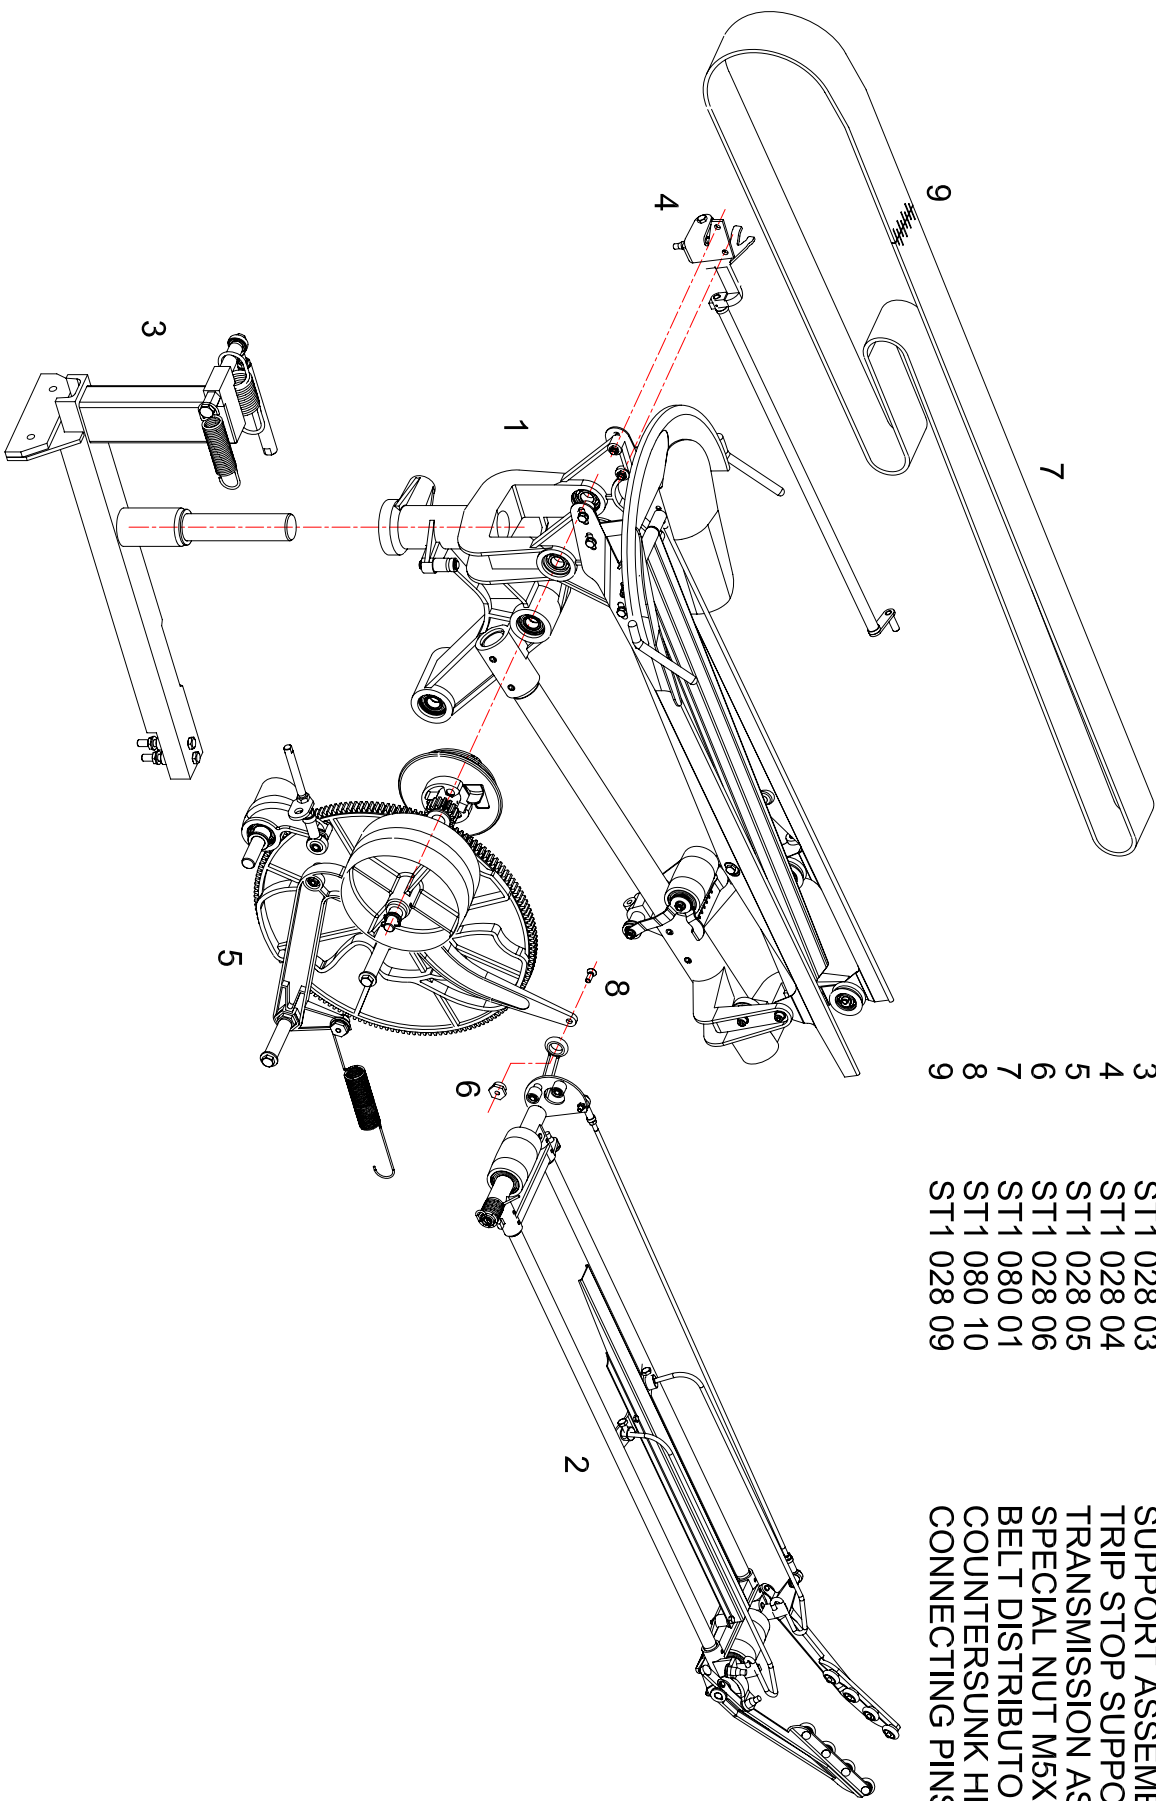

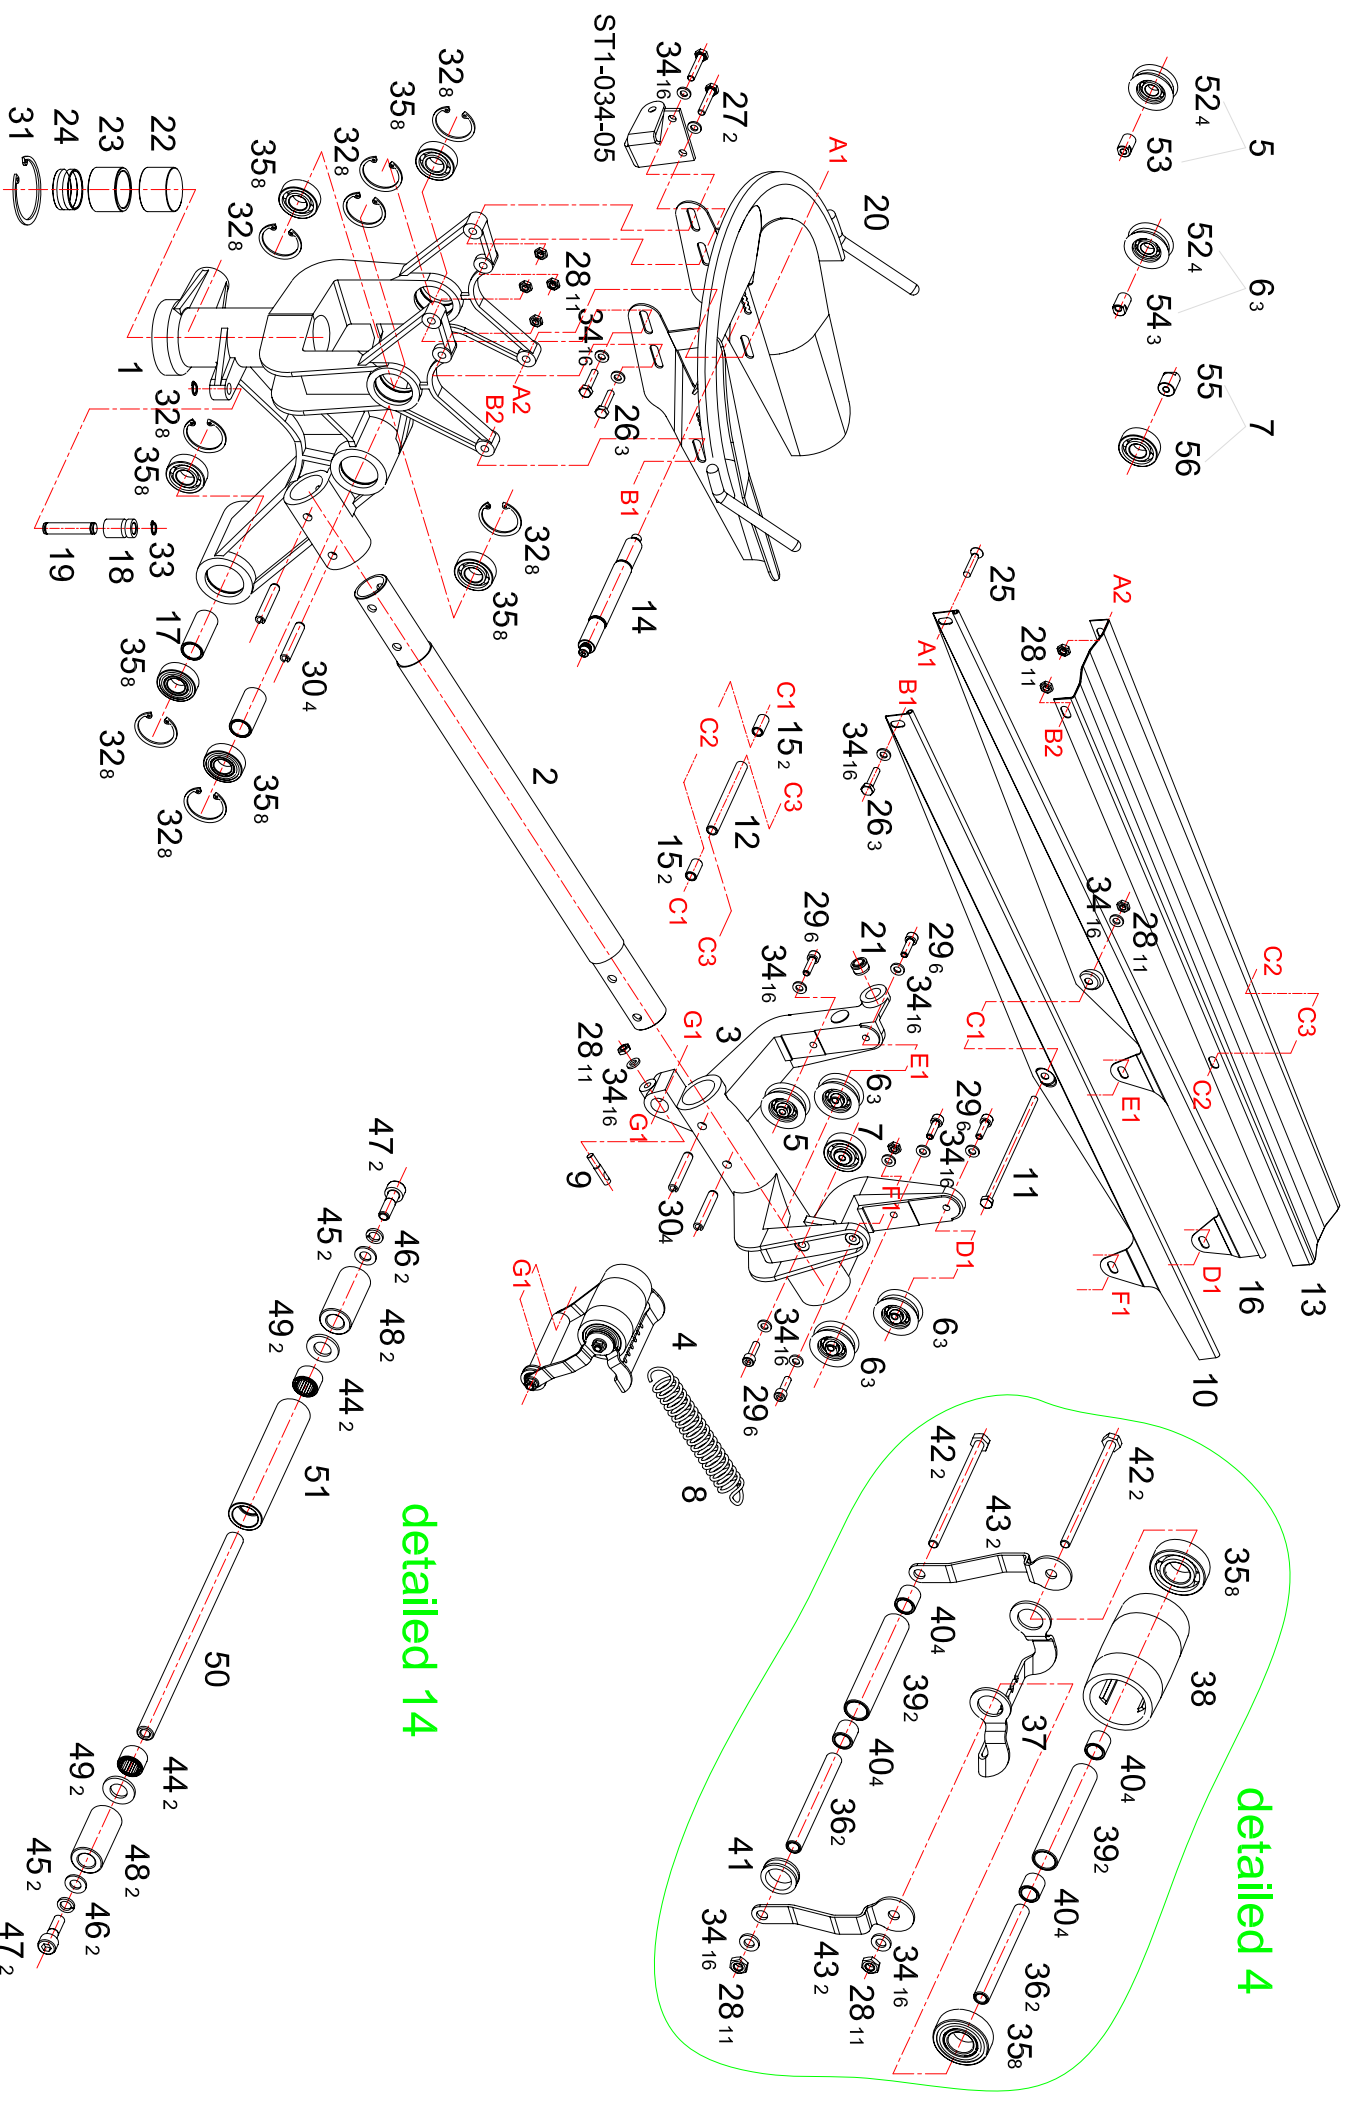

DISTRIBUTOR SUPPORT ASSEMBLY ST1 028 01


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 029 01	MAIN CASTING	31	ST1 074 09	RETAINING RING Ø55
2	ST1 029 02	CARRIAGE SUPPORT TUBE	32	ST1 074 06	RETAINING RING Ø35
3	ST1 029 03	CARRIAGE SUPPORT CASTING	33	ST1 074 02	RETAINING RING Ø9
4	ST1 029 04	BELT TIGHT ASSEMBLY	34	ST1 076 03	FLAT WASHER Ø6
5	ST1 029 05	PULLEY ASSEMBLY	35	ST1 029 35	BEARING 9502H
6	ST1 029 06	PARTIALITY PULLEY ASSEMBLY	36	ST1 013 28	SPACER-ROLLER
7	ST1 029 07	PULLEY ASSEMBLY	37	ST1 029 37	TRACKING BRACKET
8	ST1 029 08	SPRING	38	ST1 029 38	PULLEY ASSY (WITH 35 ₂)
9	ST1 029 09	CLAMP STUD	39	ST1 029 39	TUBE-BELT TIGHTENER
10	ST1 029 10	SUPPORT GUIDE L.H.	40	ST1 029 40	SLEEVE BUSHING
11	ST1 029 11	HEX HEAD CAP SCREW M6X140	41	ST1 029 41	SPRING POST SLEEVE
12	ST1 029 12	SPACER INNER	42	ST1 029 42	SPECIAL BOLT M6X100
13	ST1 029 13	BELT RUNNER REAR	43	ST1 029 43	LINK
14	ST1 029 14	ROLLER ASSEMBLY	44	ST1 029 44	BEARING
15	ST1 029 15	SPACER OUTER	45	ST1 076 02	FLAT WASHER Ø5
16	ST1 029 16	SUPPORT GUIDE R.H.	46	ST1 075 02	SPRING WASHER Ø5
17	ST1 029 17	SPACER BEARING	47	ST1 069 03	SOCKET HEAD CAP SCREW M5X16
18	ST1 029 18	SPRING POST SLEEVE	48	ST1 029 48	SLEEVE
19	ST1 029 19	SPRING POST PIN	49	ST1 029 49	SPECIAL WASHER
20	ST1 029 20	ORIENTOR PAN WELDMENT	50	ST1 029 50	SHAFT
21	ST1 029 21	SPYRALIGN BEARING Ø8	51	ST1 029 51	WHEEL SLEEVE
22	ST1 029 22	BEARING	52	ST1 029 52	V STYLE PULLEY
23	ST1 029 23	BEARING BA 200016	53	ST1 029 53	PIN
24	ST1 029 24	THRUST BEARING Ø32	54	ST1 029 54	PARTIALITY PIN
25	ST1 062 04	FLAT SOCKET CAP SCREW M6X30	55	ST1 029 55	PIN
26	ST1 065 06	HEX CAP SCREW M6X25	56	ST1 063 06	BEARING 80202
27	ST1 065 07	HEX CAP SCREW M6X30			
28	ST1 067 03	LOCK NUT M6			
29	ST1 069 06	SOCKET HEAD CAP SCREW M6X20			
30	ST1 073 12	ROLL PIN Ø8X45			

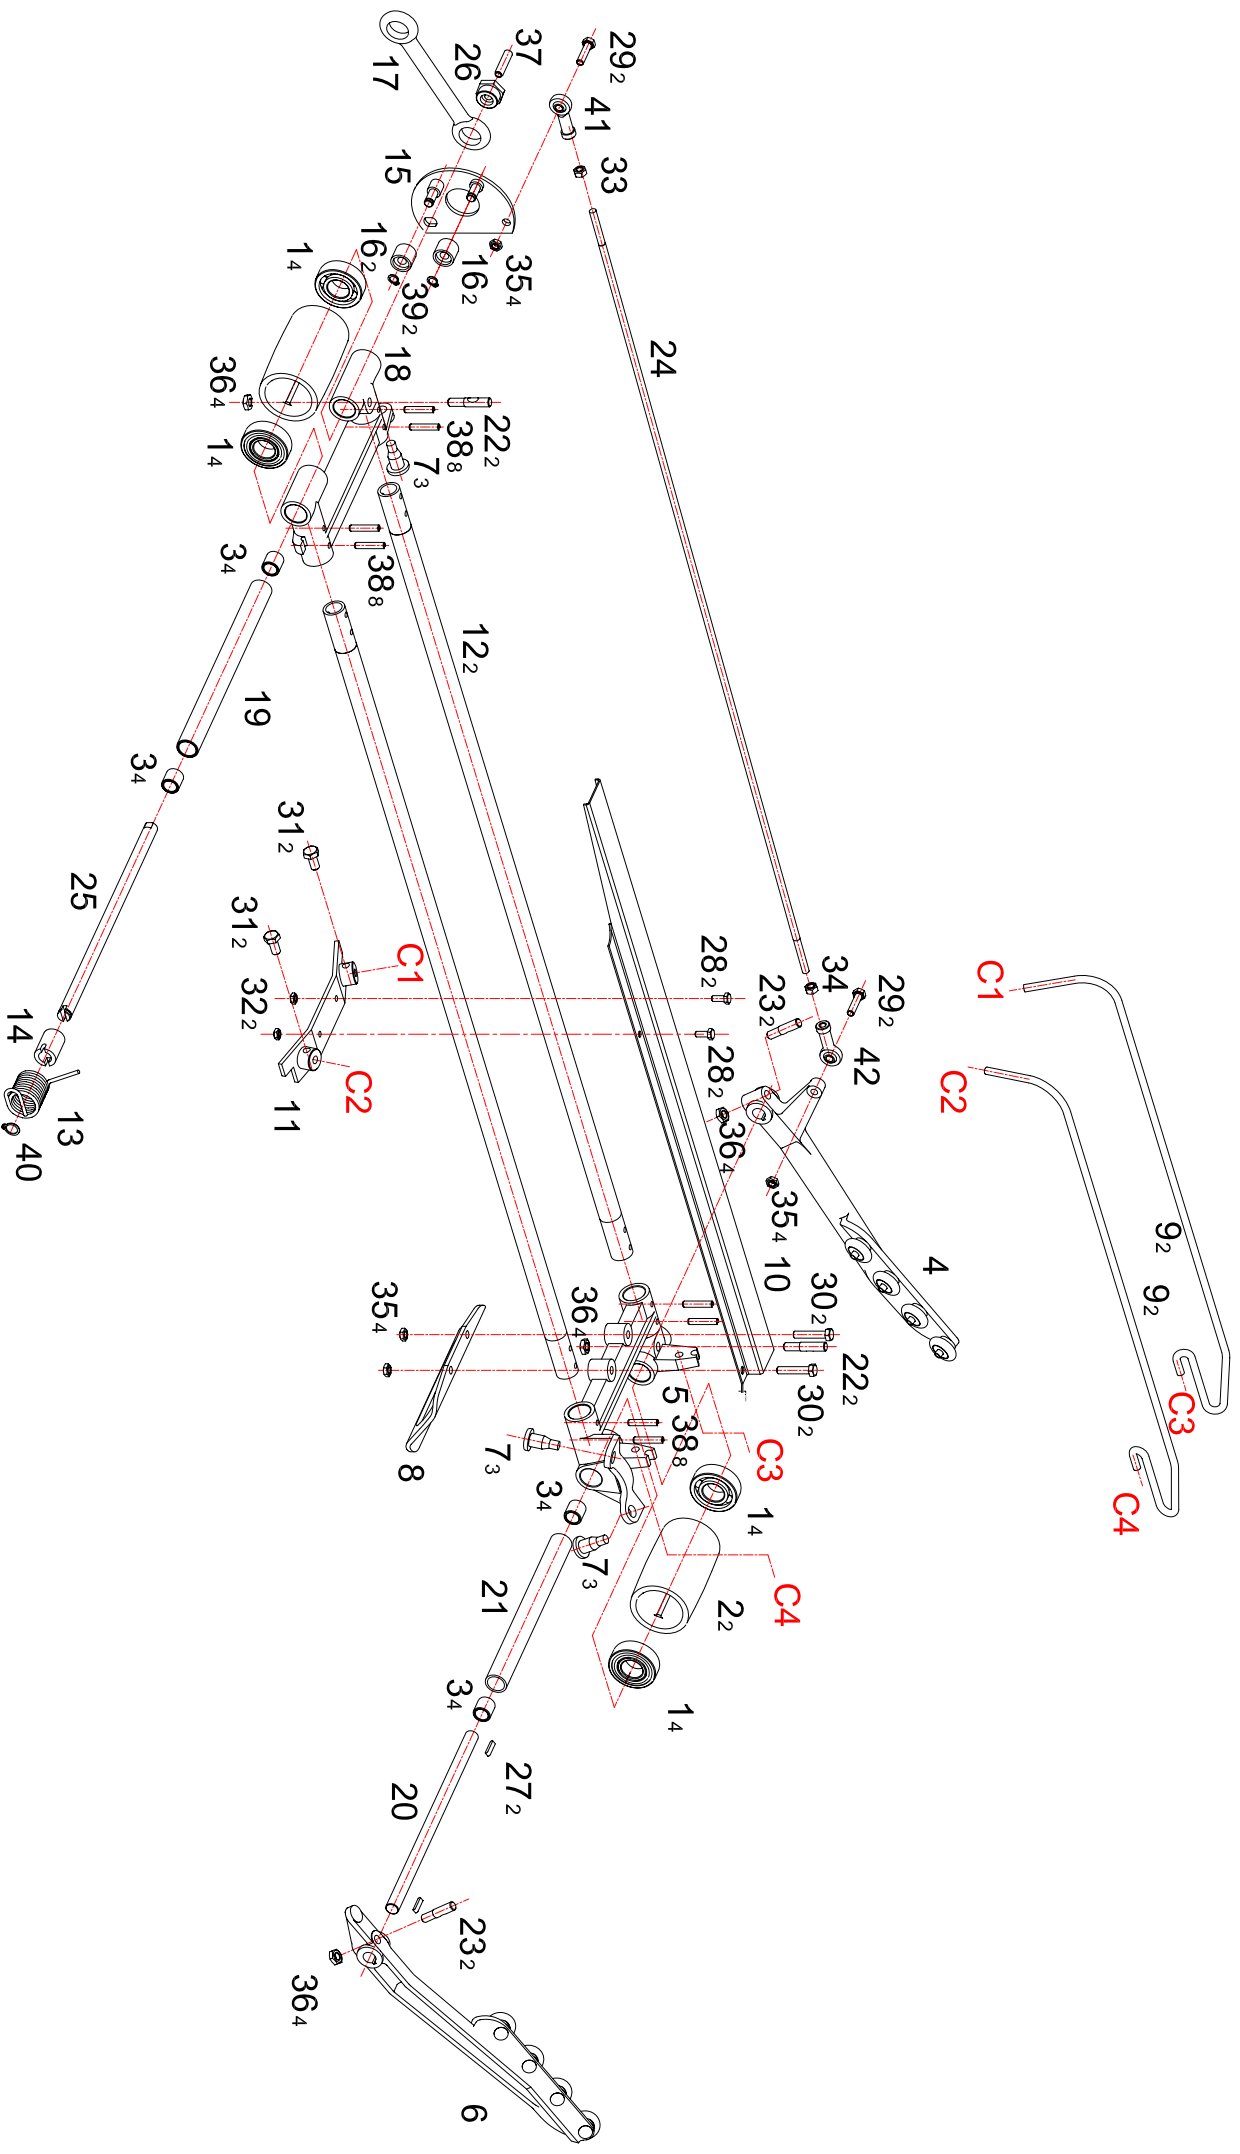


TUBE ASSEMBLY ST1 028 02


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 029 35	BEARING 9502H	26	ST1 028 06	SPECIAL NUT M5X7
2	ST1 029 38	PULLEY	27	ST1 031 27	KEY 14X2X3
3	ST1 029 40	SLEEVE BUSHING	28	ST1 065 01	HEX CAP SCREW M4X10
4	ST1 031 04	TRIP ARM ASSEMBLY R.H.	29	ST1 065 02	HEX CAP SCREW M5X25
5	ST1 031 05	FRONT CARRIAGE	30	ST1 069 11	SOCKET SET HEAD M5X25
6	ST1 031 06	TRIP ARM ASSEMBLY L.H.	31	ST1 065 03	HEX CAP SCREW M6X12
7	ST1 009 27	RUBBER BUMPER	32	ST1 066 01	NUT M4
8	ST1 031 08	BELT GUAED	33	ST1 066 02	NUT M5
9	ST1 031 09	PIN GUIDE	34	ST1 066 03	NUT M5 L.H.
10	ST1 031 10	BELT RUNNER SUPPORT	35	ST1 067 02	LOCK NUT M5
11	ST1 031 11	BELT RUNNER BRACKET	36	ST1 067 03	LOCK NUT M6
12	ST1 031 12	TUBE	37	ST1 070 03	SOCKET SET SCREW M6X20
13	ST1 031 13	SPRING	38	ST1 073 07	ROLL PIN Ø4X24
14	ST1 031 14	COLLAR	39	ST1 074 01	RETAINING RING Ø6
15	ST1 031 15	TRIP ROCKER ARM WELDMENT ASSY (WITH 16 ₂ ,39 ₂)	40	ST1 074 02	RETAINING RING Ø9
16	ST1 031 16	ROLLER	41	ST1 031 41	END FITTING BNF-5
17	ST1 031 17	CONNECTING LINK	42	ST1 031 42	END FITTING L.H. BNF-5L
18	ST1 031 18	REAR CARRIAGE			
19	ST1 031 19	TUBE MIDDLE			
20	ST1 031 20	SHAFT			
21	ST1 031 21	TUBE FRONT			
22	ST1 029 09	CLAMP STUD			
23	ST1 031 23	CLAMP STUD			
24	ST1 031 24	LINK			
25	ST1 031 25	SHAFT			

ITEM	PART NO.	DESCRIPTION
1	ST1 033 01	SAFETY LINK SPRING
2	ST1 033 02	LATERAL DRIVE SPRING
3	ST1 033 03	WASHER
4	ST1 033 04	SAFETY LINK TUBE
5	ST1 033 05	SPACER CLAMP
6	ST1 033 06A	SPRING POST PIN
7	ST1 033 07	SLEEVE
8	ST1 033 08	DISTRIBUTOR MOUNT WELDMENT
9	ST1 033 09	DISTRIBUTOR SUPPORT
10	ST1 033 10	ROD END BEARING
11	ST1 076 04	FLAT WASHER 8
12	ST1 064 16	HEX CAP SCREW M8X70
13	ST1 064 18	HEX CAP SCREW M8X80
14	ST1 066 06	NUT M8
15	ST1 067 04	LOCKNUT M8
16	ST1 070 09	SOCKET SET SCREW M8X12

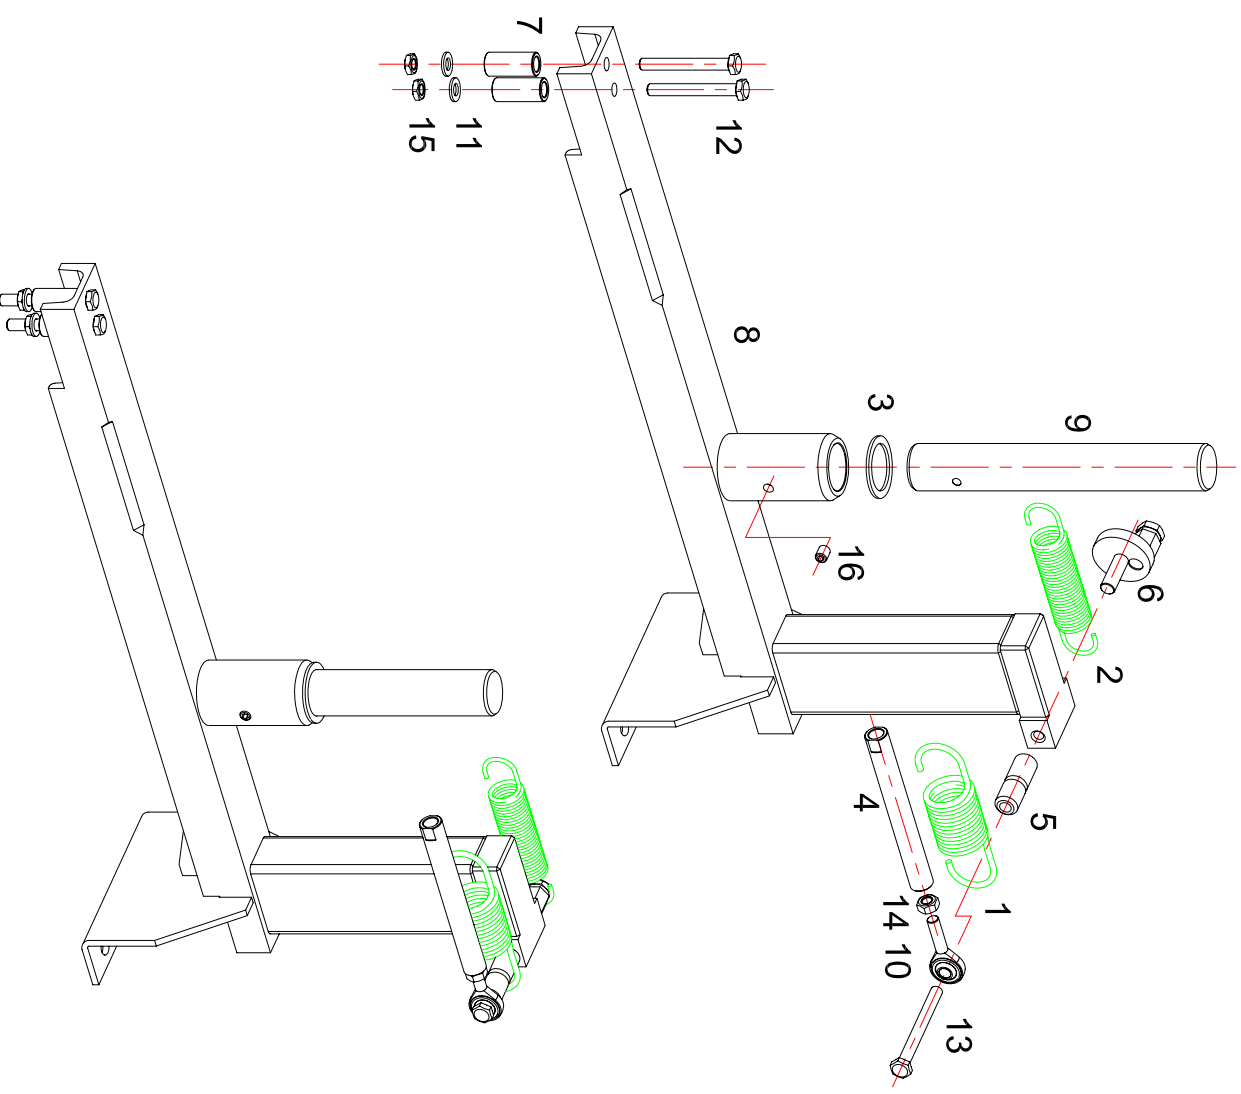


ITEM	PART NO.	DESCRIPTION
1	ST1 034 01	SUPPORT
2	ST1 034 02	TRIP STOP ROD SUPPORT
3	ST1 034 03	STOP BLADE
4	ST1 009 27	RUBBER BUMPER
5	ST1 034 05	TRIP STOP SUPPORT
6	ST1 034 06	WASHER Ø6
7	ST1 034 07	RING Ø6
8	ST1 065 05	HEX CAP SCREW M6X20
9	ST1 034 09	BEARING SPHERIAL
10	ST1 065 07	HEX CAP SCREW M6X30
11	ST1 067 03	LOCK NUT M6
12	ST1 073 01	ROLL PIN Ø2X16

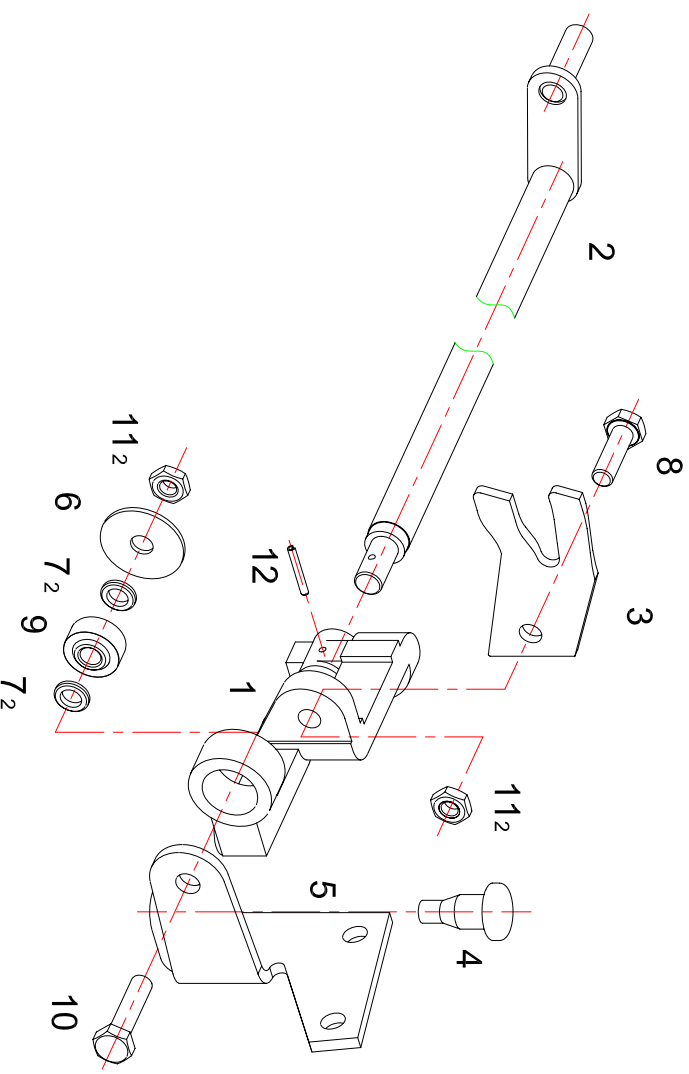

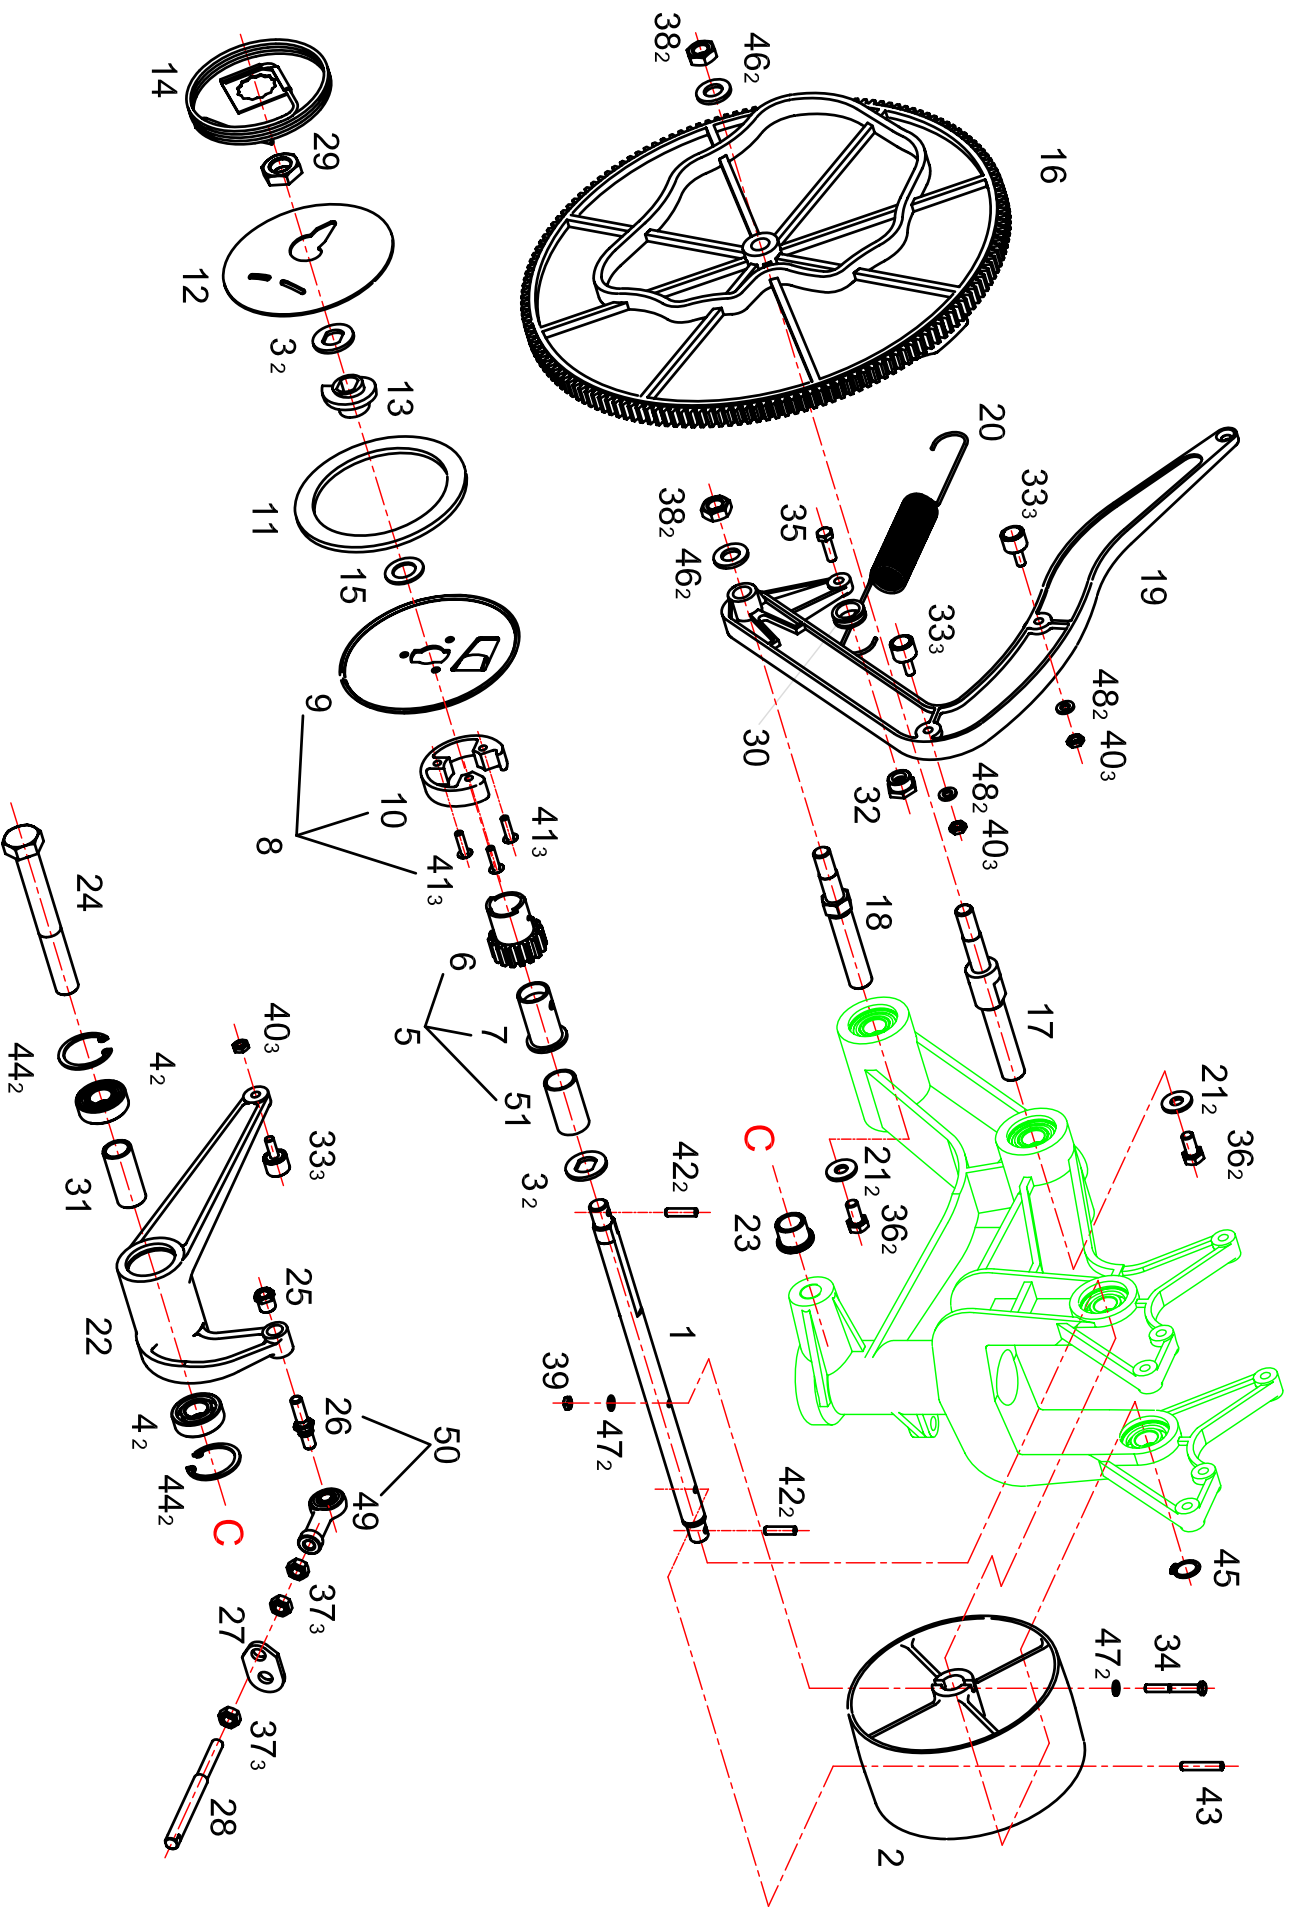


DISTRIBUTOR TRANSMISSION ASSEMBLY ST1 028 05

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 035 01	SHAFT DRIVE DISTRIBUTOR	27	ST1 035 27	SUPPORT SPRING DISTRIBUTOR
2	ST1 035 02	PULLEY	28	ST1 035 28	ROD, SAFETY LINK DISTRIBUTOR
3	ST1 035 03	THRUST WASHER	29	ST1 035 29	SPECIAL NUT M15
4	ST1 029 35	BEARING 9502H	30	ST1 029 41	SPRING POST SLEEVE
5	ST1 035 05	PINION ASSEMBLY	31	ST1 029 17	SPACER BEARING
6	ST1 035 06	PINION	32	ST1 028 06	SPECIAL NUT M5X7
7	ST1 035 07	BUSHING PINION	33	ST1 035 33	CAM FOLLOWER CF 6
8	ST1 035 08	CLUTCH PLATE ASSEMBLY	34	ST1 064 01	HEX CAP SCREW M4X40
9	ST1 035 09	CLUTCH PLATE	35	ST1 065 06	HEX CAP SCREW M6X25
10	ST1 035 10	ORIENTATION SLEEVE	36	ST1 065 08	HEX CAP SCREW M8X16
11	ST1 035 11	FRICTION DISC.	37	ST1 066 06	NUT M8
12	ST1 035 12	CLUTCH PALTE DRIVE	38	ST1 067 06	LOCK NUT M12
13	ST1 035 13	DISTRIBUTOR WORM GEAR	39	ST1 067 01	LOCK NUT M4
14	ST1 035 14	SPRING ASSEMBLY	40	ST1 067 03	LOCK NUT M6
15	ST1 035 15	WASHER Ø16	41	ST1 072 03	RIVET 5X15
16	ST1 035 16	DISTRIBUTOR INDEXING CAM	42	ST1 073 09	ROLL PIN Ø5X22
17	ST1 035 17	SHAFT CAM SUPPORT	43	ST1 073 10	ROLL PIN Ø5X30
18	ST1 035 18	SHAFT ARM	44	ST1 074 06	RETAINING RING Ø35
19	ST1 035 19	ARM	45	ST1 074 05	RETAINING RING Ø16
20	ST1 035 20	SPRING	46	ST1 076 07	FLAT WASHER Ø12
21	ST1 035 21	WASHER Ø8	47	ST1 076 02	FLAT WASHER Ø5
22	ST1 035 22	DRIVE ARM	48	ST1 076 03	FLAT WASHER Ø6
23	ST1 035 23	CLAMP RACE	49	ST1 013 68	ROD END BEARING BNF-8
24	ST1 035 24	SPECIAL BOLT M16X124	50	ST1 035 50	SHAFT(WITH 618F)
25	ST1 035 25	SPECIAL NUT M8	51	ST1 035 51	PINION SLEEVE
26	ST1 035 26	SHAFT			

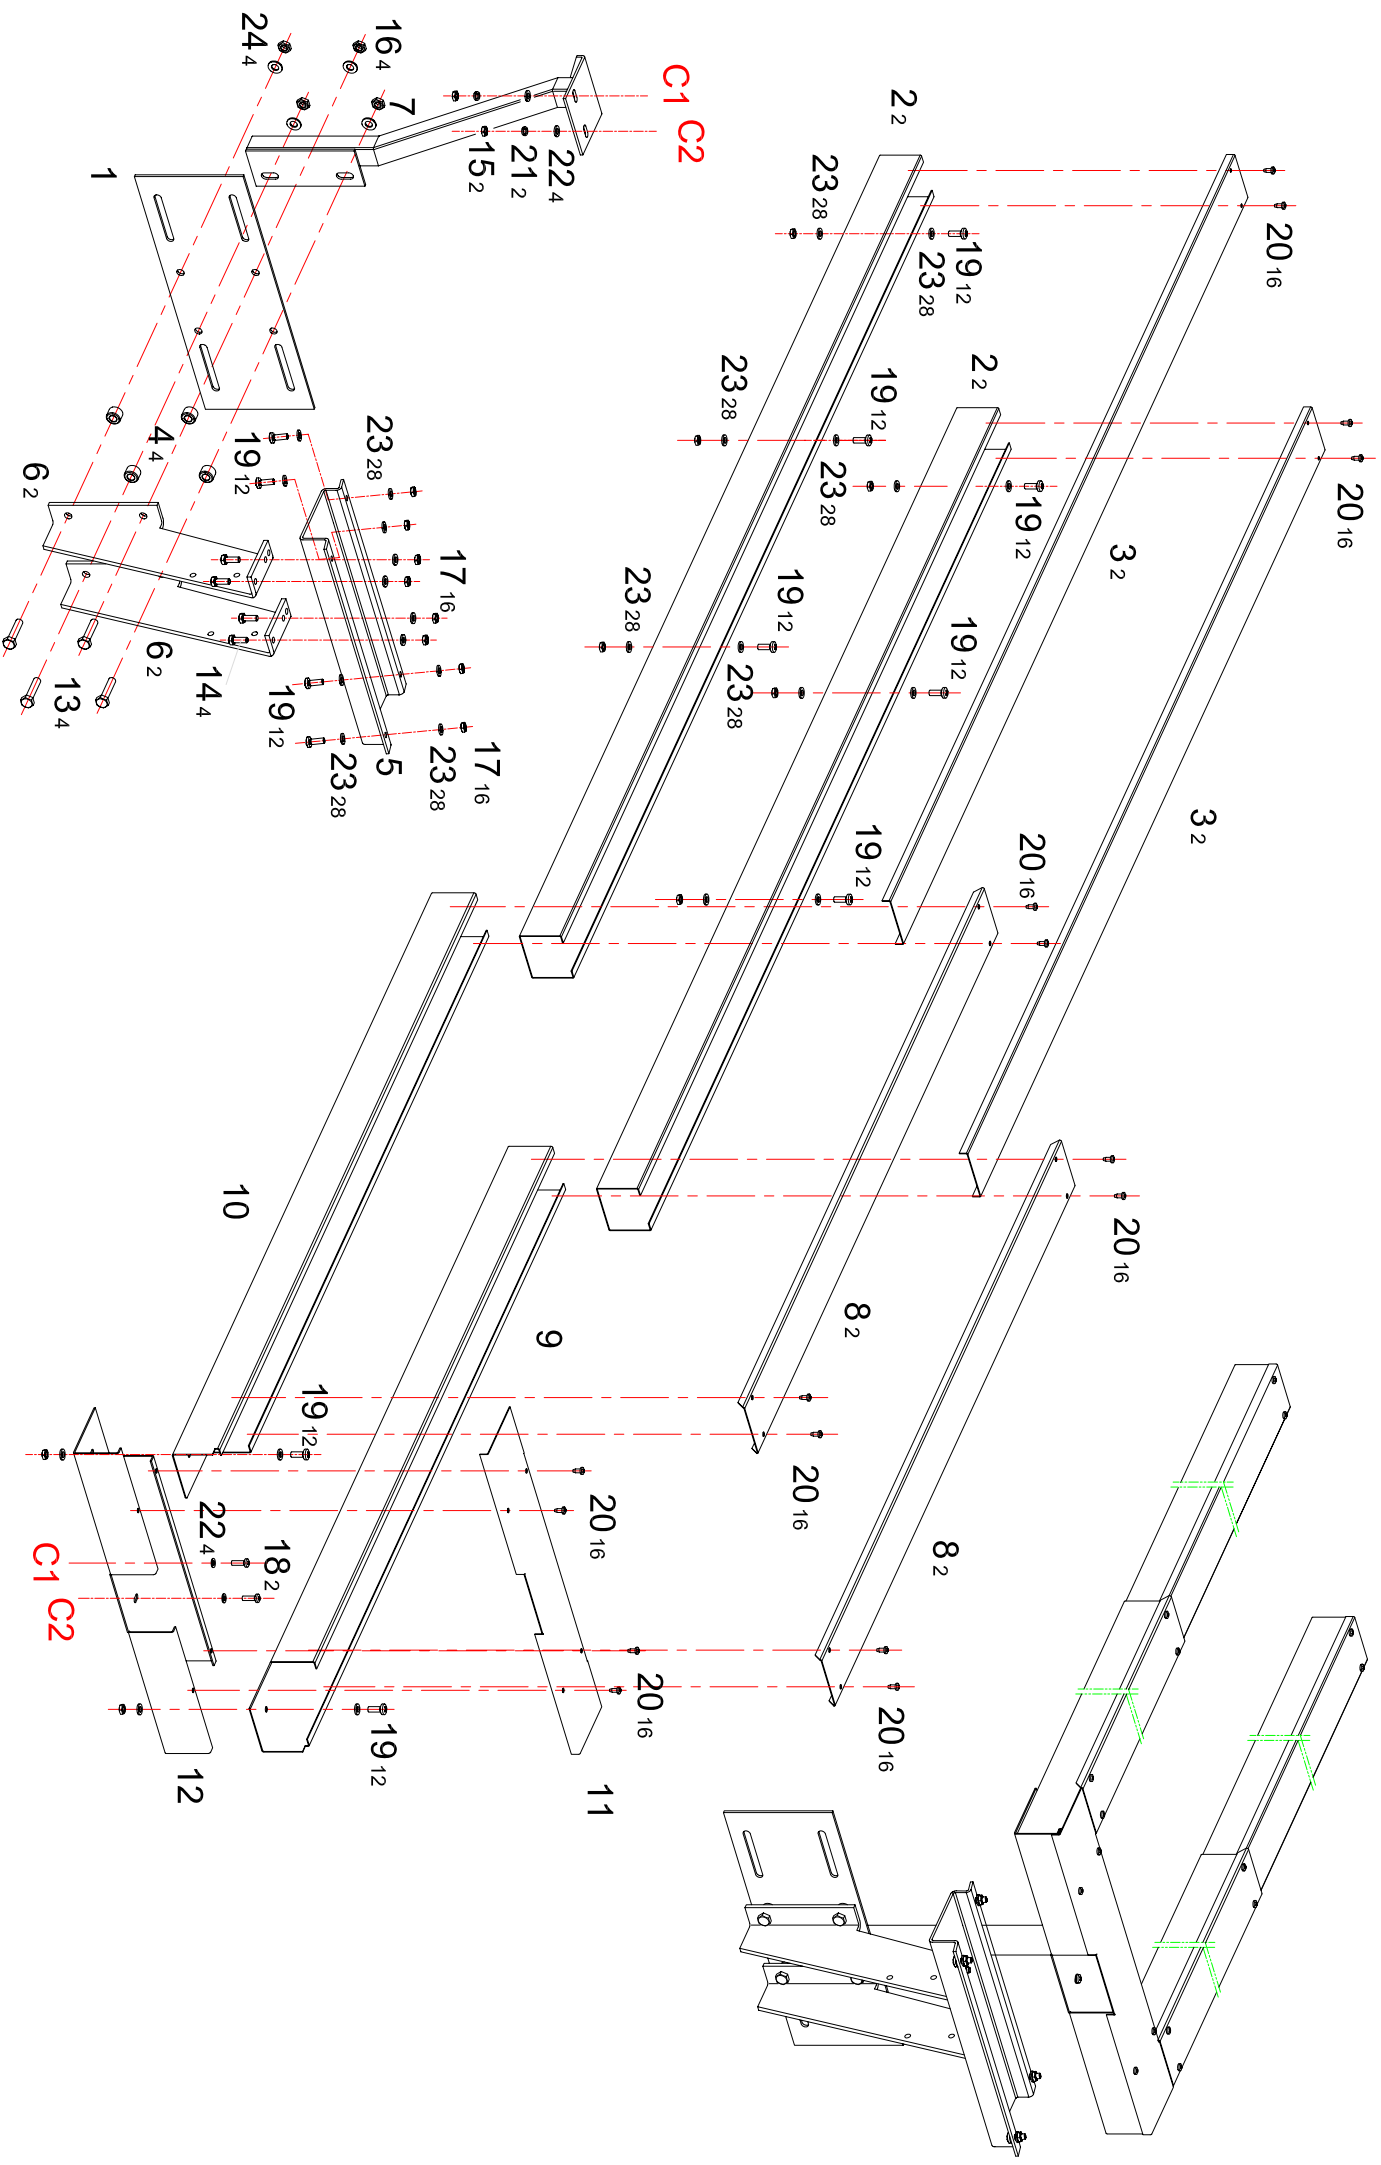




ITEM	PART NO.	DESCRIPTION
1	ST1 037 01	FIXED BOARD
2	ST1 037 02	REAR WIREWAY
3	ST1 037 03	REAR WIREWAY COVER
4	ST1 037 04	THICK BUSHING
5	ST1 037 05	SWITCH BOX SUPPORT
6	ST1 037 06	BRACKET
7	ST1 037 07	WIREWAY BRACKET
8	ST1 037 08	FRONT WIREWAY COVER
9	ST1 037 09	FRONT WIREWAY R.H.
10	ST1 037 10	FRONT WIREWAY L.H.
11	ST1 037 11	SHORT WIREWAY COVER
12	ST1 037 12	SHORT WIREWAY
13	ST1 065 09	HEX CAP SCREW M8X20
14	ST1 065 04	HEX CAP SCREW M6X16
15	ST1 066 02	NUT M5
16	ST1 067 04	LOCK NUT M8
17	ST1 067 03	LOCK NUT M6
18	ST1 071 06	PAN HEAD SCREW M5X16
19	ST1 071 08	PAN HEAD SCREW M6X16
20	ST1 080 25	PAN HEAD SCREW M4X10
21	ST1 075 02	SPRING WASHER Ø5
22	ST1 076 02	FLAT WASHER Ø5
23	ST1 076 03	FLAT WASHER Ø6
24	ST1 076 04	FLAT WASHER Ø8

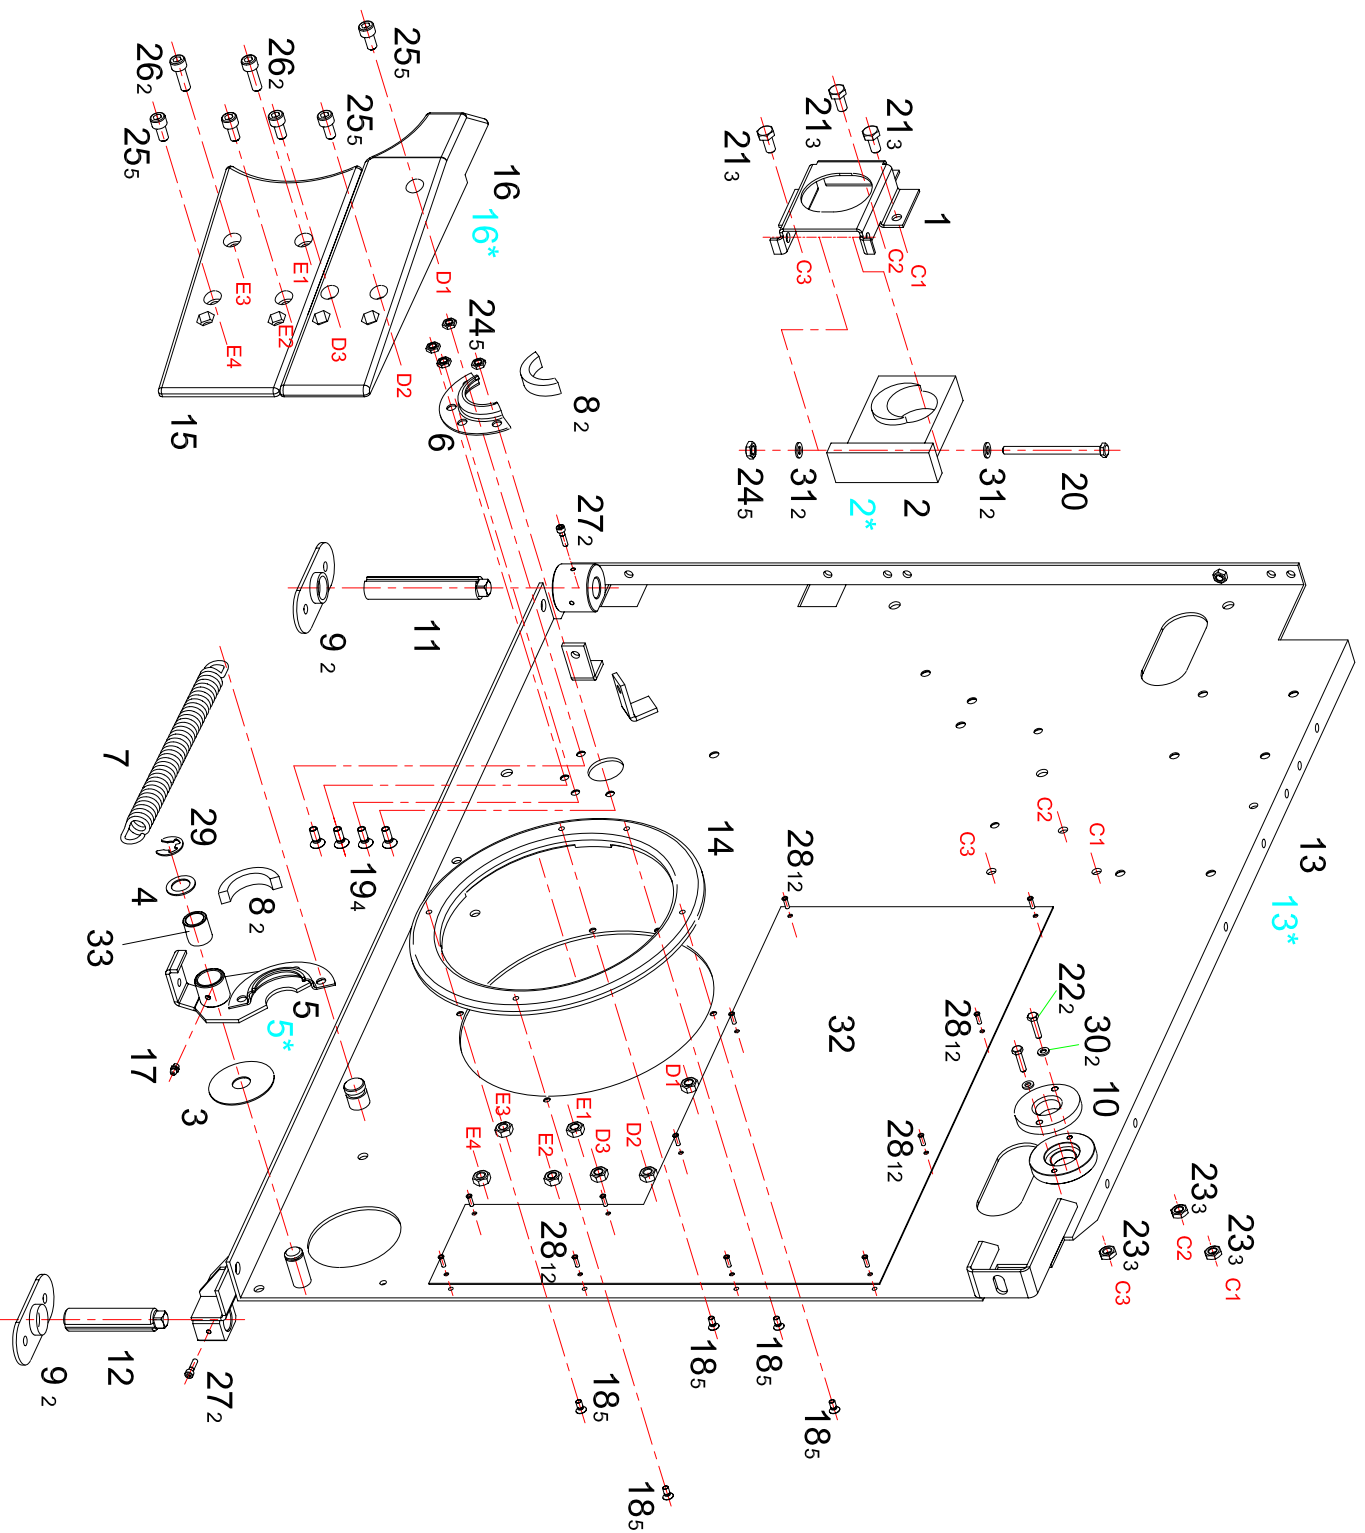

KICKBACK PLATE ASSEMBLY BALL EXIT SIDE ST1 039 00 (00*)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 039 01	SUPPORT BOX	25	ST1 069 09	SOCKET HEAD CAP SCREW M10X20
2	ST1 039 02	URETHANE CUSHION BLOCK, R.H.	26	ST1 069 10	SOCKET HEAD CAP SCREW M10X30
2*	ST1 039 02*	URETHANE CUSHION BLOCK, L.H.	27	ST1 069 04	SOCKET HEAD CAP SCREW M5X20
3	ST1 039 03	THRUST BEARING	28	ST1 080 35	STEEL DRIVE RIVET 4X13
4	ST1 039 04	WASHER Ø20	29	ST1 074 04	RETAINING RING Ø15
5	ST1 039 05	BEARING SUPPORT ASSEMBLY, R.H.	30	ST1 076 03	FLAT WASHER Ø6
		FOR L.H. MACH.	31	ST1 076 04	FLAT WASHER Ø8
5*	ST1 039 05*	BEARING SUPPORT ASSEMBLY, L.H.	32	ST1 039 32	PANEL
		FOR R.H. MACH.	33	ST1 039 33	BRONZE BUSHING
6	ST1 039 06	BEARING RETAINER			
7	ST1 039 07	SPRING			
8	ST1 039 08	BEARING SUPPORT			
9	ST1 039 09	FOOT SUPPORT WELDMENT			
10	ST1 039 10	BUSHING - CURTAIN ROD			
11	ST1 039 11	SPECIAL SET SCREW			
12	ST1 039 12	SPECIAL SET SCREW			
13	ST1 039 13	KICKBACK WELDMENT, R.H. SIDE, FOR L.H. MACHINE			
13*	ST1 039 13*	KICKBACK WELDMENT, L.H.SIDE, FOR R.H. MACHINE			
14	ST1 039 14	DOOR			
15	ST1 039 15	PANEL 1			
16	ST1 039 16	PANEL 2			
16*	ST1 039 16*	PANEL 3			
17	ST1 061 01	GREASE FITTING M6			
18	ST1 062 01	FLAT SOCKET CAP SCREW M6X12			
19	ST1 062 06	FLAT SOCKET CAP SCREW M8X20			
20	ST1 064 19	HEX CAP SCREW M8X110			
21	ST1 065 13	HEX CAP SCREW M10X20			
22	ST1 065 06	HEX CAP SCREW M6X25			
23	ST1 067 05	LOCK NUT M10			
24	ST1 067 04	LOCK NUT M8			

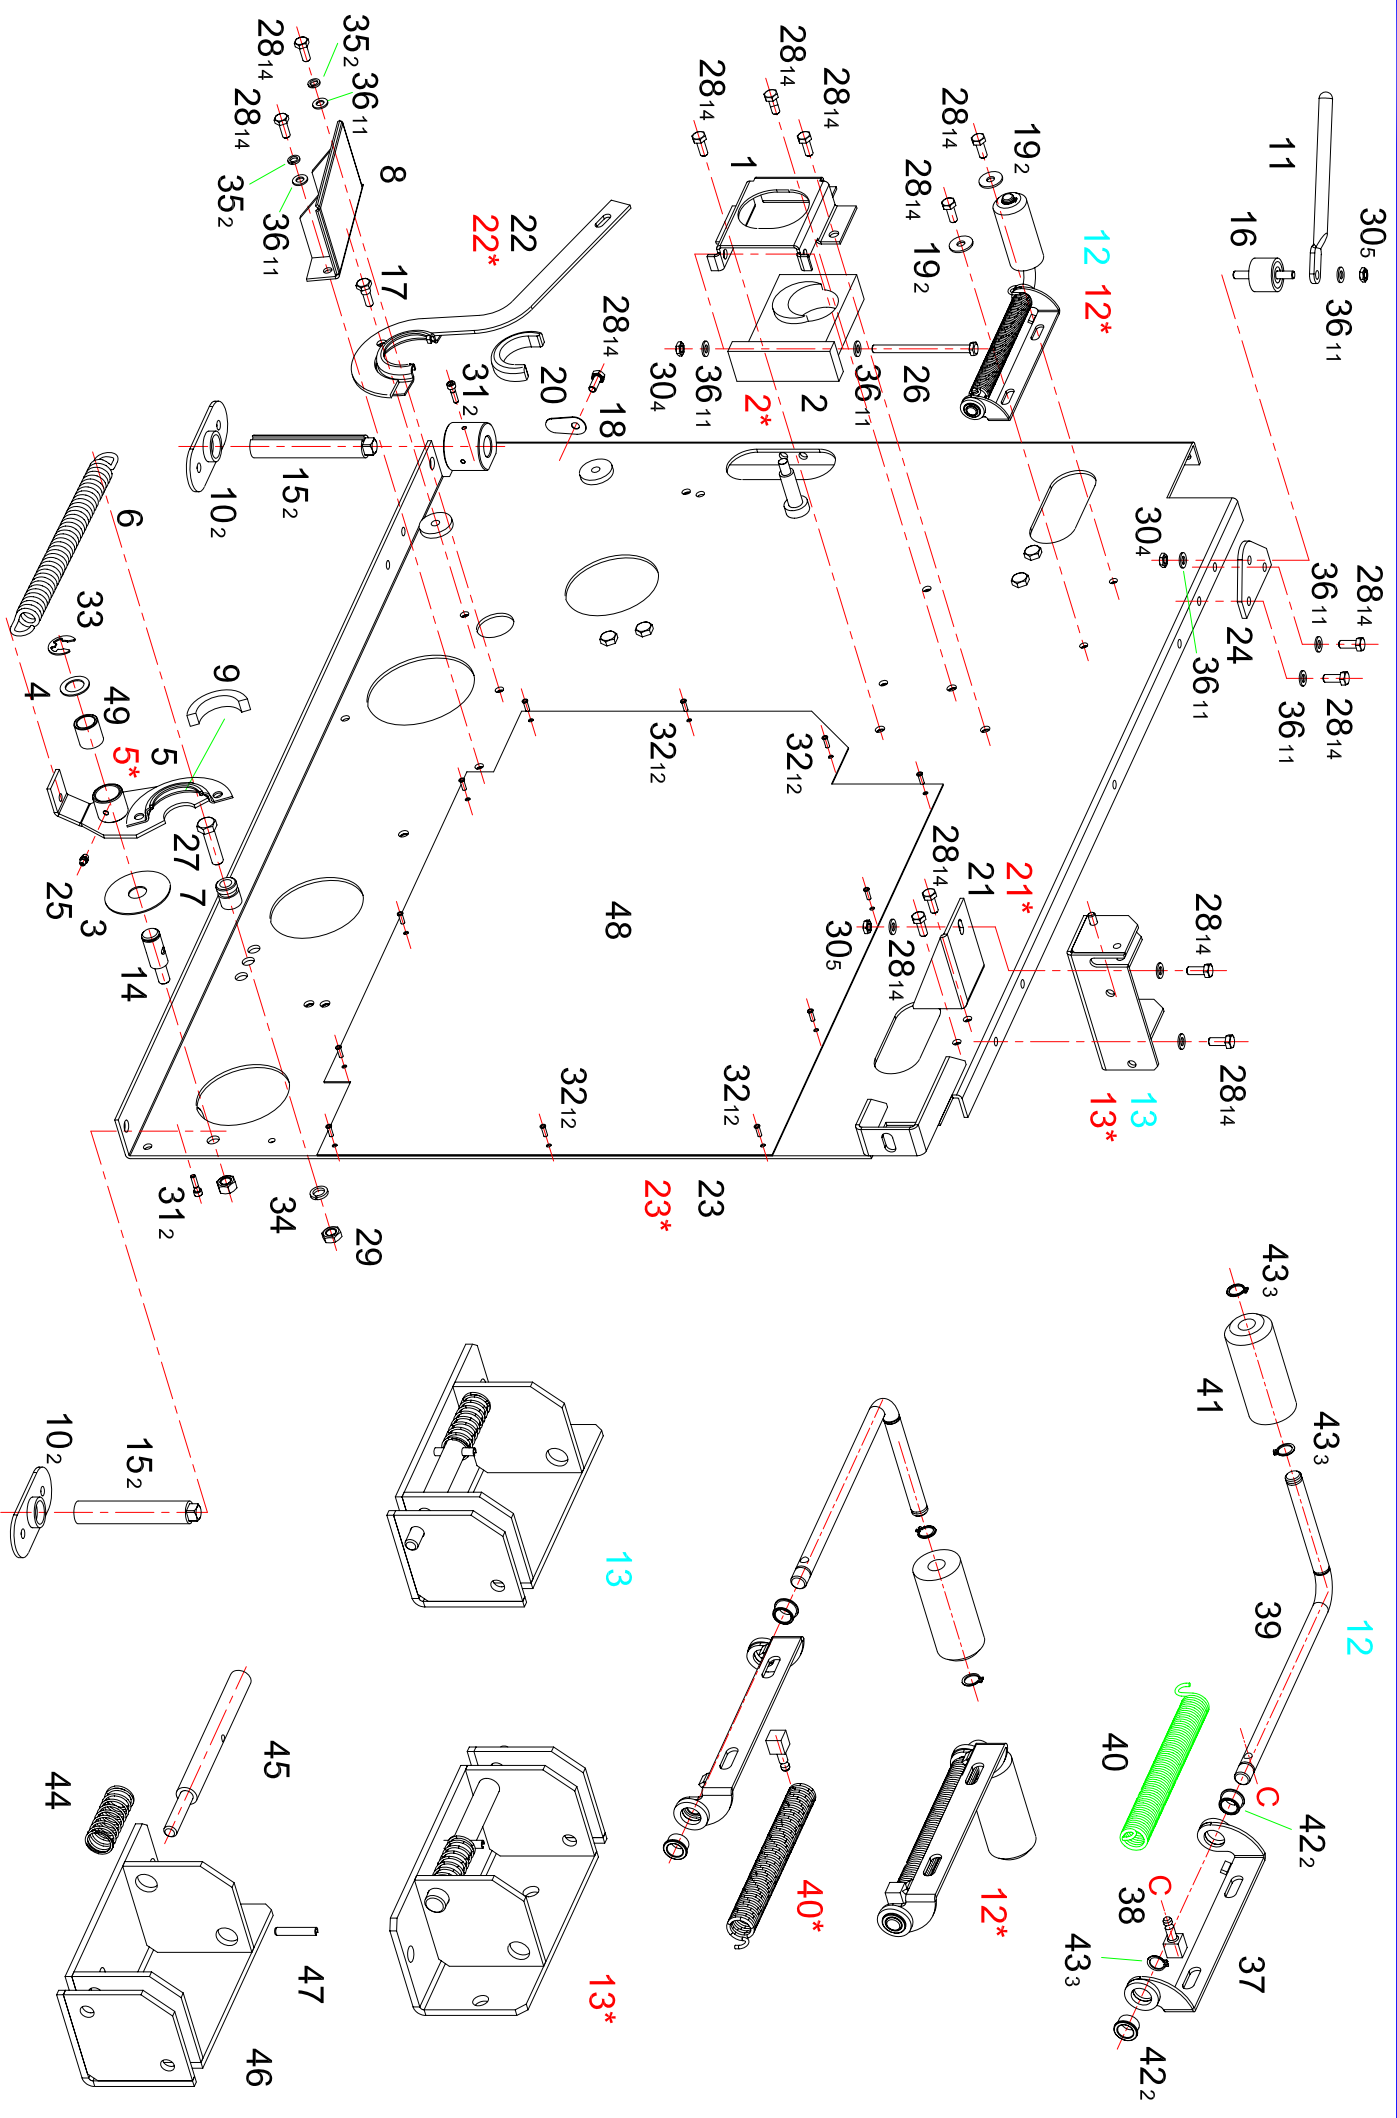





KICKBACK PLATE ASSEMBLY SIDE OPPOSITE BALL EXIT ST1 041 00 (00*)


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 039 01	SUPPORT BOX	23*	ST1 041 23*	KICKBACK WELDMENT, L.H.SIDE, FOR L.H. MACHINE
2	ST1 039 02	URETHANE CUSHION BLOCK, R.H.	24	ST1 041 24	SUPPORT PANEL
2*	ST1 039 02*	URETHANE CUSHION BLOCK, L.H.	25	ST1 061 01	GREASE FITTING M6
3	ST1 039 03	THRUST BEARING	26	ST1 064 19	HEX CAP SCREW M8X110
4	ST1 039 04	WASHER Ø20	27	ST1 065 19	HEX CAP SCREW M12X45
5	ST1 041 05	BEARING SUPPORT ASSEMBLY,R.H.	28	ST1 065 09	HEX CAP SCREW M8X20
5*	ST1 041 05*	BEARING SUPPORT ASSEMBLY,L.H.	29	ST1 067 06	LOCK NUT M12
		FOR L.H. MACH.	30	ST1 067 04	LOCK NUT M8
6	ST1 039 07	SPRING	31	ST1 069 04	SOCKET HEAD CAP SCREW M5X20
7	ST1 041 07	SPRING POST PIN	32	ST1 080 35	STEEL DRIVE RIVET 4X13
8	ST1 041 08	ANGLE	33	ST1 074 04	RETAINING RING Ø15
9	ST1 039 08	BEARING SUPPORT	34	ST1 075 06	SPRING WASHER Ø12
10	ST1 039 09	FOOT SUPPORT WELDMENT	35	ST1 075 04	SPRING WASHER Ø8
11	ST1 041 11	PIN EJECTOR	36	ST1 076 04	FLAT WASHER Ø8
12	ST1 041 12	ROLLER ASSEMBLY R.H.	37	ST1 041 37	BRACKET WELDMENT
12*	ST1 041 12*	ROLLER ASSEMBLY L.H.	38	ST1 041 38	PIN STOP
13	ST1 041 13	SUPPORT BRACKET ASSEMBLY R.H.	39	ST1 041 39	SHAFT
13*	ST1 041 13*	SUPPORT BRACKET ASSEMBLY L.H.	40	ST1 041 40	SPRING L.H.
14	ST1 041 14	PIVOT STUD	40*	ST1 041 40*	SPRING R.H.
15	ST1 039 11	SPECIAL SET SCREW	41	ST1 041 41	ROLLER
16	ST1 041 16	RUBBER SHOCK MOUNTING	42	ST1 041 42	FLANGED BUSHING
17	ST1 041 17	STEEL RIVET	43	ST1 074 03	RETAINING RING Ø12
18	ST1 041 18	GROUNGING SIGN	44	ST1 041 44	SPRING
19	ST1 041 19	WASHER Ø8	45	ST1 041 45	CURTAIN LATCH PIN
20	ST1 041 20	SUPPORT BEARING	46	ST1 041 46	SUPPORT BRACKET WELDMENT
21	ST1 041 21	R.H. TREAD	47	ST1 073 07	ROLL PIN Ø4X24
21*	ST1 041 21*	L.H. TREAD	48	ST1 041 48	PANEL
22	ST1 041 22	SUPPORT WELDMENT R.H.	49	ST1 039 33	BRONZE BUSHING
22*	ST1 041 22*	SUPPORT WELDMENT L.H.			
23	ST1 041 23	KICKBACK WELDMENT, R.H. SIDE, FOR R.H. MACHINE			

ITEM	PART NO.	DESCRIPTION
1	ST1 043 01	ROLLER BODY
2	ST1 043 02	HINGE ROLLER
3	ST1 043 03	ROLLER PIN
4	ST1 043 04	PLASTIC LINK
5	ST1 043 05	HINGE SHAFT
6	ST1 043 06	ROLLER BODY
7	ST1 073 02	ROLL PIN Ø2X20
8	ST1 062 09	FLAT SOCKET CAP SCREW M10X20
9	ST1 063 08	BEARING 80204

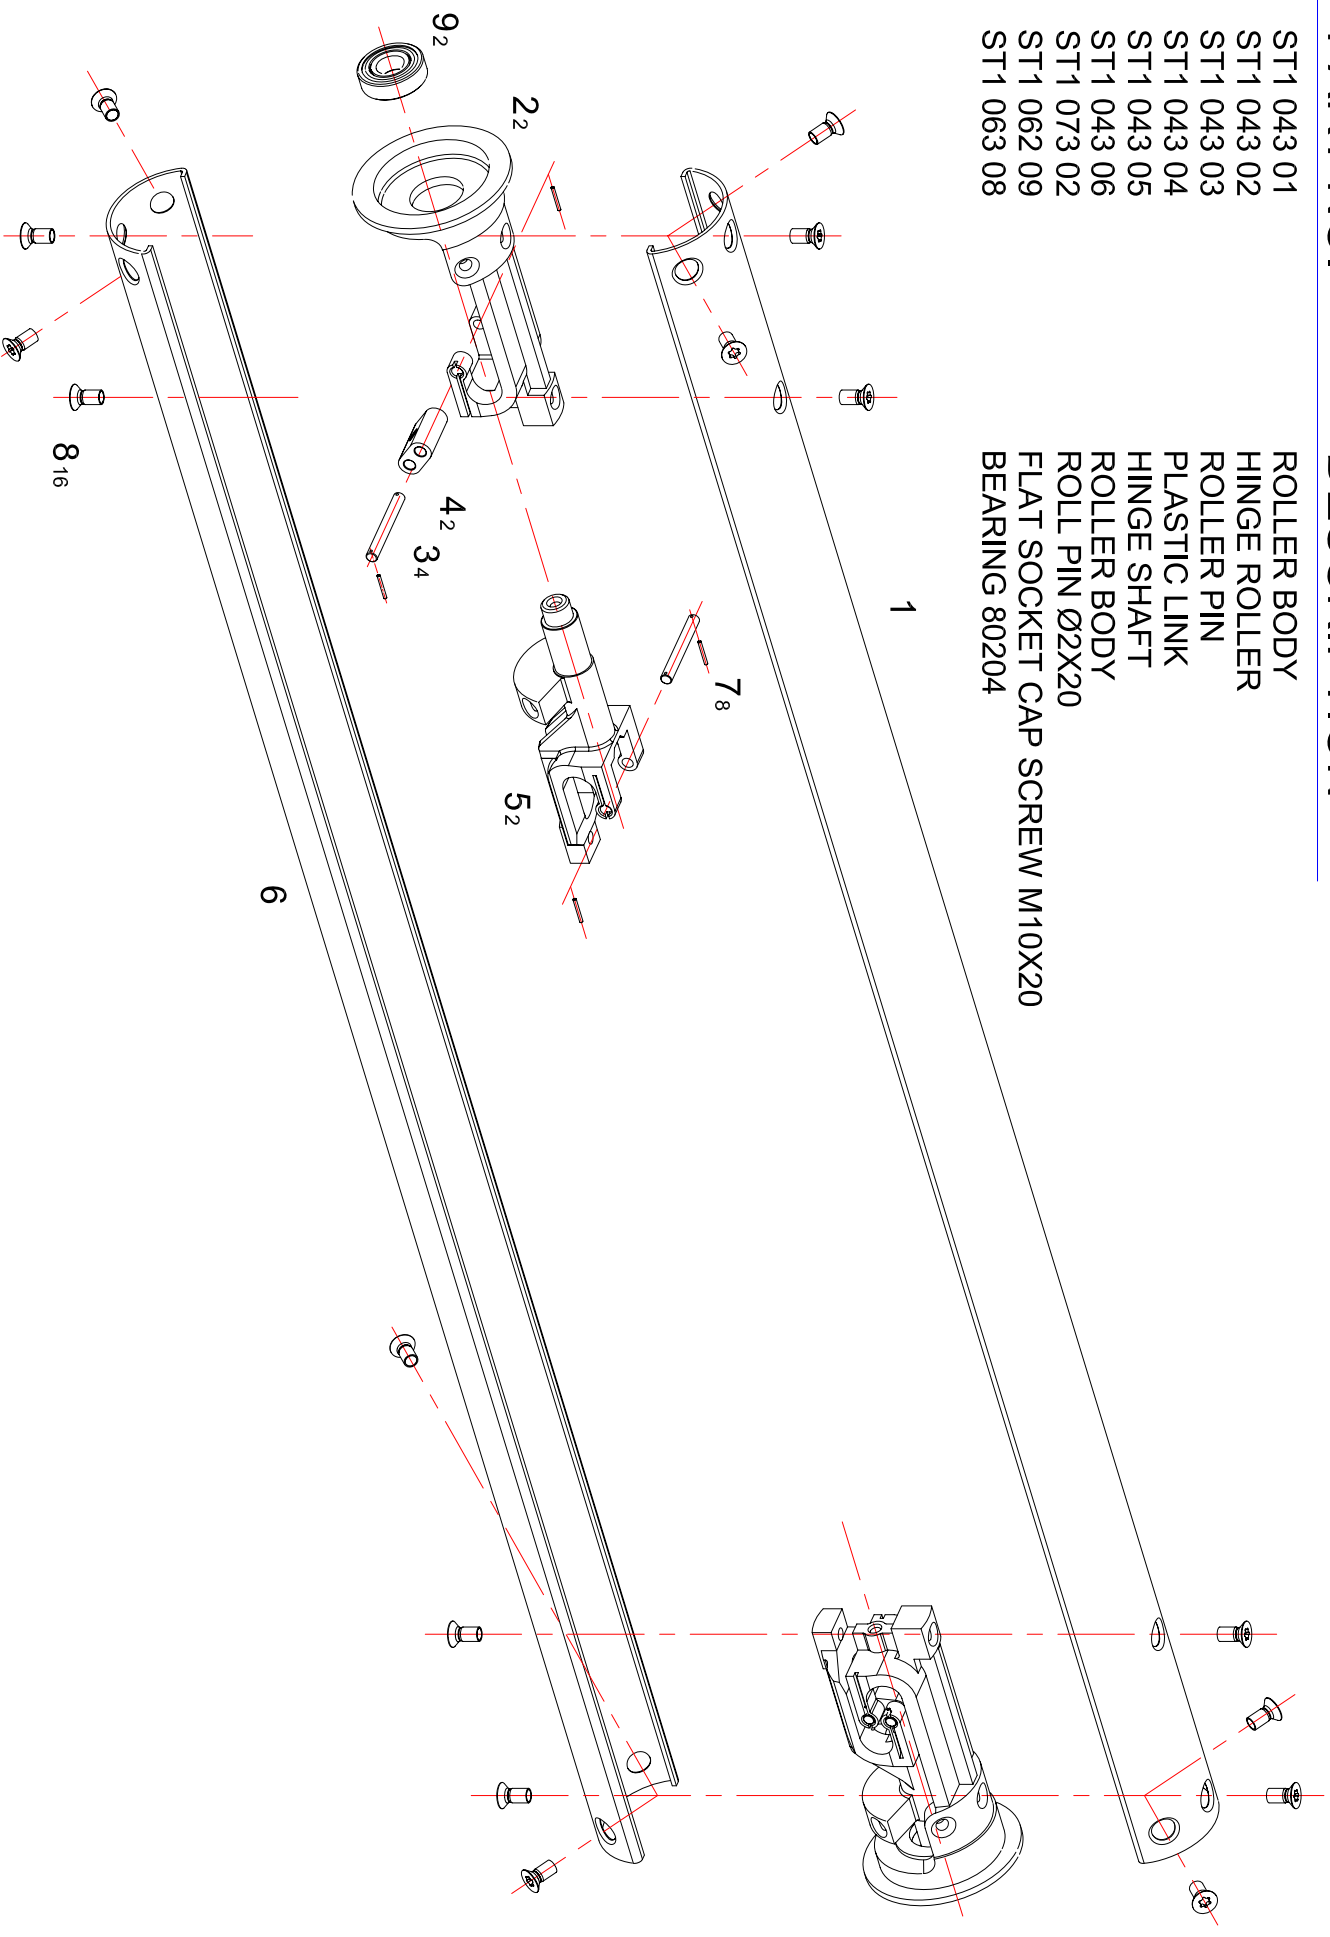

ITEM PART NO.	DESCRIPTION
1	ST1 044 01 REINFORCING BAR
2	ST1 044 02 VIBRATION DAMPENER
3	ST1 044 03 BONDING STRAP
4	ST1 044 04 BOUNCE BOARD FRONT L.H.
4*	ST1 044 04* BOUNCE BOARD FRONT R.H.
5	ST1 044 05 BOUNCE BOARD REAR L.H.
5*	ST1 044 05* BOUNCE BOARD REAR R.H.
6	ST1 044 06 CHANNEL I
7	ST1 044 07 CHANNEL II
8	ST1 044 08 ANGLE SUPPORT L.H.
8*	ST1 044 08* ANGLE SUPPORT R.H.
9	ST1 044 09 PIT SUPPORT BRACKET R.H.
9*	ST1 044 09* PIT SUPPORT BRACKET L.H.
10	ST1 044 10 PIT SUPPORT BRACKET L.H.
10*	ST1 044 10* PIT SUPPORT BRACKET R.H.
11	ST1 062 10 FLAT SOCKET CAP SCREW M10X25
12	ST1 065 14 HEX CAP SCREW M10X25
13	ST1 065 11 HEX CAP SCREW M8X30
14	ST1 067 05 LOCK NUT M10
15	ST1 067 04 LOCK NUT M8
16	ST1 075 05 SPRING WASHER Ø10
17	ST1 076 06 FLAT WASHER Ø10
18	ST1 076 04 FLAT WASHER Ø8

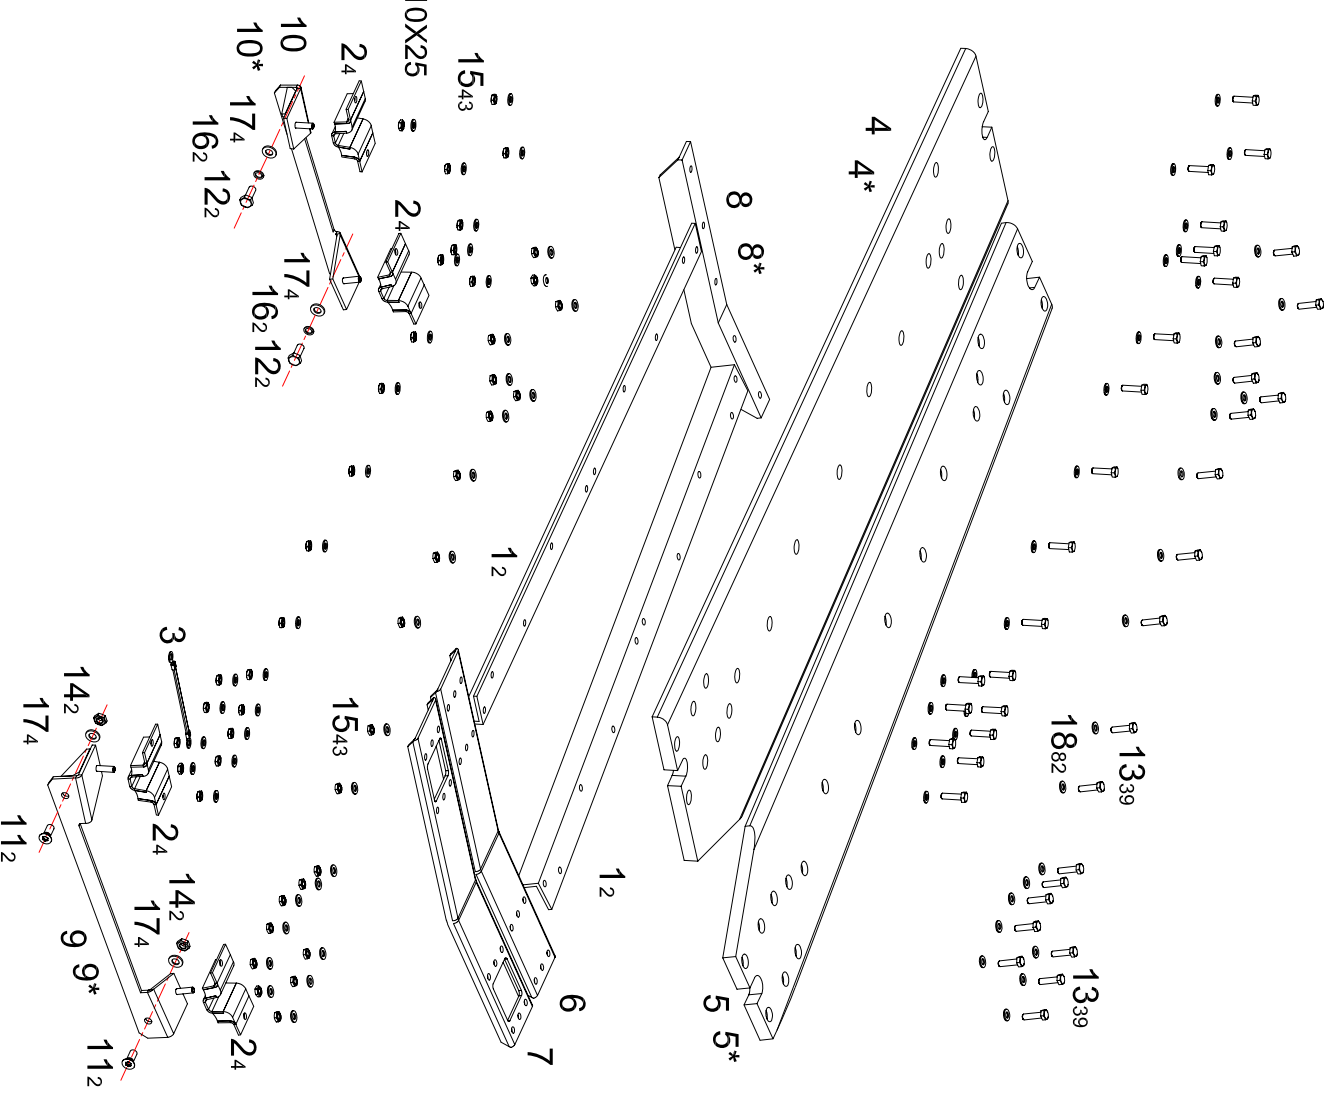

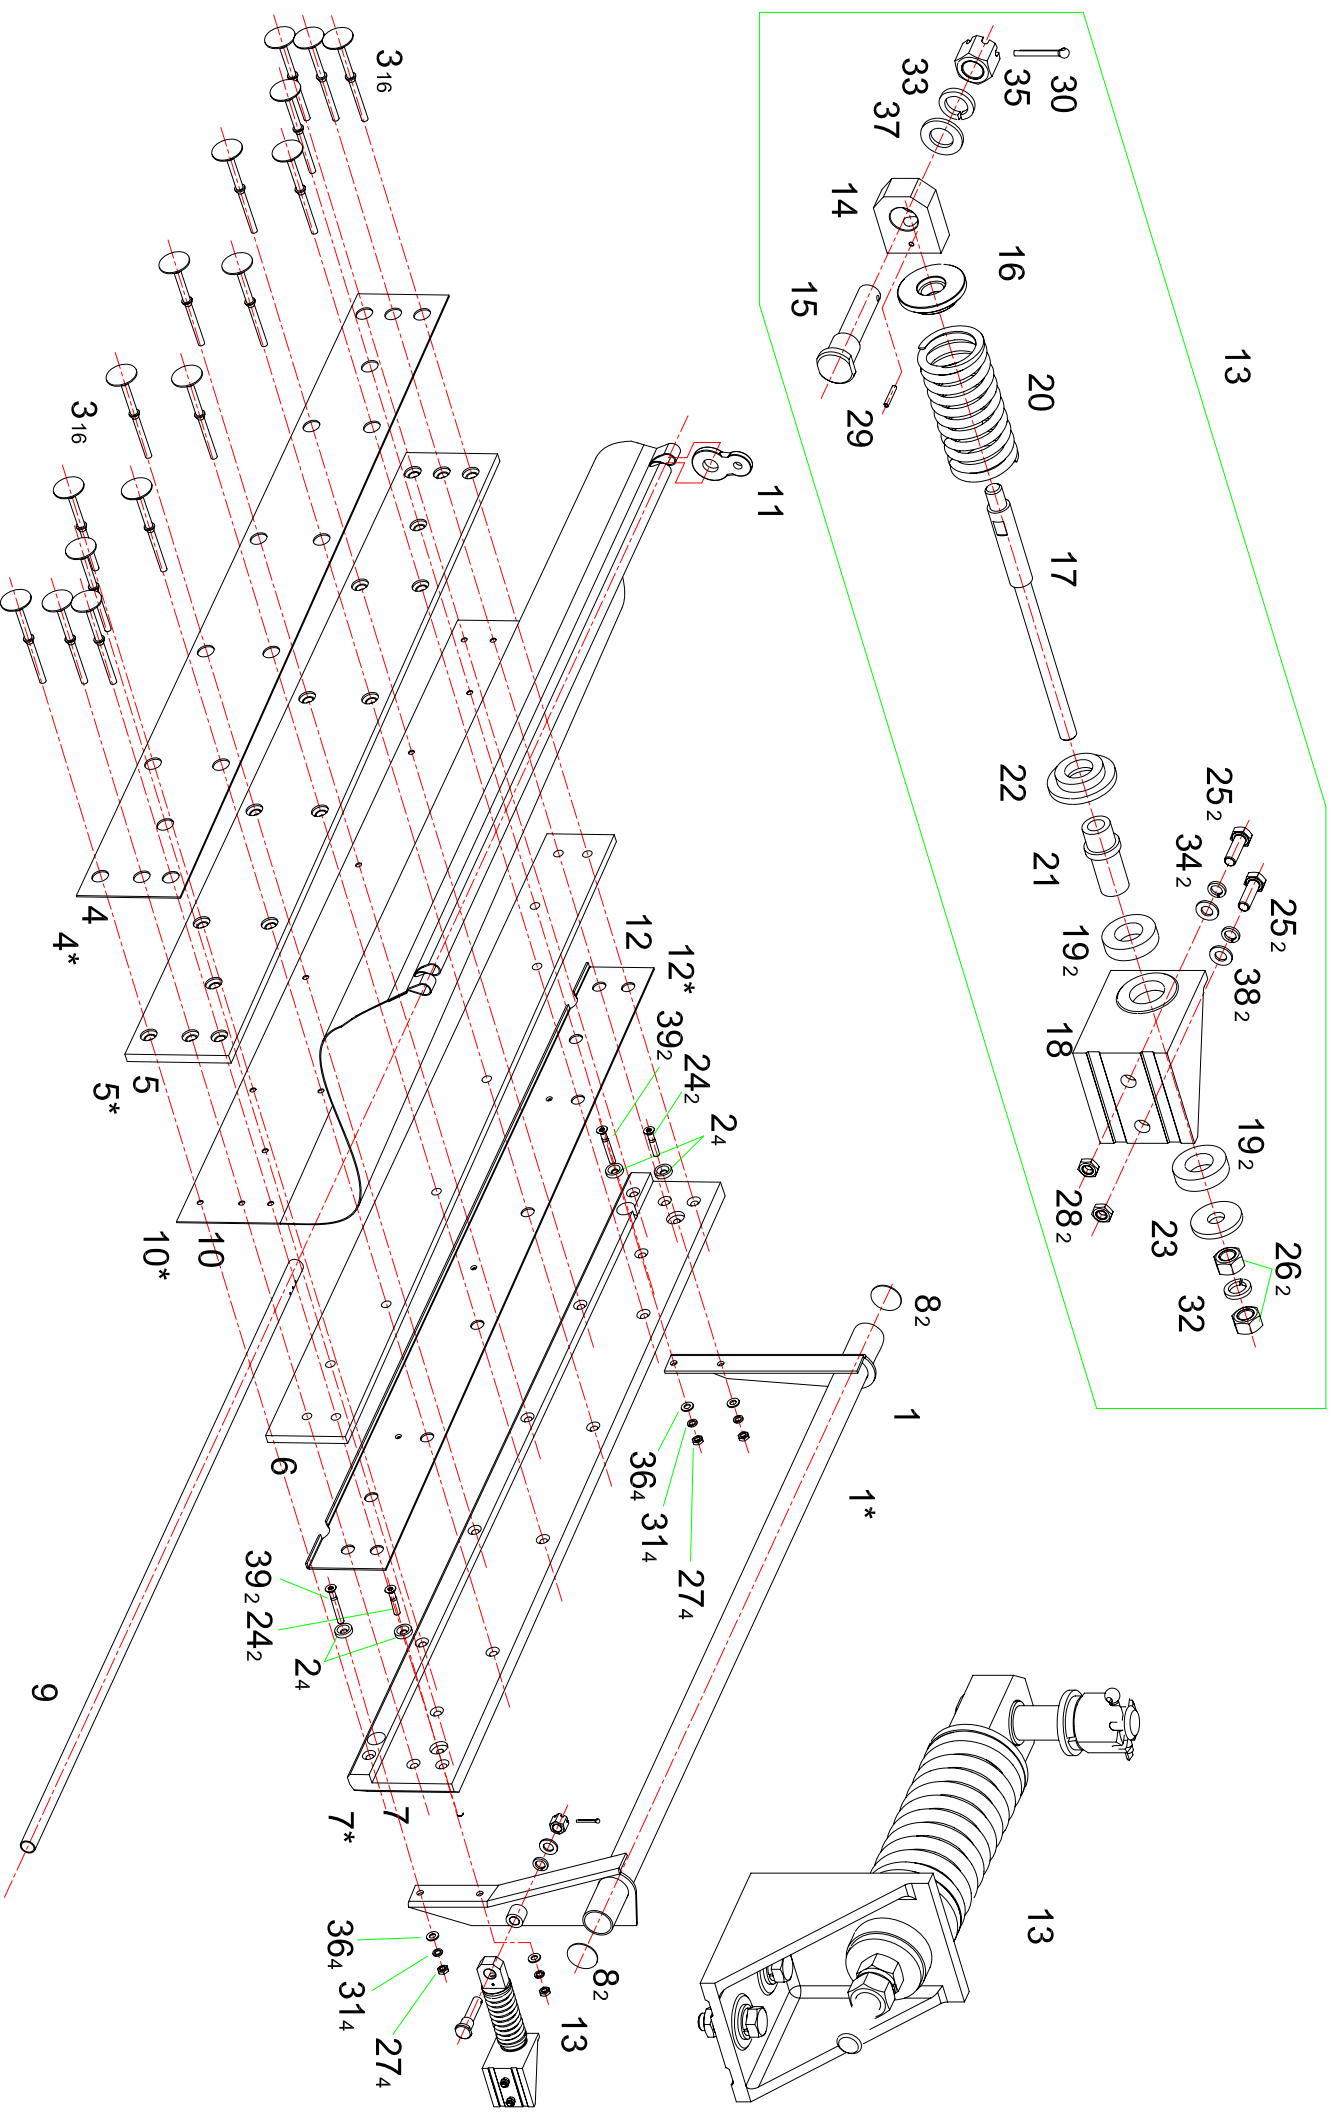




46 CUSHION, SHOCK ABSORBER & CURTAIN ASSEMBLY ST1 045 00 (00*)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 045 01	HANGER WELDMENT, L.H.	21	ST1 045 21	TUBE
1*	ST1 045 01*	HANGER WELDMENT, R.H.	22	ST1 045 22	SPRING DISC II
2	ST1 045 02	PLANK WASHER Ø11	23	ST1 045 23	WASHER Ø12
3	ST1 045 03	RIVET, RUBBER	24	ST1 062 11	FLAT SOCKET CAP SCREW M10X60 (WITH 2)
4	ST1 045 04	SMOOTHIE CUSHION FACING L.H	25	ST1 065 10	HEX CAP SCREW M8X25
4*	ST1 045 04*	SMOOTHIE CUSHION FACING R.H	26	ST1 066 09	NUT M12
5	ST1 045 05	CUSHION, L.H.	27	ST1 067 05	LOCK NUT M10
5*	ST1 045 05*	CUSHION, R.H.	28	ST1 067 04	LOCK NUT M8
6	ST1 045 06	CUSHION SPONGE	29	ST1 073 03	ROLL PIN Ø3X20
7	ST1 045 07	WOOD CUSHION PLANK, L.H.	30	ST1 073 15	PIN 4X28
7*	ST1 045 07*	WOOD CUSHION PLANK, R.H.	31	ST1 075 05	SPRING WASHER Ø10
8	ST1 045 08	SHIELD	32	ST1 075 06	SPRING WASHER Ø12
9	ST1 045 09	CURTAIN ROD	33	ST1 075 07	SPRING WASHER Ø16
10	ST1 045 10	PIN CURTAIN, L.H.	34	ST1 075 04	SPRING WASHER Ø8
10*	ST1 045 10*	PIN CURTAIN, R.H.	35	ST1 080 40	HEX SLOTTED NUT M16X1.5
11	ST1 045 11	CURTAIN HANGER	36	ST1 076 06	FLAT WASHER Ø10
12	ST1 045 12	PANEL, L.H	37	ST1 076 08	FLAT WASHER Ø16
12*	ST1 045 12*	PANEL, R.H	38	ST1 076 04	FLAT WASHER Ø8
13	ST1 045 13	SHOCK ABSORBER COMPONENTS	39	ST1 062 17	FLAT SOCKET CAP SCREW M10X75 (WITH 2)
14	ST1 045 14	COLLAR			
15	ST1 045 15	SHAFT			
16	ST1 045 16	SPRING DISC I			
17	ST1 045 17	ADJUSTING SHAFT			
18	ST1 045 18	BRACKET			
19	ST1 045 19	BUMPER RUBBER			
20	ST1 045 20	SPRING			

REAR MACHINE TRANSMISSION ASSEMBLY ST1 047 00 (00*)


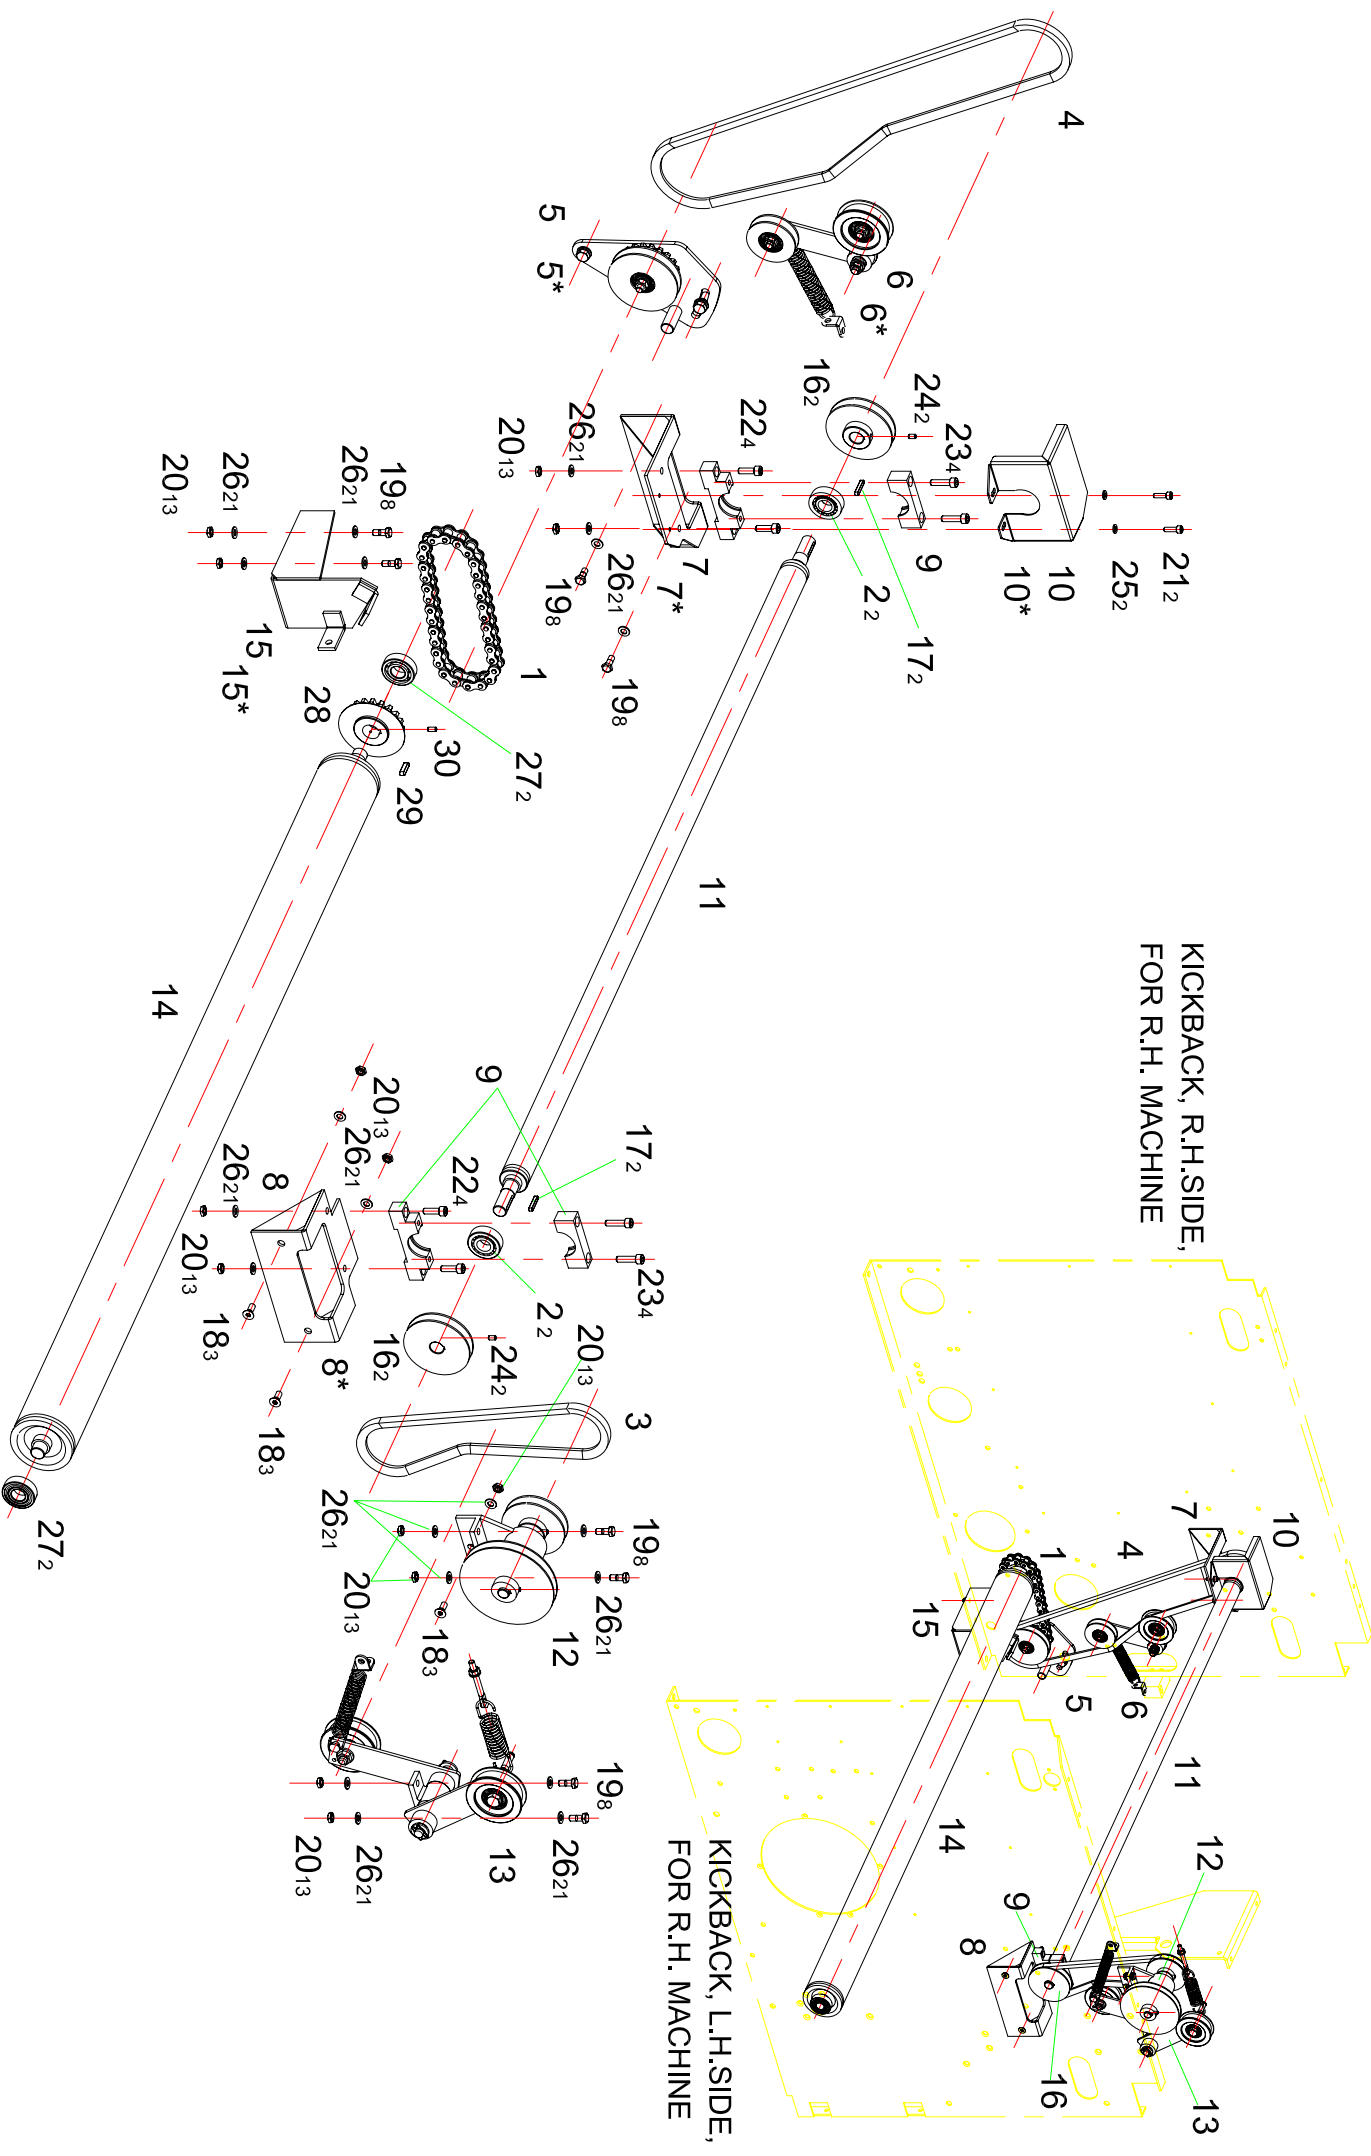





REAR MACHINE TRANSMISSION ASSEMBLY ST1 047 00 (00*)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 047 01	CHAIN 12.7 (1/2")	21	ST1 069 06	SOCKET HEAD CAP SCREW M6X20
2	ST1 047 02	BEARING 1204	22	ST1 070 11	SOCKET HEAD CAP SCREW M8X25
3	ST1 047 03	BELT A32"	23	ST1 069 07	SOCKET HEAD CAP SCREWM8X30
4	ST1 047 04	BELT A57"	24	ST1 069 05	SOCKET SET SCREW M6X10
5	ST1 047 05	PULLEY ADJ. ASSEMBLY L.H.	25	ST1 076 03	FLAT WASHER Ø6
5*	ST1 047 05*	PULLEY ADJ. ASSEMBLY R.H.	26	ST1 076 04	FLAT WASHER Ø8
6	ST1 047 06	IDLER PULLEY ASSEMBLY L.H.	27	ST1 063 08	BEARING 80204
6*	ST1 047 06*	IDLER PULLEY ASSEMBLY R.H.	28	ST1 047 28	CHAIN GEAR WELDMENT
7	ST1 047 07	BEARING SET, L.H. FOR L.H. MACH.	29	ST1 060 07	KEY 25X6X6
7*	ST1 047 07*	BEARING SET, R.H. FOR L.H. MACH.	30	ST1 070 01	SOCKET SET SCREW M6X12
8	ST1 047 08	BEARING SET, L.H. FOR R.H. MACH.			
8*	ST1 047 08*	BEARING SET, R.H. FOR R.H. MACH.			
9	ST1 047 09	BEARING SEAT			
10	ST1 047 10	SEAT L.H.			
10*	ST1 047 10*	SEAT R.H.			
11	ST1 047 11	LONG SHAFT			
12	ST1 047 12	PULLEY ASSEMBLY			
13	ST1 047 13	IDLER ASSEMBLY			
14	ST1 047 14	REAR ROLLER			
15	ST1 047 15	BRACKET L.H.			
15*	ST1 047 15*	BRACKET R.H.			
16	ST1 047 16	SMALL PULLEY			
17	ST1 060 03	KEY 30X5X5			
18	ST1 062 07	FLAT SOCKET CAP SCREW M8X25			
19	ST1 065 10	HEX HEAD SCREW M8X25			
20	ST1 067 04	LOCK NUT M8			

CONTINUOUS

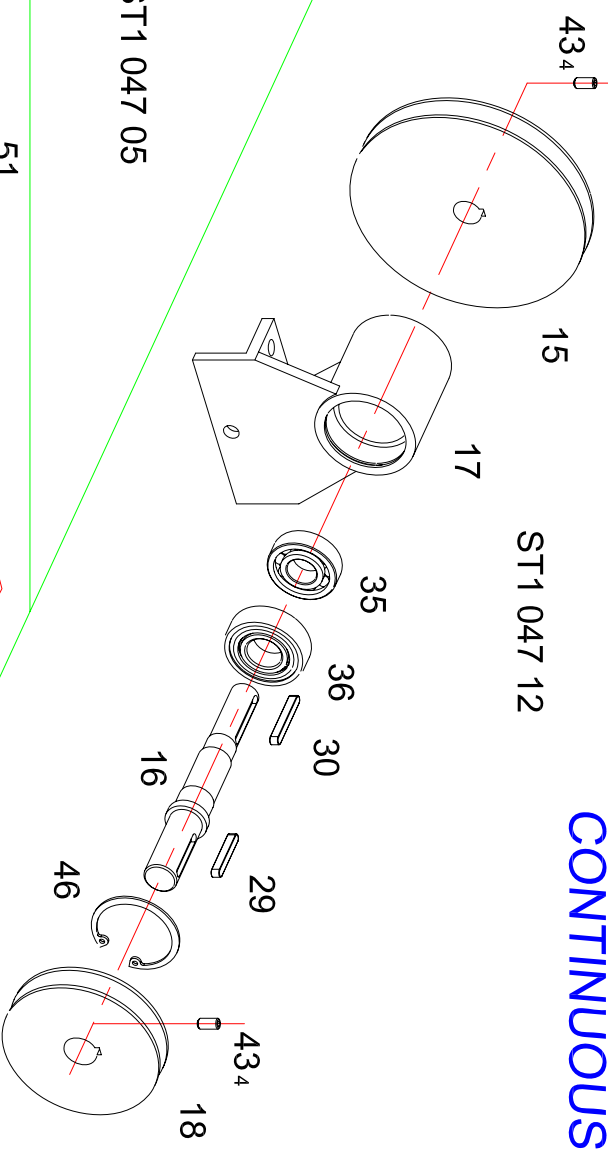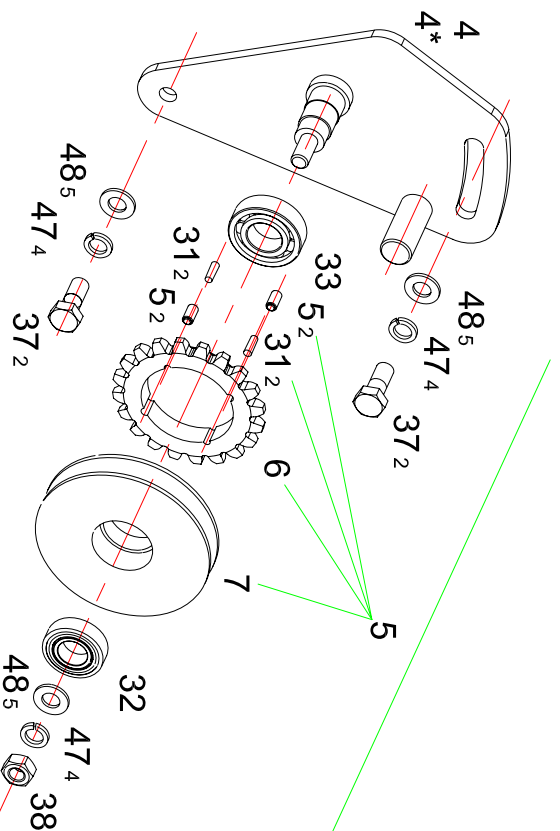

ST1 047 05

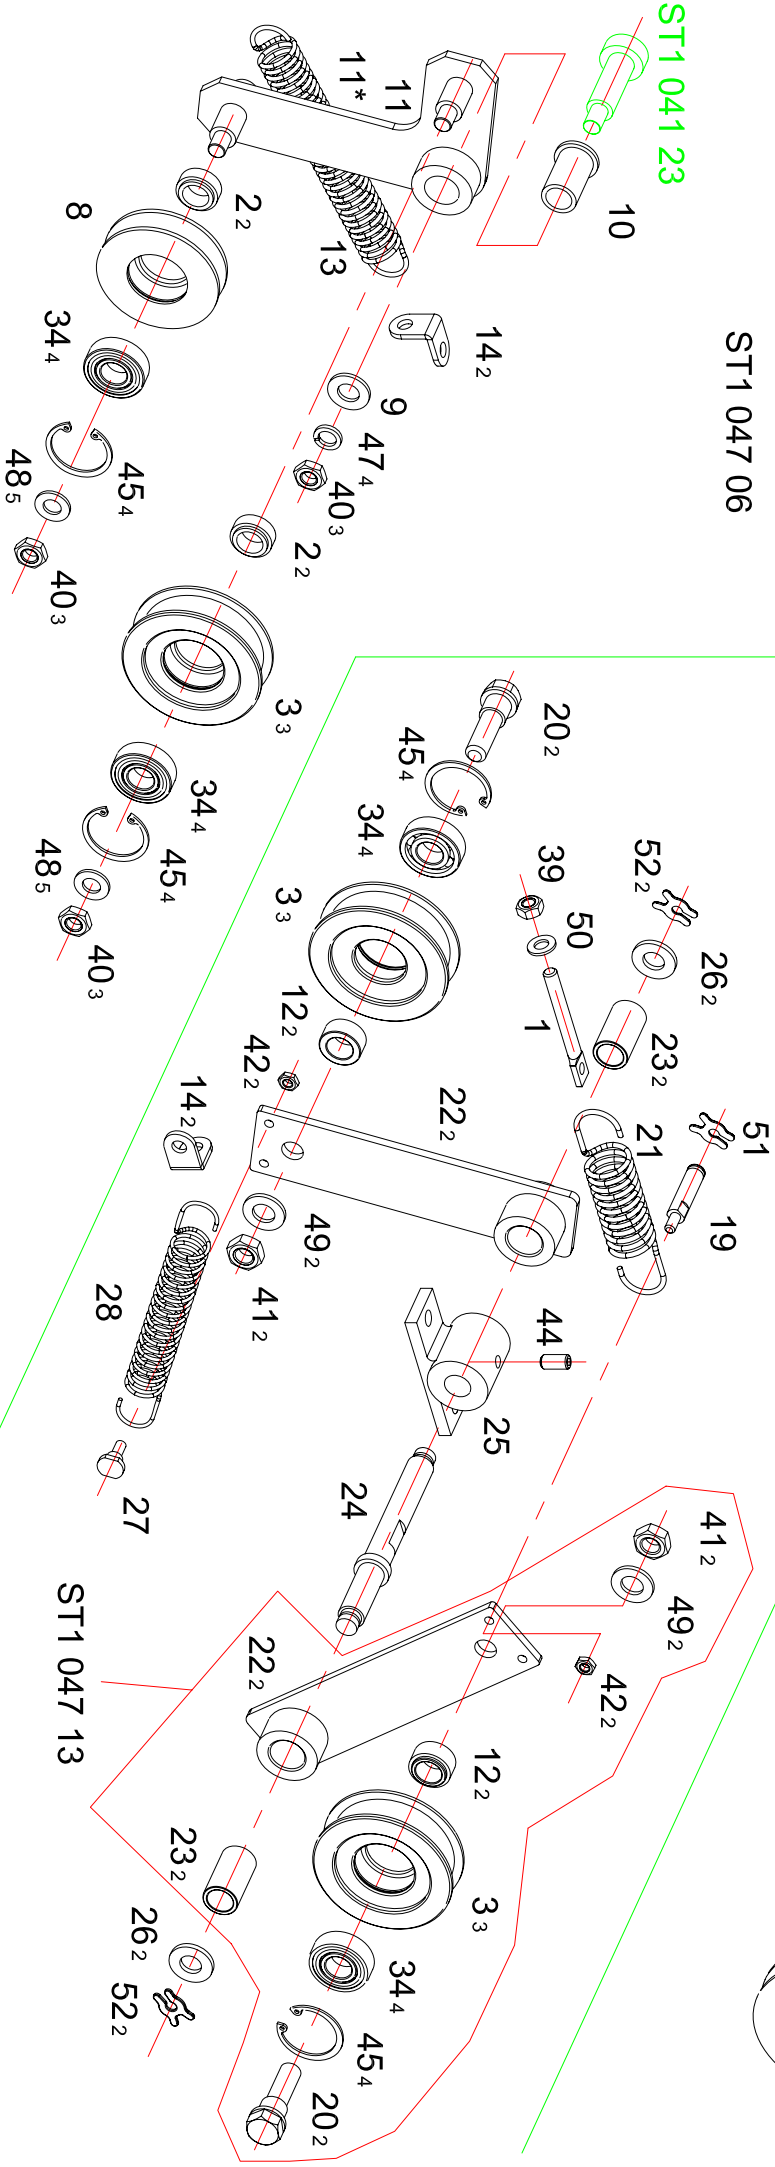

ST1 047 06

ST1 041 23


ST1 047 13



REAR MACHINE TRANSMISSION ASSEMBLY ST1 047 00 (00*)


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 019 01	STUD-SPRING	31	ST1 073 06	ELASTIC ROLLER PIN Ø4X10
2	ST1 049 02	BUSHING	32	ST1 063 03	BEARING 80103
3	ST1 049 03	TENSION WHEEL	33	ST1 063 04	BEARING 80104
4	ST1 049 04	PLATE ADJ. L.H.	34	ST1 063 06	BEARING 80202
4*	ST1 049 04*	PLATE ADJ. R.H.	35	ST1 063 07	BEARING 80203
5	ST1 049 05	GEAR ASSEMBLY	36	ST1 063 08	BEARING 80204
6	ST1 049 06	CHAIN GEAR I	37	ST1 065 14	HEX HEAD SCREW M10X25
7	ST1 049 07	PULLEY	38	ST1 066 07	NUT M10
8	ST1 049 08	IDLER PULLEY II	39	ST1 066 06	NUT M8
9	ST1 049 09	WASHER Ø13	40	ST1 067 05	LOCK NUT M10
10	ST1 049 10	BUSHING	41	ST1 067 06	LOCK NUT M12
11	ST1 049 11	IDLER PULLEY ARM L.H.	42	ST1 067 03	LOCK NUT M6
11*	ST1 049 11*	IDLER PULLEY ARM R.H.	43	ST1 070 01	SOCKET SET SCREW M6X12
12	ST1 049 12	SPACER	44	ST1 070 07	SOCKET SET SCREW M8X10
13	ST1 049 13	PULLING SPRING	45	ST1 074 06	RAITAINING RING Ø35
14	ST1 049 14	SPRING HANGER	46	ST1 074 08	RAITAINING RING Ø47
15	ST1 049 15	PULLEY	47	ST1 075 05	SPRING WASHER Ø10
16	ST1 049 16	SHAFT	48	ST1 076 06	FLAT WASHER Ø10
17	ST1 049 17	BUSHING	49	ST1 076 07	FLAT WASHER Ø12
18	ST1 049 18	SMALL PULLEY I	50	ST1 076 04	FLAT WASHER Ø8
19	ST1 049 19	SHAFT	51	ST1 007 22	X WASHER
20	ST1 049 20	SHAFT	52	ST1 049 52	X WASHER
21	ST1 049 21	SPRING			
22	ST1 049 22	ARM			
23	ST1 049 23	BRONZE BUSHING			
24	ST1 049 24	SEAT			
25	ST1 049 25	BUSHING			
26	ST1 049 26	WASHER Ø13			
27	ST1 049 27	SHAFT			
28	ST1 049 28	PULLING SPRING			
29	ST1 060 02	KEY 25X5X5			
30	ST1 060 05	KEY 40X5X5			

KICKBACK WELDMENT, L.H. SIDE,
FOR L.H. MACHINE
ST1 041 23*

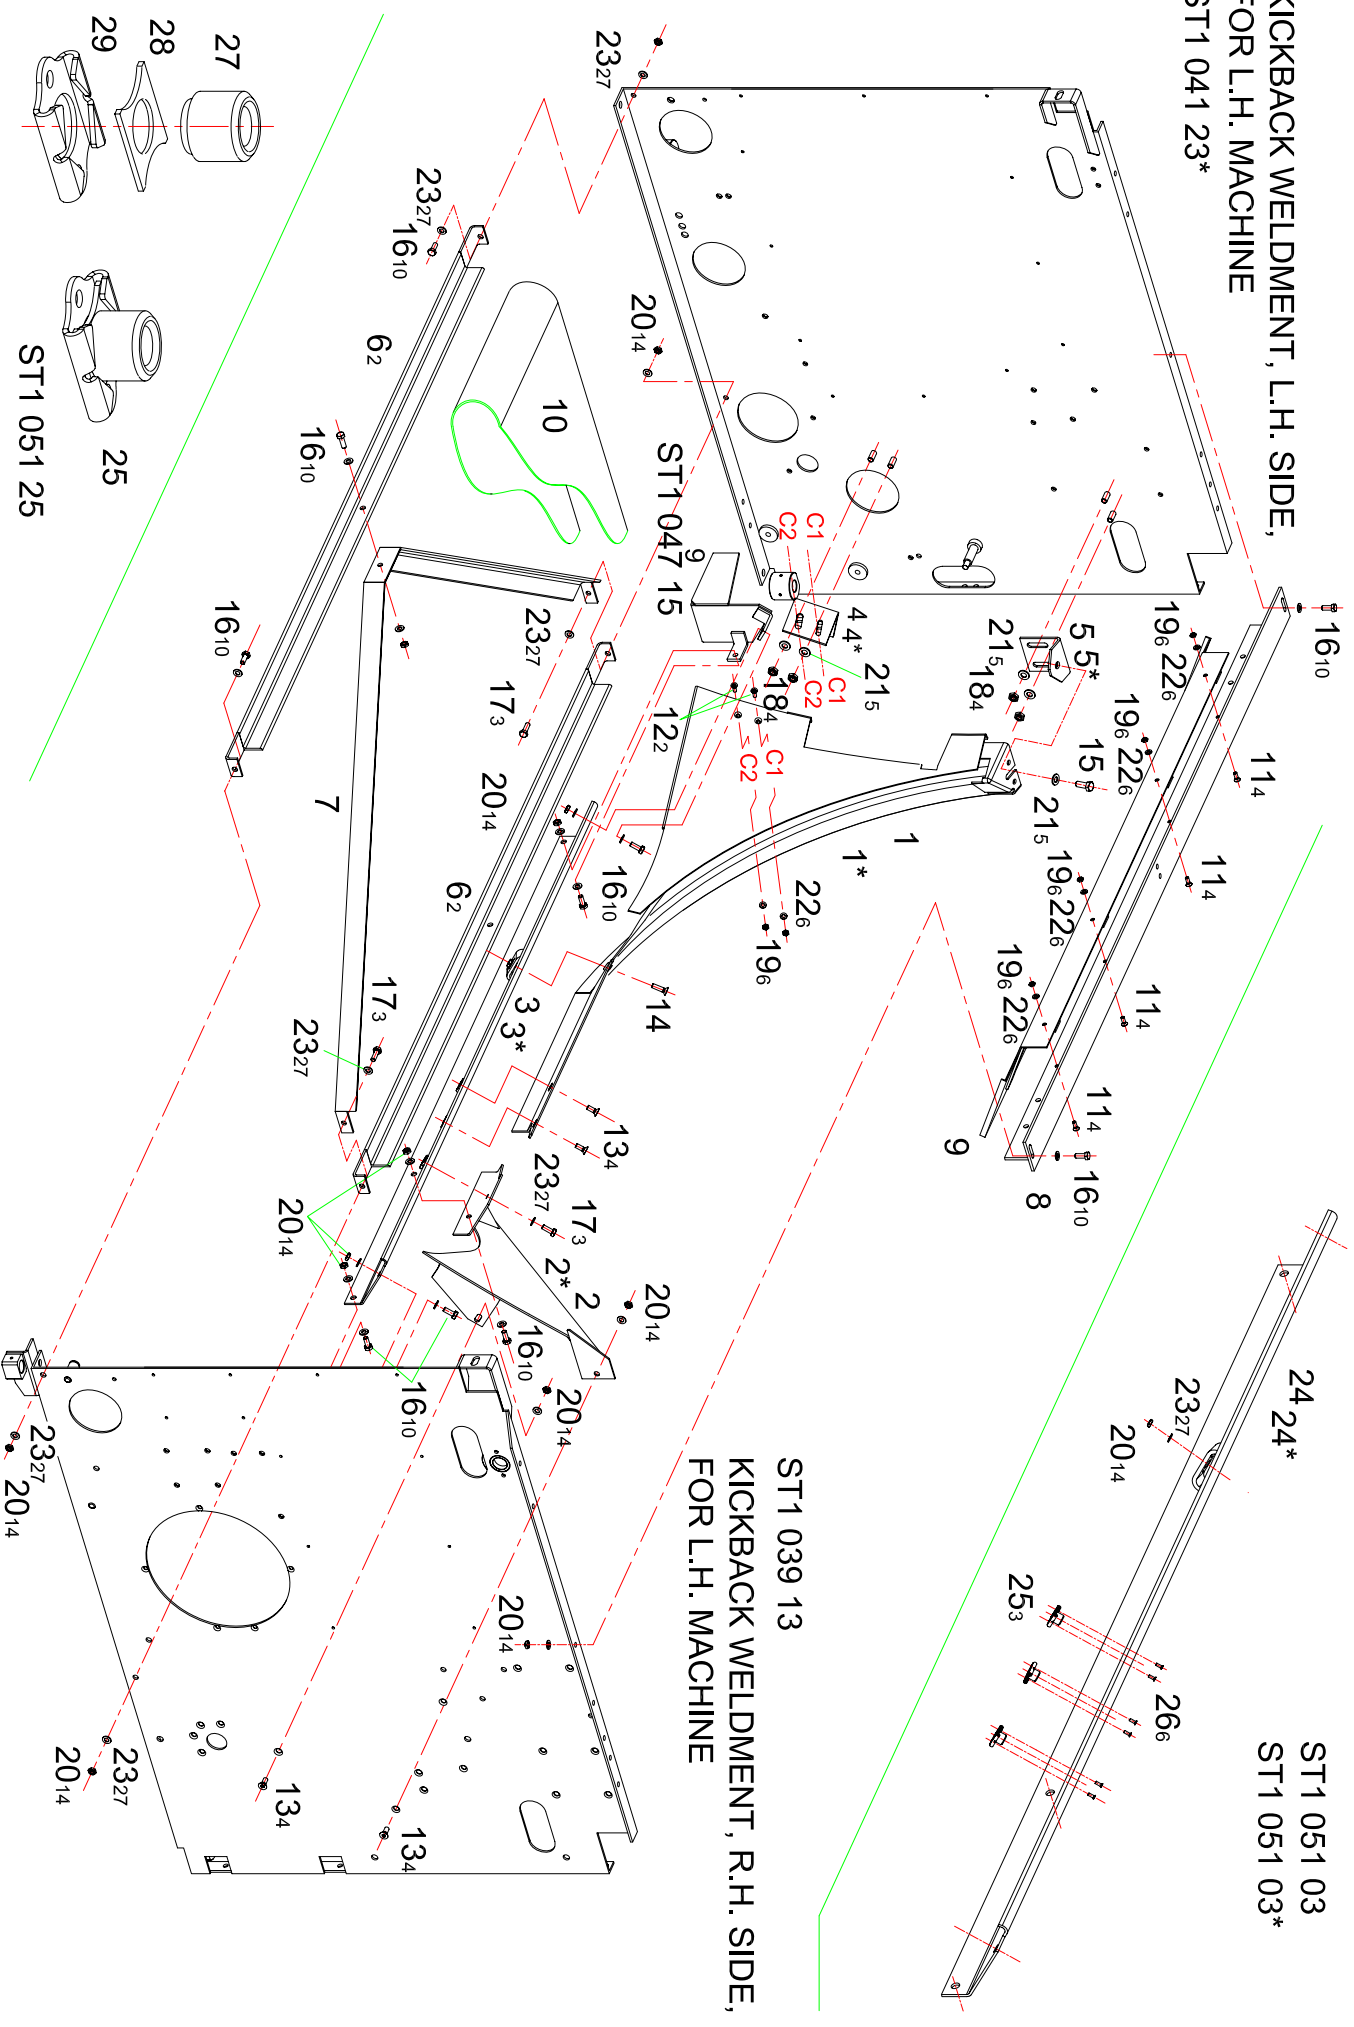




ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 051 01	L.H. PLOW & MAT WELDMENT-LARGE	27	ST1 051 27	SPECIAL NUT
1*	ST1 051 01*	R.H. PLOW & MAT WELDMENT-LARGE	28	ST1 051 28	RIVET JOINT PANNEL
2	ST1 051 02	L.H. PLOW & MAT WELDMENT-SMALL	29	ST1 051 29	CROOKED PANEL
2*	ST1 051 02*	R.H. PLOW & MAT WELDMENT-SMALL			
3	ST1 051 03	L.H. APRON ASSEMBLY			
3*	ST1 051 03*	R.H. APRON ASSEMBLY			
4	ST1 051 04	CLIP-BOTTOM L.H.			
4*	ST1 051 04*	CLIP-BOTTOM R.H.			
5	ST1 051 05	CLIP WELDMENT L.H.			
5*	ST1 051 05*	CLIP WELDMENT R.H.			
6	ST1 051 06	STRAP WELDMENT			
7	ST1 051 07	BRACE			
8	ST1 051 08	SUPPORT BRACKET			
9	ST1 051 09	PROTECTIVE PANEL WELDMENT			
10	ST1 051 10	CARPET BELT			
11	ST1 062 02	FLAT SOCKET CAP SCREW M6X16			
12	ST1 062 03	FLAT SOCKET CAP SCREW M6X20			
13	ST1 062 06	FLAT SOCKET CAP SCREW M8X20			
14	ST1 062 08	FLAT SOCKET CAP SCREW M8X40			
15	ST1 065 14	HEX CAP SCREW M10X25			
16	ST1 065 09	HEX CAP SCREW M8X20			
17	ST1 065 10	HEX CAP SCREW M8X25			
18	ST1 067 05	LOCK NUT M10			
19	ST1 067 03	LOCK NUT M6			
20	ST1 067 04	LOCK NUT M8			
21	ST1 076 06	FLAT WASHER Ø10			
22	ST1 076 03	FLAT WASHER Ø6			
23	ST1 076 04	FLAT WASHER Ø8			
24	ST1 051 24	L.H. APRON			
24*	ST1 051 24*	R.H. APRON			
25	ST1 051 25	SPECIAL NUT ASSEMBLY			
26	ST1 072 01	RIVET 3X8			

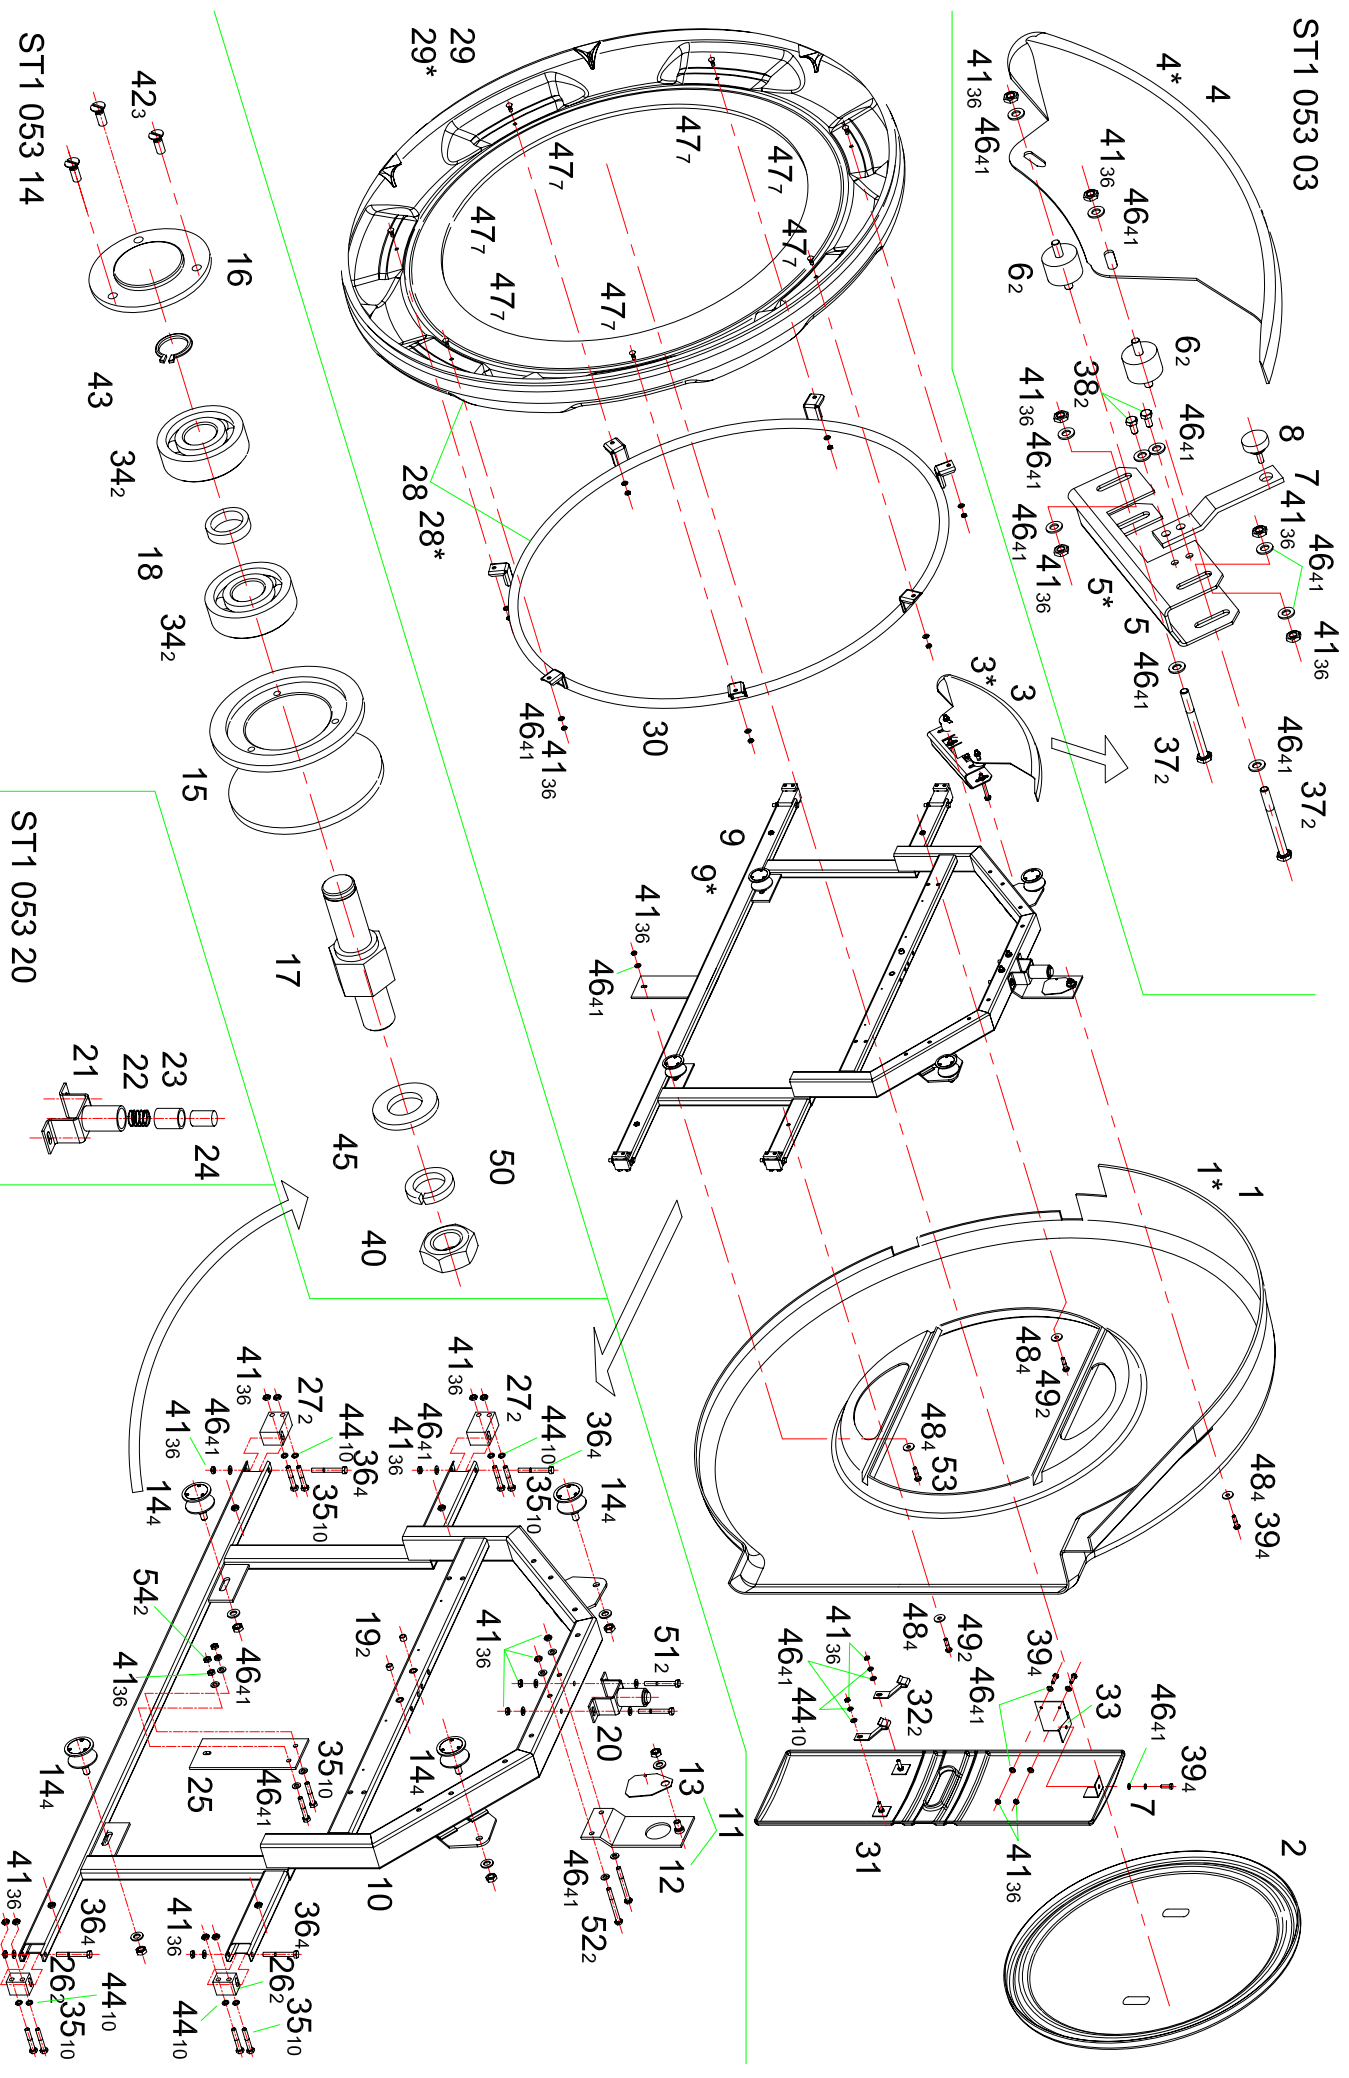

PIN ELEVATOR WHEEL ASSEMBLY ST1 053 00 (00*)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 053 01	WHELL GUARD, L.H.	27	ST1 053 27	HINGE BLOCK, SIDE OPPOSITE
1*	ST1 053 01*	WHELL GUARD, R.H.			BALL EXIT
2	ST1 053 02	WHELL WINDOW	28	ST1 053 28	PIN WHELL ASSEMBLY, L.H.
3	ST1 053 03	RAIL ASSEMBLY, L.H.	28*	ST1 053 28*	PIN WHELL ASSEMBLY, R.H.
3*	ST1 053 03*	RAIL ASSEMBLY, R.H.	29	ST1 053 29	PIN WHELL WELDMENT, L.H.
4	ST1 053 04	RAIL, L.H.	29*	ST1 053 29*	PIN WHELL WELDMENT, R.H.
4*	ST1 053 04*	RAIL, R.H.	30	ST1 053 30	RING WELDMENT
5	ST1 053 05	PIN HOLDER BRACKET MOUNT, L.H.	31	ST1 053 31	RECTANGULAR GUARD
5*	ST1 053 05*	PIN HOLDER BRACKET MOUNT, R.H.	32	ST1 053 32	HANGER
6	ST1 053 06	RUBBER SPACER MOUNT	33	ST1 053 33	BRACKET WELDMENT
7	ST1 053 07	BRACKET	34	ST1 063 09	BEARING 201
8	ST1 013 29	BUMPER	35	ST1 064 12	HEX CAP SCREW M8X50
9	ST1 053 09	ELEVATOR SUPPORT ASSEMBLY, L.H.	36	ST1 064 15	HEX CAP SCREW M8X65
9*	ST1 053 09*	ELEVATOR SUPPORT ASSEMBLY, R.H.	37	ST1 064 17	HEX CAP SCREW M8X75
10	ST1 053 10	ELEVATOR SUPPORT FRAME	38	ST1 065 09	HEX CAP SCREW M8X20
		WELDMENT, L.H.	39	ST1 065 10	HEX CAP SCREW M8X25
11	ST1 053 11	UPPER BRACKET ASSEMBLY	40	ST1 067 06	LOCK NUT M12
12	ST1 053 12	BRACKET WELDMENT	41	ST1 067 04	LOCK NUT M8
13	ST1 053 13	COVER	42	ST1 068 01	BOLT M3X8
14	ST1 053 14	ROLLER ASSEMBLY	43	ST1 074 03	RAITAINING RING Ø12
15	ST1 053 15	ROLLER	44	ST1 075 04	SPRING WASHER Ø8
16	ST1 053 16	END COVER	45	ST1 076 07	FLAT WASHER Ø12
17	ST1 053 17	SHAFT	46	ST1 076 04	FLAT WASHER Ø8
18	ST1 053 18	BUSHING	47	ST1 061 02	SEMICIRCLE HEAD SQUARE SCREW M8X15
19	ST1 053 19	BUSHING	48	ST1 076 09	WASHER Ø12
20	ST1 053 20	OILER ASSEMBLY	49	ST1 064 11	HEX CAP SCREW M8X40
21	ST1 053 21	OILER BRACKET WELDMENT	50	ST1 075 06	SPRING WASHER Ø12
22	ST1 053 22	SPRING	51	ST1 064 13	HEX CAP SCREW M8X55
23	ST1 053 23	OILER BODY	52	ST1 064 18	HEX CAP SCREW M8X80
24	ST1 053 24	WICK	53	ST1 064 10	HEX CAP SCREW M8X30
25	ST1 053 25	DOWN BEACKET	54	ST1 066 15	ACORN NUT M8
26	ST1 053 26	HINGE BLOCK, BALL EXIT SIDE			

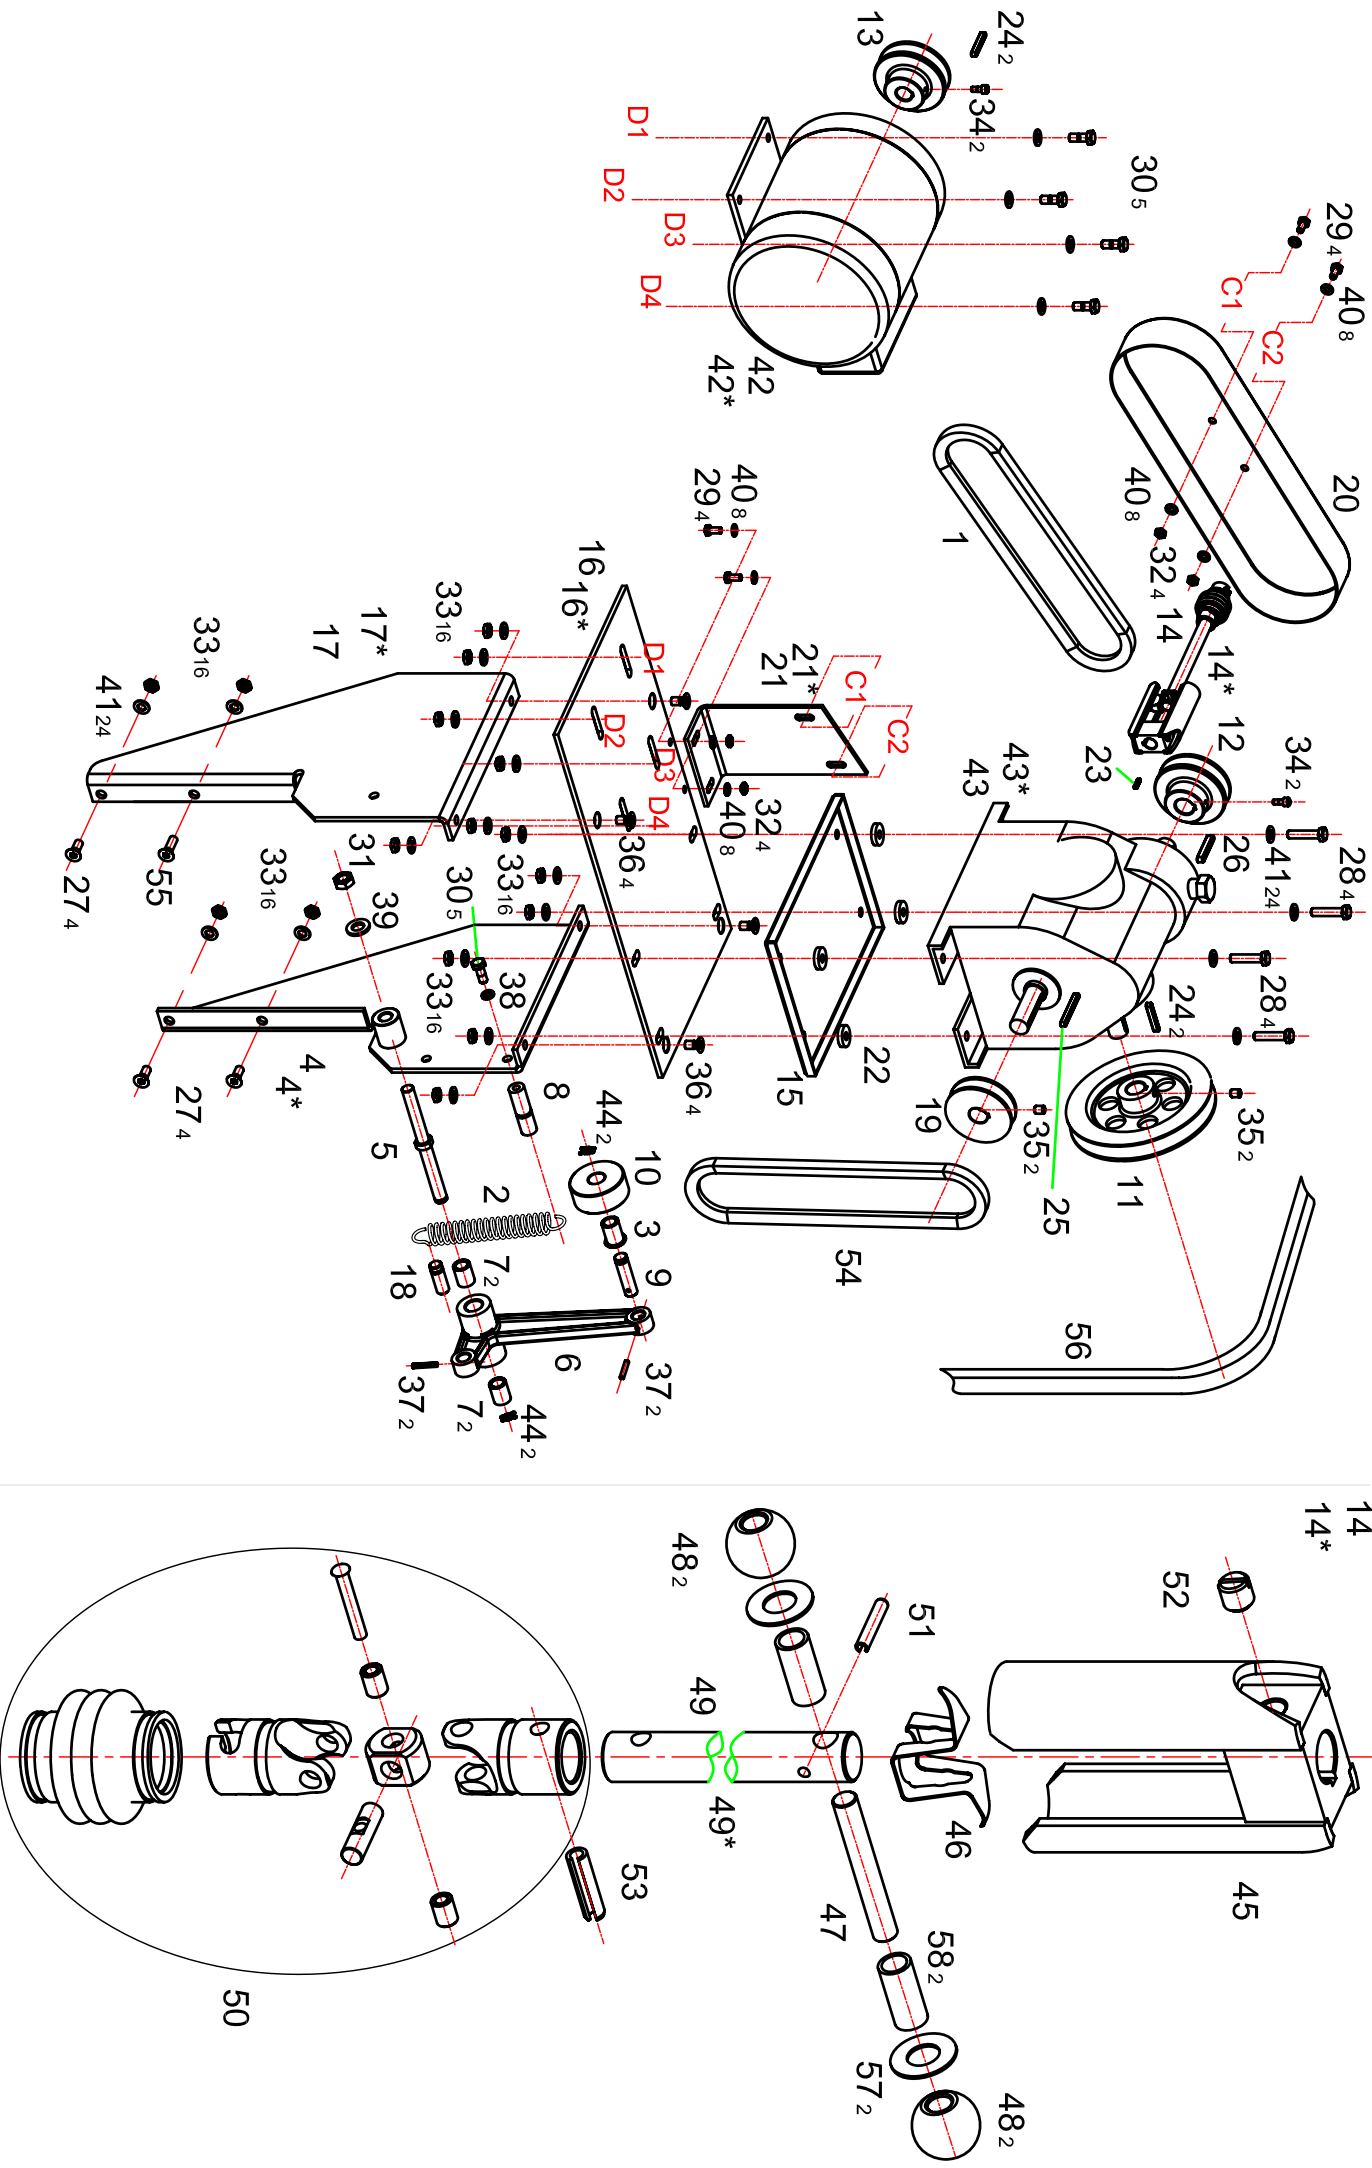




BACK END MOTOR MOUNT BRACKET ASSEMBLY ST1 055 00 (00*)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	ST1 055 01	BELT A27"	30	ST1 065 09	HEX CAP SCREW M8X20
2	ST1 055 02	SPRING	31	ST1 067 06	LOCK NUT M12
3	ST1 055 03	FLANGE BUSHING	32	ST1 067 03	LOCK NUT M6
4	ST1 055 04	BRACKET WELDMNT I, L.H.	33	ST1 067 04	LOCK NUT M8
4*	ST1 055 04*	BRACKET WELDMNT I, R.H.	34	ST1 069 02	SOCKET HEAD CAP SCREW M5X12
5	ST1 055 05	SHAFT	35	ST1 070 07	SOCKET SET SCREW M8X10
6	ST1 055 06	BELT TIGHTENER ARM	36	ST1 080 15	FLAT COUNTERSUNK HEAD SCREW M8X20
7	ST1 055 07	SLEEVE BEARING	37	ST1 073 07	ROLL PIN Ø4X24
8	ST1 055 08	PIN	38	ST1 075 04	SPRING WASHER Ø8
9	ST1 055 09	PIN	39	ST1 076 07	FLAT WASHER Ø12
10	ST1 055 10	PULLEY	40	ST1 076 03	FLAT WASHER Ø6
11	ST1 055 11	PULLEY	41	ST1 076 04	FLAT WASHER Ø8
12	ST1 055 12	SHEAVE	42	ST1 055 42	MOTOR (380V 50Hz)
13	ST1 055 13	PIN ELEVATOR SHEAVE, FOR 50Hz	42*	ST1 055 42*	MOTOR (220V 60Hz)
14	ST1 055 14	DIST. DRIVE SHAFT ASSEMBLY, L.H.	43	ST1 055 43	GEARBOX, L.H.
14*	ST1 055 14*	DIST. DRIVE SHAFT ASSEMBLY, R.H.	43*	ST1 055 43*	GEARBOX, R.H.
15	ST1 055 15	BACK END MOTOR DRIP PAN	44	ST1 049 52	X WASHER
16	ST1 055 16	MOTOR MOUNT PANEL, L.H.	45	ST1 055 45	DISTRIBUTOR DRIVE HOUSING
16*	ST1 055 16*	MOTOR MOUNT PANEL, R.H.	46	ST1 055 46	BALL BEARING RETAINER
17	ST1 055 17	BRACKET WELDMNT II, L.H.	47	ST1 055 47	PIN
17*	ST1 055 17*	BRACKET WELDMNT II, R.H.	48	ST1 055 48	BALL BEARING
18	ST1 055 18	PIN	49	ST1 055 49	DISTRIBUTOR DRIVE SHAFT, L.H.
19	ST1 055 19	BACK END DRIVE SHEAVE	49*	ST1 055 49*	DISTRIBUTOR DRIVE SHAFT, R.H.
20	ST1 055 20	SAFETY COVER	50	ST1 055 50	METAL UNIVERSAL JOINT
21	ST1 055 21	COVER BRACKET, L.H.	51	ST1 055 51	ROLL PIN Ø1/8"X3/4"
21*	ST1 055 21*	COVER BRACKET, R.H.	52	ST1 070 07	SOCKET SET SCREW M8X10
22	ST1 055 22	PAPER WASHER	53	ST1 055 53	ROLL PIN Ø3/16"X3/4"
23	ST1 060 01	KEY 15X3X4	54	ST1 055 54	BELT A37"
24	ST1 060 04	KEY 35X5X5	55	ST1 062 07	FLAT SOCKET CAP SCREW M8X25
25	ST1 060 06	KEY 50X5X5	56	ST1 055 56	PIN WHEEL BELT
26	ST1 060 08	KEY 40X6X6	57	ST1 055 57	FLAT WASHER Ø16
27	ST1 062 06	FLAT SOCKET CAP SCREW M8X20	58	ST1 055 58	SPACER
28	ST1 064 11	HEX CAP SCREW M8X40			
29	ST1 065 05	HEX CAP SCREW M6X20			

ITEM	PART NO.	DESCRIPTION
1	ST1 057 01	BAFFLE
2	ST1 057 02	LAMP HOLDER
3	ST1 057 03	NEON GLOW 30W
4	ST1 057 04	LENS
5	ST1 057 05	COVER
6	ST1 057 06	NEON WHITE 30 W
7	ST1 057 07	CABLE GLAND
8	ST1 057 08	WASHER Ø4
9	ST1 057 09	BOTTOM SCREW M4x15
10	ST1 057 10	LOCK NUT M4
11	ST1 057 11	PLASTIC WASHER
12	ST1 057 12	BOTTOM SCREW M4X20
13	ST1 057 13	CABLE 3X0,75 MM²
14	ST1 005 37	LIGHT BRACKET LHS
15	ST1 005 38	LIGHT BRACKET RHS
16	ST1 075 03	SPRING WASHER Ø6
17	ST1 066 04	NUT M6
18	ST1 076 03	FLAT WASHER Ø6
19	ST1 065 05	HEX CAP SCREW M6X20

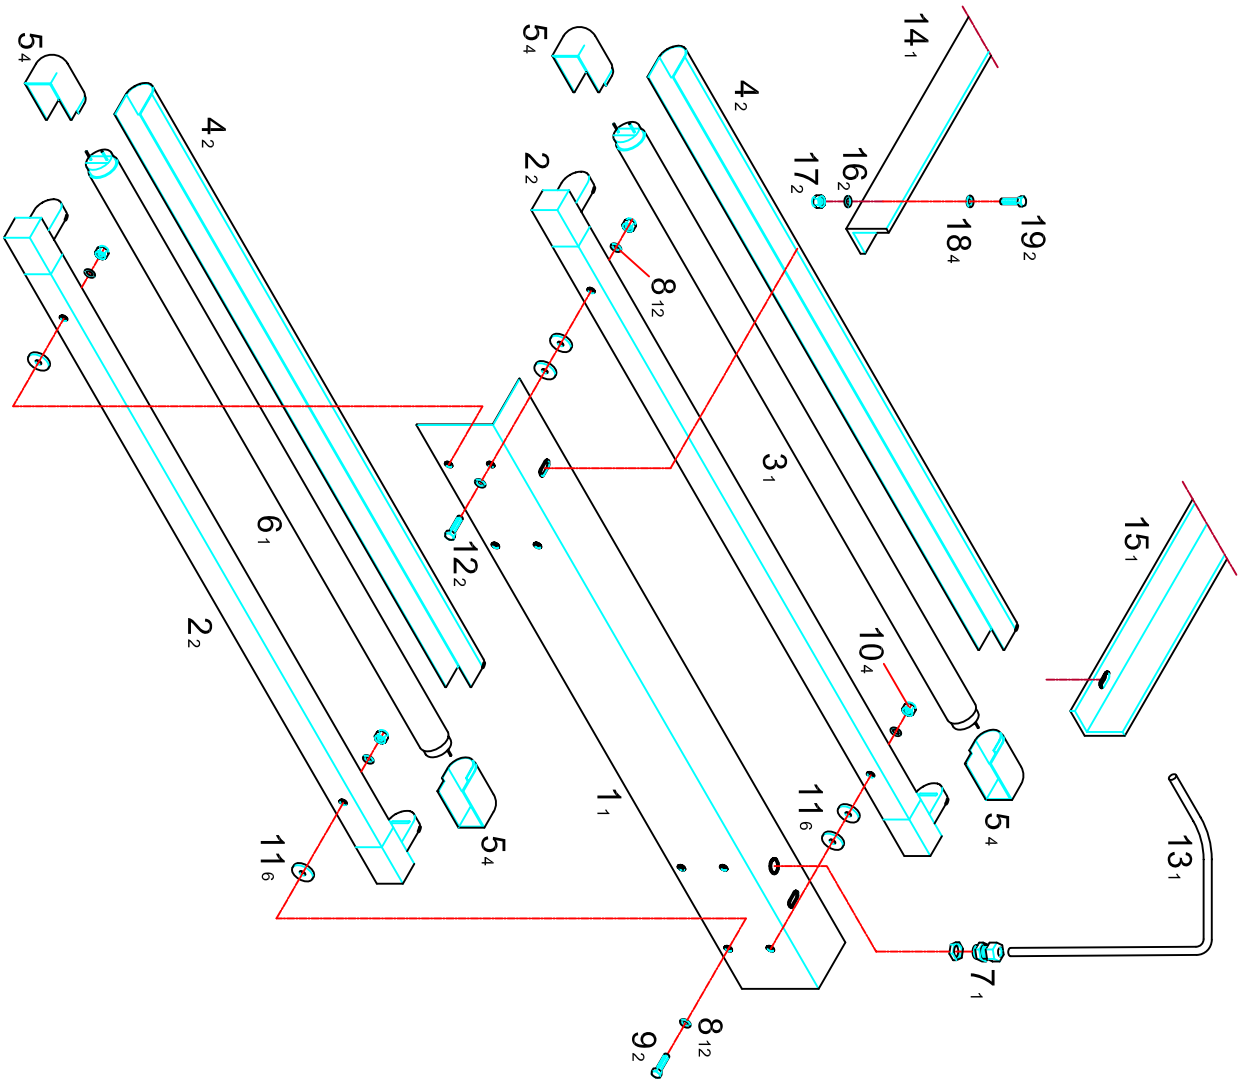

DESCRIPTION	CODE	PAGE
LONG UNISTRUCT	ST1 001 01	2-4
FRAME BRACE WELDMENT L.H.	ST1 001 05	2-4
FRAME BRACE WELDMENT R.H.	ST1 001 06	2-4
UNISTRUCT NUT	ST1 001 07	2-4
SPECIAL WASHER	ST1 001 08	2-4
SPECIAL BOLT	ST1 001 09	2-4
SPECIAL WASHER	ST1 001 10	2-4
GUARD L.H.	ST1 001 12	2-4
GUARD R.H.	ST1 001 13	2-4
HINGE	ST1 001 14	2-4
CENTER PLATFORM	ST1 001 15	2-4
BRACKET	ST1 001 17	2-4
BRACKET	ST1 001 18	2-4
BRACKET	ST1 001 19	2-4
SIDE FRAME L.H.	ST1 001 20	2-4
SIDE FRAME R.H.	ST1 001 21	2-4
END CAP	ST1 001 23	2-4
END CAP	ST1 001 24	2-4
CROSSBEAM WELDMENT	ST1 001 25	2-4
BRACKET	ST1 001 29	2-4
BRACKET	ST1 001 32	2-4
BRACKET	ST1 001 33	2-4
NORMAL BRACKET	ST1 001 34	2-4
LONG BRACKET	ST1 001 35	2-4
SHORT BRACKET	ST1 001 36	2-4
FIXING PANEL R.H.	ST1 001 40	2-4
FIXING PANEL L.H.	ST1 001 41	2-4
NORMAL BRAKET	ST1 001 42	2-4
NARROW PLATFORM	ST1 001 43	2-4
FRONT END DRIVE ASSEMBLY	ST1 005 00	5-6
TABLE DRIVE ASSEMBLY	ST1 005 01	6-7-8

SOLENOID OPERATED SHUTTLE ASS.	ST1 005 02	6-9-10
HOUSING WELDMENT	ST1 005 03	6-12
ROLL PIN Ø10X62	ST1 005 04	6-10
ROLL PIN Ø8X9	ST1 005 05	6-12
BALL JOINT	ST1 005 06	6
CROSSBEAM WELDMENT	ST1 005 07	6-12
SPRING	ST1 005 08	6
SPRING HANGER	ST1 005 09	6
SPRING HANGER PIN	ST1 005 10	6
CONFINE PANEL	ST1 005 11	6
CLAMP STUD	ST1 005 12	6-12
SWITCH LEVER ASSY	ST1 005 13	6-12
SPRING	ST1 005 14	6-12
SHAFT	ST1 005 15	6-12
SPECIAL BOLT M10X183	ST1 005 16	6
FLANGE BUSHING	ST1 005 17	6
FLANGE BUSHING	ST1 005 18	6
ALTERNATE LATCH ASSY	ST1 005 19	6
RESPOT ARM LINK ASSY	ST1 005 20	6
SPOTTING ARM SHAFT	ST1 005 21	6
FLANGE BUSHING	ST1 005 22	6
BRACKET	ST1 005 23	6
STOP LINK PIN	ST1 005 24	6
MICRO-SWITCH Z-15G-B	ST1 005 25	6-12
SPOTTING ARM LINK ASSEMBLY	ST1 005 26	6
UPPER SPOTTING LINK ASSEMBLY	ST1 005 27	6
FLANFE MOTOR	ST1 005 28	6
SPOT & RESPOT CAM HUB CAP	ST1 005 29	6
SPOT & RESPOT CAM	ST1 005 30	6
SHUTTLE CAM HUB CAP	ST1 005 31	6
SHUTTLE CAM	ST1 005 32	6
TABLE CAM WELDMENT	ST1 005 33	6

BEARING RETAINER	ST1 005 34	6-12
TABLE DRIVE SHAFT	ST1 005 35	6
SWEEP DRIVE ASSEMBLY	ST1 005 36	6-11-12
LIGHT BRACKET	ST1 005 37	6-57
LIGHT BRACKET	ST1 005 38	6-57
X WASHER	ST1 005 39	6-12
CAM FOLLOWER CF10KZ	ST1 005 40	6-10
FLANGE	ST1 005 41	6
MOTOR SWITCH ASSY (380V 50Hz)	ST1 005 47	6
MOTOR SWITCH ASSY (220V 60Hz)	ST1 005 47*	6
STATOR (380V 50Hz)	ST1 005 59	6
STATOR (220V 60Hz)	ST1 005 59*	6
HOUSING WELDMENT	ST1 005 73	6
CRANK HOUSING & CUP	ST1 007 01	8
SPRING	ST1 007 02	8
PIVOT PIN	ST1 007 03	8
LATCH	ST1 007 04	8
ARM LATCH	ST1 007 05	8
PIN	ST1 007 06	8
PIN	ST1 007 07	8
SPRING	ST1 007 08	8
ROLLER	ST1 007 09	8
SHOULDER SCREW	ST1 007 10	8
SLEEVE BUSHING	ST1 007 11	8
LINK HUB WELDMENT ASSY	ST1 007 12	8
LINK	ST1 007 13	8
FLANGE BUSHING	ST1 007 14	8
DISC SPRING	ST1 007 15	8
TABLE DRIVE ECCENTRIC	ST1 007 16	8
CAM BALL ASSEMBLY	ST1 007 17	8
SPACER	ST1 007 18	8
SPACER	ST1 007 19	8

ROD END	ST1 007 20	8
YOKE WELDMENT	ST1 007 21	8
X WASHER	ST1 007 22	8-10-24-27-50
SELEEVE BUSHING	ST1 007 35	8
PIN	ST1 009 01	10
LINK ASSY	ST1 009 02	10
FLANGE BUSHING	ST1 009 03	10
LINK ASSY	ST1 009 04	10
KIT LINK REPL. ASSY	ST1 009 05	10
PIN	ST1 009 06	10
SHAFT	ST1 009 07	10
FLANGE BUSHING	ST1 009 08	10
CLAMP STUD	ST1 009 09	10
SPRING LINK ASSEMBLY	ST1 009 10	10
ROLL PIN Ø4X22	ST1 009 11	10
SHAFT	ST1 009 12	10
LEVER	ST1 009 13	10
FLANGE BUSHING	ST1 009 14	10
SHAFT ASSY	ST1 009 15	10
COLLAR	ST1 009 16	10
SPACER	ST1 009 17	10
CLAMP STUD	ST1 009 18	10
SHAFT	ST1 009 19	10
KEY 12X3X4	ST1 009 20	10
CAM LINK	ST1 009 21	10
FLANGE BUSHING	ST1 009 22	10
STOP LEVER	ST1 009 23	10
SPRING	ST1 009 24	10
SPRING CLIP	ST1 009 25	10
RUBBER BUMPER	ST1 009 27	10-14-32-34
SOLENOID (220V 50Hz)	ST1 009 46	10
SPRING	ST1 009 47	10

SPECIAL WASHER	ST1 009 48	10
SPRING LINK OUTSIDE	ST1 009 49	10
SPRING LINK	ST1 009 50	10
SWEEP DRIVR SHAFT	ST1 011 01	12
CAM WELDMENT SWEEP	ST1 011 02	12
CAM WELDMENT SWEEP	ST1 011 03	12
CRANK ARM	ST1 011 04	12
BIN ASSEMBLY	ST1 013 00	13-14
SHUTTLE ASSEMBLY (NOT SHOW)	ST1 013 01	14
CHANNEL WELDMENT	ST1 013 02	14
BRACKET SUPPORT	ST1 013 03	14
ROD	ST1 013 04	14
PIN GUIDE L.H.	ST1 013 05	14
PIN GUIDE R.H.	ST1 013 06	14
TRACK ASSEMBY R.H.	ST1 013 07	14
TRACK ASSEMBY L.H.	ST1 013 08	14
BRACKET ASSY	ST1 013 09	14
CHANNEL SHORT	ST1 013 10	14
BRACKET WELDMENT R.H.	ST1 013 11	14
BRACKET WELDMENT L.H.	ST1 013 12	14
BEARING	ST1 013 13	14
LEVER BIN	ST1 013 14	14
STUD CLAMP	ST1 013 15	14
LONG TUBE	ST1 013 16	14
ROD	ST1 013 17	14
TUBE	ST1 013 18	14
SPECIAL WASHER Ø11	ST1 013 19	14
SPRING	ST1 013 20	14
TUBE PLUG	ST1 013 21	14
SPACER PIN GUIDE #4 & #6	ST1 013 22	14
SPACER PIN BUT GUIDE	ST1 013 23	14
STRINGER CENTER R.H. & L.H.	ST1 013 24	14

STRINGER CENTER R.H. & L.H.	ST1 013 25	14
SWITCH ACTUATOR	ST1 013 26	14
FLANGE BUSHING	ST1 013 27	14
SPACER	ST1 013 28	14-30
BUMPER	ST1 013 29	13-54
PIN HEAD BRACKET	ST1 013 30	14
STRINGER CENTER R.H. & L.H.	ST1 013 31	14
STRINGER CENTER R.H. & L.H.	ST1 013 32	14
PIN GUIDE	ST1 013 33	14
SPACER PIN HEAD GUIDE	ST1 013 34	14
STRINGER OUTSIDE R.H.	ST1 013 35	14
STRINGER OUTSIDE L.H.	ST1 013 36	14
SHOCK MOUNT	ST1 013 37	14
SLEEVE BUSHING	ST1 013 38	14
SHAFT	ST1 013 39	14
WASHER THRUST OILITE Ø22	ST1 013 40	14
SHUTTLE OPERATING ARM	ST1 013 41	14
GUIDE PIN #1	ST1 013 42	14
PIN GUIDE	ST1 013 43	14
PIN GUIDE	ST1 013 44	14
SPRING	ST1 013 45	14
SPRING	ST1 013 46	14
BRACKET WELDMENT	ST1 013 47	14
SPECIAL WASHER Ø7	ST1 013 48	14
RUBBER SPACER	ST1 013 49	14
SPECIAL KEY 25X5X5	ST1 013 50	14-20
MICRO SWITCH Z-15GD-B	ST1 013 67	14-22
ROD END BEARING BNF-8	ST1 013 68	14-36
SPHERICAL BEARING SCP-10F	ST1 013 69	14
ROD END BEARING BNM-10	ST1 013 70	14-18-22-26
STAR WASHER Ø5	ST1 013 78	14
PHILIPS HEAD TRUSS SCREW M5X25	ST1 013 79	14

SHUTTLE LINK ASSY	ST1 013 80	14
SHUTTLE ASSEMBLY	ST1 015 00	15-16
TUBE CROSS (SHORT)	ST1 015 01	16
CLAMP END	ST1 015 02	16
TUBE OUTSIDE	ST1 015 03	16
TUBE SIDE (LONG)	ST1 015 04	16
TUBE CENTER	ST1 015 05	16
PIN OLDER	ST1 015 06	16
BIN STRAP	ST1 015 07	16
TUBE SIDE (SHORT)	ST1 015 08	16
BRACKET ARM Ø8	ST1 015 09	16
BRACKET ARM Ø10	ST1 015 10	16
SHUTTLE CROSS TUBE (LONG)	ST1 015 11	16
STRIP	ST1 015 12	16
SWEEP ASSEMBLY	ST1 017 00	17-18
SADDLE	ST1 017 01	18
"U" BOLT	ST1 017 02	18
SHAFT MAIN PIVOT	ST1 017 03	18
STABILIZING LINK ASSY	ST1 017 04	18
DRIVE LINK ASSY	ST1 017 05	18
SPECIAL BOLT	ST1 017 06	18
LINK ASSY	ST1 017 07	18
BUMPER	ST1 017 08	18
SWEEP ROCK ARM WELDMENT	ST1 017 09	18
SPECIAL BOLT M12X70	ST1 017 10	18
PIN BEARING	ST1 017 11	18
TUBE	ST1 017 12	18
SUPPORT LINK ASSY	ST1 017 14	18
PIN BEARING	ST1 017 15	18
SWEEP BAR ASSEMBLY	ST1 017 16	18
FLANGE BUSHING	ST1 017 17	18
SHOCK MOUNT	ST1 017 19	18

SLEEVE BUSHING	ST1 017 21	18
PILLOW BLOCK ASSY	ST1 017 22	18-22
CLAMP BAR	ST1 017 23	18
TUBE	ST1 017 24	18
FLANGE BUSHING	ST1 017 25	18
FLANGE BUSHING	ST1 017 26	18
SPACER MAIN PIVOT LONG	ST1 017 29	18
FLANGE BUSHING	ST1 017 30	18
SPACER MAIN PIVOT SHORT	ST1 017 31	18
TELESCOPING LINK ASSEMBLY	ST1 017 32	18
THREADED LINK	ST1 017 34	18
SHOCK MOUNT BRACKET	ST1 017 35	18
BRASS SLEEVE	ST1 017 36	18-22
BUSHING	ST1 017 37	18
ROD END BEARING BNF-10	ST1 017 43	18
CAP SWEEP BAR	ST1 017 45	18
BUMPER	ST1 017 46	18
ROD END BEARING BNM-12	ST1 017 47	18
ROD END BEARING L.H. BNM-12L	ST1 017 48	18
PILLOW BLOCK CAP	ST1 017 49	18-22
PILLOW BLOCK BASE	ST1 017 50	18-22
ROD END BEARING L.H. BNM-10L	ST1 017 53	18-22-26
TELESCOPING SLEEVE WELDMENT	ST1 017 55	18
ROD	ST1 017 58	18
SWEEP BAR	ST1 017 63	18
SWEEP BRACKET L.H.	ST1 017 64	18
SWEEP BRACKET R.H.	ST1 017 65	18
YOKE AND SPOTTING CUP ASSEMBLY	ST1 019 00	19-20
STUD SPRING	ST1 019 01	20-50
SPRING	ST1 019 02	20
SPOTTING CUP	ST1 019 03	20
SPOTTING CUP LINER	ST1 019 04	20

YOKE ASSY	ST1 019 05	20
SPRING L.H.	ST1 019 06	20
ACTUATOR ARM	ST1 019 07	20
SHAFT #1	ST1 019 08	20
COLLAR WITH SET SCREW	ST1 019 10	20
LEG ASSY	ST1 019 11	20
SPACER	ST1 019 12	20
SPECIAL BOLT M16X70	ST1 019 13	20
SPOTTING CUP CAP	ST1 019 14	20
"U" BOLT	ST1 019 15	20
LEVER INNER	ST1 019 16	20
LEG REAR ASSY	ST1 019 17	20
BEARING	ST1 019 18	20-22
PIN	ST1 019 19	20
FLANGE BUSHING	ST1 019 20	20-26
SPRING R.H.	ST1 019 21	20
SPECIAL BOLT M6X33	ST1 019 22	20
THRUST WASHER Ø8	ST1 019 23	20
LINK ASSY	ST1 019 24	20
FLANGE BUSHING	ST1 019 25	20
SHAFT #4	ST1 019 26	20
SHAFT #3	ST1 019 27	20
LEVER OUTER	ST1 019 28	20
SHAFT #2	ST1 019 29	20
SPRING COLLAR	ST1 019 30	20
SPRING SLEEVE YOKE	ST1 019 31	20
SPACER	ST1 019 32	20
SPHERICAL BUSHING	ST1 019 33	20
RUBBER WASHER	ST1 019 34	20
SPOT AND RESPOT CONTROL ASSEMBLY	ST1 021 00	21-22
TABLE CASTING	ST1 021 01	22-26
TABLE SUPPORT WELDMENT	ST1 021 02	22

TABLE SUPPORT WELDMENT L.H	ST1 021 05	22
TORQUE-TUBE WELDMENT	ST1 021 11	22
SPACER	ST1 021 13	22
SPACER	ST1 021 14	22
SPACER	ST1 021 19	22
SPECIAL BOLT M12X63	ST1 021 22	22
SLEEVE	ST1 021 24	22
FLANGE BUSHING	ST1 021 25	22
TIE ROD	ST1 021 29	22
PIN	ST1 021 33	22
SPRING	ST1 021 34	22
SPECIAL BOLT M16X100	ST1 021 37	22
X WASHER	ST1 021 38	22
SPHERIAL BEARING	ST1 021 39	22
SPRING	ST1 021 44	22
LEVER	ST1 021 45	22
WASHER Ø32	ST1 021 46	22
TABLE WIREWAY ASSEMBLY	ST1 023 00	23-24
FLANGE BUSHING	ST1 023 02	24-27
PIN	ST1 023 03	24
PIN	ST1 023 05	24-26
CLIP	ST1 023 06	24
LEVER RESPOT ASSY	ST1 023 07	24
LINK	ST1 023 09	24
LINK	ST1 023 10	24
LINK	ST1 023 11	24
LEVER RESPOT ASSY	ST1 023 12	24
LINK RESPOT CONNECTOR	ST1 023 13	24
LINK	ST1 023 14	24
SPACER BUSHING	ST1 023 15	24
PIN	ST1 023 16	24
LINK	ST1 023 17	24

BALL STUD	ST1 023 18	24
TABLE ASSEMBLY	ST1 025 00	25-26
BRACKER	ST1 025 03	26
SLEEVE BUSHING	ST1 025 04	26
SHAFT	ST1 025 05	26
BUSHING	ST1 025 07	26
SHAFT	ST1 025 08	26
SPECIAL NUT M22	ST1 025 09	26
SLEEVE BUSHING	ST1 025 10	26
SPECIAL BOLT M8X61	ST1 025 11	26
STOP RESPOT	ST1 025 13	26
ACTUATING LINK ASSY	ST1 025 21	26
SPECIAL BOLT M5X25	ST1 025 22	26
CAM FOLLOWER CF8	ST1 025 23	26
LEVER ASSEMBLY SPOT ASSY	ST1 025 24	26
LINK AND BEARING ASSEMBLY	ST1 025 26	26
CAM LINK BEARING ASSEMBLY	ST1 025 27	26
PIN	ST1 025 31	26
FINGER LEVER ASSEMBLY	ST1 025 32	26
FINGER LINK	ST1 025 34	26
PIVOT WELDMENT	ST1 025 35	26
ROD END BEARING L.H. BNF-6L	ST1 025 36	26
ROD END BEARING BNF-6	ST1 025 37	26
LINK	ST1 025 38	26
TIE ROD	ST1 025 47	26
TIE ROD	ST1 025 48	26
SPRING	ST1 025 49	26
SPRING	ST1 025 50	26
CELL ASSEMBLY-RESPOT	ST1 027 00	27
BUMPER	ST1 027 01	27
RESPOT CELL FRAME WELDMENT	ST1 027 02	27
FINGER	ST1 027 03	27

INSERT	ST1 027 04	27
RIVET	ST1 027 05	27
ARM RESPOT YOKE	ST1 027 06	27
PLATE ASSY	ST1 027 07	27
YOKE ARM ASSEMBLY	ST1 027 08	27
INSERT ASSEMBLY	ST1 027 09	27
FLANGE BUSHING	ST1 027 10	27
STOP SCREW M4X12	ST1 027 11	27
SPRING	ST1 027 12	27
STUD-LONG	ST1 027 13	27
STUD-SHORT	ST1 027 14	27
WASHER Ø6	ST1 027 15	27
SHAFT	ST1 027 16	27
LEVER RESPOT	ST1 027 17	27
STUD-PIVOT	ST1 027 18	27
SPACER	ST1 027 19	27
BUSHING	ST1 027 20	27
DISTRIBUTOR ASSEMBLY	ST1 028 00	28
MAIN SUPPORT ASSEMBLY	ST1 028 01	28-29-30
TUBE ASSEMBLY	ST1 028 02	28-31-32
SUPPORT ASSEMBLY	ST1 028 03	28-33
TRIP STOP SUPPORT ASSEMBLY	ST1 028 04	28-34
TRANSMISSION ASSEMBLY	ST1 028 05	28-35-36
SPECIAL NUT M5X7	ST1 028 06	28-32-36
CONNECTING PINS	ST1 028 09	28
MAIN CASTING	ST1 029 01	30
CARRIAGE SUPPORT TUBE	ST1 029 02	30
CARRIAGE SUPPORT CASTING	ST1 029 03	30
BELT TIGHT ASSEMBLY	ST1 029 04	30
PULLEY ASSEMBLY	ST1 029 05	30
PARTIALITY PULLEY ASSEMBLY	ST1 029 06	30
PULLEY ASSEMBLY	ST1 029 07	30

SPRING	ST1 029 08	30
CLAMP STUD	ST1 029 09	30-32
SUPPORT GUIDE L.H.	ST1 029 10	30
HEX HEAD CAP SCREW M6X140	ST1 029 11	30
SPACER INNER	ST1 029 12	30
BELT RUNNER REAR	ST1 029 13	30
ROLLER ASSEMBLY	ST1 029 14	30
SPACER OUTER	ST1 029 15	30
SUPPORT GUIDE R.H.	ST1 029 16	30
SPACER BEARING	ST1 029 17	30-36
SPRING POST SLEEVE	ST1 029 18	30
SPRING POST PIN	ST1 029 19	30
ORIENTOR PAN WELDMENT	ST1 029 20	30
SPYRALING BEARING Ø8	ST1 029 21	30
BEARING	ST1 029 22	30
BEARING BA 2016	ST1 029 23	30
THRUST BEARING Ø32	ST1 029 24	30
BEARING 9502H	ST1 029 35	30-32-36
TRACKING BRAKET	ST1 029 37	30
PULLEYASSY	ST1 029 38	30-32
TUBE-BELT TIGHTENER	ST1 029 39	30
SLEEVE BUSHING	ST1 029 40	30-32
SPRING POST SLEEVE	ST1 029 41	30-36
SPECIAL BOLT M6X100	ST1 029 42	30
LINK	ST1 029 43	30
BEARING	ST1 029 44	30
SLEEVE	ST1 029 48	30
SPECIAL WASHER	ST1 029 49	30
SHAFT	ST1 029 50	30
WHEEL SLEEVE	ST1 029 51	30
V STYLE PULLEY	ST1 029 52	30
PIN	ST1 029 53	30

PARTIALITY PIN	ST1 029 54	30
PIN	ST1 029 55	30
TRIP ARM ASEMBLY R.H.	ST1 031 04	32
FRONT CARRIAGE	ST1 031 05	32
TRIP ARM ASSEMBLY L.H.	ST1 031 06	32
BELT GUAED	ST1 031 08	32
PIN GUIDE	ST1 031 09	32
BELT RUNNER SUPPORT	ST1 031 10	32
BELT RUNNER BRACKET	ST1 031 11	32
TUBE	ST1 031 12	32
SPRING	ST1 031 13	32
COLLAR	ST1 031 14	32
TRIP ROCKER ARM WELDMENT ASSY	ST1 031 15	32
ROLLER	ST1 031 16	32
CONNECTING LINK	ST1 031 17	32
REAR CARRIAGE	ST1 031 18	32
TUBE MIDDLE	ST1 031 19	32
SHAFT	ST1 031 20	32
TUBE FRONT	ST1 031 21	32
CLAMP STUD	ST1 031 23	32
LINK	ST1 031 24	32
SHAFT	ST1 031 25	32
KEY 14X2X3	ST1 031 27	32
END FITTING BNF-5	ST1 031 41	32
END FITTING L.H. BNF-5L	ST1 031 42	32
SAFETY LINK SPRING	ST1 033 01	33
LATERAL DRIVE SPRING	ST1 033 02	33
WASHER Ø32	ST1 033 03	33
SAFETY LINK TUBE	ST1 033 04	33
SPACER CLAMP	ST1 033 05	33
SPRING POST PIN	ST1 033 06A	33
SLEEVE	ST1 033 07	33

DISTRIBUTOR MOUNT WELDMENT	ST1 033 08	33
DISTRIBUTOR SUPPORT	ST1 033 09	33
ROD END BEARING BNM-8	ST1 033 10	33
SUPPORT	ST1 034 01	34
TRIP STOP ROD SUPPORT	ST1 034 02	34
STOP BLADE	ST1 034 03	34
TRIP STOP SUPPORT	ST1 034 05	34
WASHER Ø6	ST1 034 06	34
RING Ø6	ST1 034 07	34
BEARING SPHERIAL	ST1 034 09	34
SHAFT DRIVE DISTRIBUTOR	ST1 035 01	36
PULLEY	ST1 035 02	36
THRUST WASHER	ST1 035 03	36
PINION ASSEMBLY	ST1 035 05	36
PINION	ST1 035 06	36
BUSCHING PINION	ST1 035 07	36
CLUTCH PLATE ASSEMBLY	ST1 035 08	36
CLUTCH PLATE	ST1 035 09	36
ORIENTATION SLEEVE	ST1 035 10	36
FRICTION DISC.	ST1 035 11	36
CLUTCH PLATE DRIVE	ST1 035 12	36
DISTRIBUTOR WORM GEAR	ST1 035 13	36
SPRING ASSEMBLY	ST1 035 14	36
WASHER Ø16	ST1 035 15	36
DISTRIBUTOR INDEXING CAM	ST1 035 16	36
SHAFT CAM SUPPORT	ST1 035 17	36
SHAFT ARM	ST1 035 18	36
ARM	ST1 035 19	36
SPRING	ST1 035 20	36
WASHER Ø8	ST1 035 21	36
DRIVE ARM	ST1 035 22	36
CLAMP RACE	ST1 035 23	36

SPECIAL BOLT M6X124	ST1 035 24	36
SPECIAL NUT M8	ST1 035 25	36
SHAFT	ST1 035 26	36
SUPPORT SPRING DISTRIBUTOR	ST1 035 27	36
ROD SAFETY LINK DISTRIBUTOR	ST1 035 28	36
SPECIAL NUT M15	ST1 035 29	36
CAM FOLLOWER CF 6	ST1 035 33	36
SHAFT(WITH 6I8F)	ST1 035 50	36
PINION SLEEVE	ST1 035 51	36
SWITCH BOX & CABLE SUPPORT ASSEMBLY	ST1 037 00	37-38
FIXED BOAD	ST1 037 01	38
REAR WIREWAY	ST1 037 02	38
REAR WIREWAY COVER	ST1 037 03	38
THICK BUSHING	ST1 037 04	38
SWITCH BOX SUPPORT	ST1 037 05	38
BRACKET	ST1 037 06	38
WIREWAY BRACKET	ST1 037 07	38
FRONT WIREWAY COVER	ST1 037 08	38
FRONT WIREWAY R.H.	ST1 037 09	38
FRONT WIREWAY L.H.	ST1 037 10	38
SHORT WIREWAY COVER	ST1 037 11	38
SHORT WIREWAY	ST1 037 12	38
KICKBAK PLATE ASSEMBLY BALL EXIT SIDE R.H.	ST1 039 00	39-40
KICKBAK PLATE ASSEMBLY BALL EXIT SIDE L.H.	ST1 039 00*	39-40
SUPPORT BOX	ST1 039 01	40-42
URETHANE CUSHION BLOCK R.H.	ST1 039 02	42-42
URETHANE CUSHION BLOCK L.H.	ST1 039 02*	40-42
THRUST BEARING	ST1 039 03	40-42
WASHER Ø20	ST1 039 04	40-42
BEARING SUPPORT ASSEMBLY R.H. FOR L.H. M	ST1 039 05	40
BEARING SUPPORT ASSEMBLY L.H. FOR R.H. M	ST1 039 05*	40
BEARING RETAINER	ST1 039 06	40

SPRING	ST1 039 07	40-42
BEARING SUPPORT	ST1 039 08	40-42
FOOT SUPPORT WELDMENT	ST1 039 09	40-42
BUSHING - CURTAIN ROD	ST1 039 10	40
SPECIAL SET SCREW	ST1 039 11	40-42
SPECIAL SET SCREW	ST1 039 12	40
KICKBACK WELDMENT R.H. SIDE FOR L.H. M	ST1 039 13	40-51
KICKBACK WELDMENT L.H. SIDE FOR R.H. M	ST1 039 13*	40
DOOR	ST1 039 14	40
PANEL I	ST1 039 15	40
PANEL II	ST1 039 16	40
PANEL III	ST1 039 16*	40
PANEL	ST1 039 32	40
BRONZE BUSHING	ST1 039 33	40-42
KICKBACK PLATE ASSEMBLY SIDE OPPOSITE BALL EXIT R.H.	ST1 041 00	41-42
KICKBACK PLATE ASSEMBLY SIDE OPPOSITE BALL EXIT L.H.	ST1 041 00*	41-42
BEARING SUPPORT ASSEMBLY R.H.FOR R.H. M	ST1 041 05	42
BEARING SUPPORT ASSEMBLY L.H.FOR L.H. M	ST1 041 05*	42
SPRING POST PIN	ST1 041 07	42
ANGLE	ST1 041 08	42
PIN EJECTOR	ST1 041 11	42
ROLLER ASSEMBLY R.H.	ST1 041 12	42
ROLLER ASSEMBLY L.H.	ST1 041 12*	42
SUPPORT ROLLER ASSEMBLY R.H.	ST1 041 13	42
SUPPORT ROLLER ASSEMBLY L.H.	ST1 041 13*	42
PIVOT STUD	ST1 041 14	42
RUBBER SHOCK MOUNTING	ST1 041 16	42
STEEL RIVET	ST1 041 17	42
GROUNGING SIGN	ST1 041 18	42
WASHER Ø8	ST1 041 19	42
SUPPORT BEARING	ST1 041 20	42
R.H. TREAD	ST1 041 21	42

L.H. TREAD	ST1 041 21*	42
SUPPORT WELDMENT R.H.	ST1 041 22	42
SUPPORT WELDMENT L.H.	ST1 041 22*	42
KICKBACK WELDMENT R.H. SIDE FOR R.H. M	ST1 041 23	42-49
KICKBACK WELDMENT L.H. SIDE FOR L.H. M	ST1 041 23*	42-51
SUPPORT PANEL	ST1 041 24	42
BRACKET WELDMENT	ST1 041 37	42
PIN STOP	ST1 041 38	42
SHAFT	ST1 041 39	42
SPRING L.H.	ST1 041 40	42
SPRING R.H.	ST1 041 40*	42
ROLLER	ST1 041 41	42
FLANGED BUSHING	ST1 041 42	42
SPRING	ST1 041 44	42
CURTAIN LATCH PIN	ST1 041 45	42
SUPPORT BRACKET WELDMENT	ST1 041 46	42
PANEL	ST1 041 48	42
ROLLER ASSEMBLY	ST1 043 00	43
ROLLER BODY	ST1 043 01	43
HINGE ROLLER	ST1 043 02	43
ROLLER PIN	ST1 043 03	43
PLASTIC LINK	ST1 043 04	43
HINGE SHAFT	ST1 043 05	43
ROLLER BODY	ST1 043 06	43
BOUNCE PLATE ASSEMBLY L.H.	ST1 044 00	44
BOUNCE PLATE ASSEMBLY R.H.	ST1 044 00*	44
REINFORCING BAR	ST1 044 01	44
VIBRATION DAMPENER	ST1 044 02	44
BONDING STRAP	ST1 044 03	44
BOUNCE BOARD FRONT L.H.	ST1 044 04	44
BOUNCE BOARD FRONT R.H.	ST1 044 04*	44
BOUNCE BOARD REAR L.H.	ST1 044 05	44

BOUNCE BOARD REAR R.H.	ST1 044 05*	44
CHANNEL I	ST1 044 06	44
CHANNEL II	ST1 044 07	44
ANGLE SUPPORT L.H.	ST1 044 08	44
ANGLE SUPPORT R.H.	ST1 044 08*	44
PIT SUPPORT BRACKET R.H. FOR L.H. MACHIN	ST1 044 09	44
PIT SUPPORT BRACKET L.H. FOR R.H. MACHIN	ST1 044 09*	44
PIT SUPPORT BRACKET L.H. FOR L.H. MACHIN	ST1 044 10	44
PIT SUPPORT BRACKET R.H. FOR R.H. MACHIN	ST1 044 10*	44
CUSHION,SHOCK ABSORBER & CURTAIN ASSEMBLY L.H.	ST1 045 00	45-46
CUSHION,SHOCK ABSORBER & CURTAIN ASSEMBLY R.H.	ST1 045 00*	45-46
HANGER WELDMENT L.H.	ST1 045 01	46
HANGER WELDMENT R.H.	ST1 045 01*	46
PLANK WASHER Ø11	ST1 045 02	46
RIVET RUBBER	ST1 045 03	46
SMOOTHIE CUSHION FACING R.H	ST1 045 04	46
SMOOTHIE CUSHION FACING L.H	ST1 045 04*	46
CUSHION L.H.	ST1 045 05	46
CUSHION R.H.	ST1 045 05*	46
CUSHION SPONGE	ST1 045 06	46
WOOD CUSHION PLANK L.H.	ST1 045 07	46
WOOD CUSHION PLANK R.H.	ST1 045 07*	46
SHIELD	ST1 045 08	46
CURTAIN ROD	ST1 045 09	46
PIN CURTAIN L.H.	ST1 045 10	46
PIN CURTAIN R.H.	ST1 045 10*	46
CURTAIN HANGER	ST1 045 11	46
PANEL L.H.	ST1 045 12	46
PANEL R.H.	ST1 045 12*	46
SHOCK ABSORBER COMPONENTS	ST1 045 13	46
COLLAR	ST1 045 14	46
SHAFT	ST1 045 15	46

SPRING DOSC I	ST1 045 16	46
ADJUSTING SHAFT	ST1 045 17	46
BRACKET	ST1 045 18	46
BUMPER RUBBER	ST1 045 19	46
SPRING	ST1 045 20	46
TUBE	ST1 045 21	46
SPRING DISC II	ST1 045 22	46
WASHER Ø12	ST1 045 23	46
REAR MACHINE TRANSMISSION ASSEMBLY L.H.	ST1 047 00	47-48-49-50
REAR MACHINE TRANSMISSION ASSEMBLY R.H.	ST1 047 00*	47-48-49-50
CHAIN 12.7 (1/2")	ST1 047 01	48
BEARING 1204	ST1 047 02	48
BELT A33/827	ST1 047 03	48
BELT A58/1372	ST1 047 04	48
PULLEY ADJ ASSEMBLY L.H.	ST1 047 05	48-49
PULLEY ADJ ASSEMBLY R.H.	ST1 047 05*	48
IDLER PULLEY ASSEMBLY L.H.	ST1 047 06	48-49
IDLER PULLEY ASSEMBLY R.H.	ST1 047 06*	48
BEARING SET L.H. FOR L.H. MACHINE	ST1 047 07	48
BEARING SET R.H. FOR L.H. MACHINE	ST1 047 07*	48
BEARING SET L.H. FOR R.H. MACHINE	ST1 047 08	48
BEARING SET R.H. FOR R.H. MACHINE	ST1 047 08*	48
BARING SEAT	ST1 047 09	48
SEAT L.H.	ST1 047 10	48
SEAT R.H.	ST1 047 10*	48
LONG SHAFT	ST1 047 11	48
PULLEY ASSEMBLY	ST1 047 12	48-49
IDLER ASSEMBLY	ST1 047 13	48-49
REAR ROLLER	ST1 047 14	48
BRACKET L.H	ST1 047 15	48-51
BRACKET R.H.	ST1 047 15*	48
SMALL PULLEY	ST1 047 16	48

CHAIN GEAR WELDMENT	ST1 047 28	48
BUSHING	ST1 049 02	50
TENSION WHEEL	ST1 049 03	50
PLATE ADJ L.H.	ST1 049 04	50
PLATE ADJ R.H.	ST1 049 04*	50
GEAR ASSEMBLY	ST1 049 05	50
CHAIN GEAR I	ST1 049 06	50
PULLEY	ST1 049 07	50
IDLER PULLEY II	ST1 049 08	50
WASHER Ø13	ST1 049 09	50
BUSHING	ST1 049 10	50
IDLER PULLEY ARM L.H.	ST1 049 11	50
IDLER PULLEY ARM R.H.	ST1 049 11*	50
SPACER	ST1 049 12	50
PULLING SPRING	ST1 049 13	50
SPRING HANGER	ST1 049 14	50
PULLEY	ST1 049 15	50
SHAFT	ST1 049 16	50
BUSHING	ST1 049 17	50
SMALL PULLEY I	ST1 049 18	50
SHAFT	ST1 049 19	50
SHAFT	ST1 049 20	50
SPRING	ST1 049 21	50
ARM	ST1 049 22	50
BRONZE BUSHING	ST1 049 23	50
SEAT	ST1 049 24	50
BUSHING	ST1 049 25	50
WASHER Ø13	ST1 049 26	50
SHAFT	ST1 049 27	50
PULLING SPRING	ST1 049 28	50
X WASHER	ST1 049 52	50-56
BACK END ASSEMBLY L.H.	ST1 051 00	51-52

BACK END ASSEMBLY R.H.	ST1 051 00*	51-52
L.H. PLOW & MAT WELDMENT-LARGE	ST1 051 01	52
R.H. PLOW & MAT WELDMENT-LARGE	ST1 051 01*	52
L.H. PLOW & MAT WELDMENT-SMALL	ST1 051 02	52
R.H. PLOW & MAT WELDMENT-SMALL	ST1 051 02*	52
L.H. APRON ASSEMBLY	ST1 051 03	51-52
R.H. APRON ASSEMBLY	ST1 051 03*	51-52
CLIP-BOTTOM L.H.	ST1 051 04	52
CLIP-BOTTOM R.H.	ST1 051 04*	52
CLIP WELDMENT L.H.	ST1 051 05	52
CLIP WELDMENT R.H.	ST1 051 05*	52
STRAP WEDMENT	ST1 051 06	52
BRACE	ST1 051 07	52
SUPPORT BRACKET	ST1 051 08	52
PROTECTIVE PANEL WELDMENT	ST1 051 09	52
CARPET BELT	ST1 051 10	52
L.H. APRON	ST1 051 24	52
R.H. APRON	ST1 051 24*	52
SPECIAL NUT ASSEMBLY	ST1 051 25	51-52
SPECIAL NUT	ST1 051 27	52
RIVET JOINT PANNEL	ST1 051 28	52
CROOKED PANEL	ST1 051 29	52
PIN ELEVATOR WHELL ASSEMBLY L.H	ST1 053 00	53-54
PIN ELEVATOR WHELL ASSEMBLY R.H	ST1 053 00*	53-54
WHELL GUARD L.H.	ST1 053 01	54
WHELL GUARD R.H.	ST1 053 01*	54
WHELL WINDOW	ST1 053 02	54
RAIL ASSEMBLY L.H.	ST1 053 03	53-54
RAIL ASSEMBLY R.H.	ST1 053 03*	54
RAIL L.H.	ST1 053 04	54
RAIL R.H.	ST1 053 04*	54
PIN HOLDER BRACHET MOUNT L.H.	ST1 053 05	54

PIN HOLDER BRACHET MOUNT R.H.	ST1 053 05*	54
RUBBER SPACER MOUNT	ST1 053 06	54
BRACKET	ST1 053 07	54
ELEVATOR SUPPORT ASSEMBLY L.H.	ST1 053 09	54
ELEVATOR SUPPORT ASSEMBLY R.H.	ST1 053 09*	54
ELEVATOR SUPPORT FRAME WELDMENT L.H.	ST1 053 10	54
UPPER BRACKET ASSEMBLY	ST1 053 11	54
BRACKET WELDMENT	ST1 053 12	54
COVER	ST1 053 13	54
ROLLER ASSEMBLY	ST1 053 14	53-54
ROLLER	ST1 053 15	54
END COVER	ST1 053 16	54
SHAFT	ST1 053 17	54
BUSHING	ST1 053 18	54
BUSHING	ST1 053 19	54
OLIER ASSEMBLY	ST1 053 20	53-54
OLIER BRACKET WELDMENT	ST1 053 21	54
SPRING	ST1 053 22	54
OLIER BODY	ST1 053 23	54
WICK	ST1 053 24	54
BOWN BRACKET	ST1 053 25	54
HINGE BLOCK BALL EXIT SIDE	ST1 053 26	54
HINGE BLOCK BALL SIDE OPPOSITE BALL EXIT	ST1 053 27	54
PIN WHELL ASSEMBLY L.H.	ST1 053 28	54
PIN WHELL ASSEMBLY R.H.	ST1 053 28*	54
PIN WHELL WELDMENT L.H.	ST1 053 29	54
PIN WHELL WELDMENT R.H.	ST1 053 29*	54
RING WELDMENT	ST1 053 30	54
RECTANGULAR GUARD	ST1 053 31	54
HANGER	ST1 053 32	54
BRACKET WELDMENT	ST1 053 33	54
BACK END MOTOR BRCKET ASSEMBLY L.H	ST1 055 00	55-56

BACK END MOTOR BRCKET ASSEMBLY R.H	ST1 055 00*	55-56
BELT A27	ST1 055 01	56
SPRIN	ST1 055 02	56
FLANGE BUSHING	ST1 055 03	56
BRACKET WELDMENT I L.H.	ST1 055 04	56
BRACKET WELDMENT I R.H.	ST1 055 04*	56
SHAFT	ST1 055 05	56
BELT TIGHTENER ARM	ST1 055 06	56
SLEEVE BEARING	ST1 055 07	56
PIN	ST1 055 08	56
PIN	ST1 055 09	56
PULLEY	ST1 055 10	56
PULLEY	ST1 055 11	56
SHEAVE	ST1 055 12	56
PIN ELEVATOR SHEAVE FOR 50Hz	ST1 055 13	56
DIST. DRIVE SHAFT ASSEMBLY L.H.	ST1 055 14	56
DIST. DRIVE SHAFT ASSEMBLY R.H.	ST1 055 14*	56
BACK END MOTOR DRIP PAN	ST1 055 15	56
MOTOR MOUNT PANEL L.H.	ST1 055 16	56
MOTOR MOUNT PANEL R.H.	ST1 055 16*	56
BRACKET WELDMENT II L.H.	ST1 055 17	56
BRACKET WELDMENT II R.H.	ST1 055 17*	56
PIN	ST1 055 18	56
BACK END DRIVE SHEAVE	ST1 055 19	56
SAFETY COVER	ST1 055 20	56
COVER BRACKET L.H.	ST1 055 21	56
COVER BRACKET R.H.	ST1 055 21*	56
PAPER WASHER	ST1 055 22	56
MOTOR (380V 50HZ)	ST1 055 42	56
MOTOR (220V 60HZ)	ST1 055 42*	56
GEARBOX L.H.	ST1 055 43	56
GEARBOX R.H.	ST1 055 43*	56

DISTRIBUTOR DRIVE HOUSING	ST1 055 45	56
BALL BEARING RETAINER	ST1 055 46	56
PIN	ST1 055 47	56
BALL BEARING	ST1 055 48	56
DISTRIBUTOR DRIVE SHAFT L.H.	ST1 055 49	56
DISTRIBUTOR DRIVE SHAFT R.H.	ST1 055 49*	56
METAL UNIVERSAL JOINT	ST1 055 50	56
ROLL PIN Ø 1/8"X3/4"	ST1 055 51	56
ROLL PIN Ø 3/16"X3/4"	ST1 055 53	56
BELT A37	ST1 055 54	56
PIN WHELL BELT	ST1 055 56	56
FLAT WASHER Ø 16	ST1 055 57	56
SPACER	ST1 055 58	56
PIY LIGHT ASSEMBLY	LUXSW	57
BAFFLE	ST1 057 01	57
LAMP HOLDER	ST1 057 02	57
NEON GLOW 30 W	ST1 057 03	57
LENS	ST1 057 04	57
COVER	ST1 057 05	57
NEON WHITE 30 W	ST1 057 06	57
CABLE GLAND	ST1 057 07	57
WASHER Ø 4	ST1 057 08	57
BOTTOM SCREW M4X15	ST1 057 09	57
LOCK NUT M4	ST1 057 10	57
PLASTIC WASHER	ST1 057 11	57
BOTTOM SCREW M4X20	ST1 057 12	57
CABLE 3X0,75 MM ²	ST1 057 13	57
KEY 15X3X4	ST1 060 01	56
KEY 25X5X5	ST1 060 02	50
KEY 30X5X5	ST1 060 03	48
KEY 35X5X5	ST1 060 04	56
KEY 40X5X5	ST1 060 05	50

KEY 50X5X5	ST1 060 06	56
KEY 25X6X6	ST1 060 07	48
KEY 40X6X6	ST1 060 08	56
KEY 28X7X8	ST1 060 09	6-12
GREASE FITTING M6	ST1 061 01	6-8-14-22-40-42
SEMICIRCLE HEAD SQ. SCREW M8X15	ST1 061 02	54
FLAT SOCKET CAP SCREW M6X12	ST1 062 01	40
FLAT SOCKET CAP SCREW M6X16	ST1 062 02	2-4-52
FLAT SOCKET CAP SCREW M6X20	ST1 062 03	52
FLAT SOCKET CAP SCREW M6X30	ST1 062 04	30
FLAT SOCKET CAP SCREW M6X40	ST1 062 05	16
FLAT SOCKET CAP SCREW M8X20	ST1 062 06	4-40-52-56
FLAT SOCKET CAP SCREW M8X25	ST1 062 07	2-48-56
FLAT SOCKET CAP SCREW M8X40	ST1 062 08	52
FLAT SOCKET CAP SCREW M10X20	ST1 062 09	43
FLAT SOCKET CAP SCREW M10X25	ST1 062 10	44
FLAT SOCKET CAP SCREW M10X60	ST1 062 11	46
FLAT SOCKET CAP SCREW M10X75	ST1 062 17	46
BEARING UC206	ST1 063 01	6-12
BEARING 80102	ST1 063 02	8
BEARING 80103	ST1 063 03	50
BEARING 80104	ST1 063 04	50
BEARING 80202	ST1 063 06	30-50
BEARING 80203	ST1 063 07	50
BEARING 80204	ST1 063 08	43-48-50
BEARING 201	ST1 063 09	54
BEARING 2007105E	ST1 063 10	8
BEARING 2007109E	ST1 063 11	8
HEX CAP SCREW M4X40	ST1 064 01	36
HEX CAP SCREW M6X16	ST1 064 02	4
HEX CAP SCREW M6X20	ST1 064 03	2
SPECIAL BOLT M6X25	ST1 064 04	6-12

HEX CAP SCREW M6X40	ST1 064 05	4-16
HEX CAP SCREW M6X45	ST1 064 06	2-14-16
HEX CAP SCREW M6X75	ST1 064 07	14
HEX CAP SCREW M6X95	ST1 064 08	14
HEX CAP SCREW M8X25	ST1 064 09	10-12-18
HEX CAP SCREW M8X30	ST1 064 10	54
HEX CAP SCREW M8X40	ST1 064 11	54-56
HEX CAP SCREW M8X50	ST1 064 12	6-54
HEX CAP SCREW M8X55	ST1 064 13	54
HEX CAP SCREW M8X60	ST1 064 14	10
HEX CAP SCREW M8X65	ST1 064 15	54
HEX CAP SCREW M8X70	ST1 064 16	33
HEX CAP SCREW M8X75	ST1 064 17	54
HEX CAP SCREW M8X80	ST1 064 18	18-33-54
HEX CAP SCREW M8X110	ST1 064 19	40-42
HEX CAP SCREW M10X40	ST1 064 20	14-20-26
HEX CAP SCREW M10X50	ST1 064 22	2-4-18-22
HEX CAP SCREW M10X55	ST1 064 23	18-22-26
HEX CAP SCREW M10X60	ST1 064 24	18-20
HEX CAP SCREW M10X70	ST1 064 25	22
HEX CAP SCREW M10X100	ST1 064 26	10
HEX CAP SCREW M12X50	ST1 064 27	8
CARRIAGE BOLT M12X60	ST1 064 28	22
HEX CAP SCREW M12X60	ST1 064 29	8
HEX CAP SCREW M12X65	ST1 064 30	12
HEX CAP SCREW M12X55	ST1 064 34	18
HEX CAP SCREW M4X10	ST1 065 01	32
HEX CAP SCREW M5X25	ST1 065 02	32
HEX CAP SCREW M6X12	ST1 065 03	14-32
HEX CAP SCREW M6X16	ST1 065 04	6-14-38
HEX CAP SCREW M6X20	ST1 065 05	14-34-56-57
HEX CAP SCREW M6X25	ST1 065 06	14-26-30-36-40

HEX CAP SCREW M6X30	ST1 065 07	30-34
HEX CAP SCREW M8X16	ST1 065 08	26-36
HEX CAP SCREW M8X20	ST1 065 09	2-4-6-38-42-52-54-56
HEX CAP SCREW M8X25	ST1 065 10	4-6-14-46-48-52-54
HEX CAP SCREW M8X30	ST1 065 11	6-44
HEX CAP SCREW M8X50	ST1 065 12	2
HEX CAP SCREW M10X20	ST1 065 13	40
HEX CAP SCREW M10X25	ST1 065 14	2-4-44-50-52
HEX CAP SCREW M10X35	ST1 065 15	14-20-22
HEX CAP SCREW M10X40	ST1 065 16	6-26
HEX CAP SCREW M10X70	ST1 065 17	2-4
HEX CAP SCREW M10X110	ST1 065 18	18
HEX CAP SCREW M12X45	ST1 065 19	42
NUT M4	ST1 066 01	6-10-12-14-22-32
NUT M5	ST1 066 02	32-38
NUT M5 LH	ST1 066 03	32
NUT M6	ST1 066 04	22-26-57
NUT M6 LH	ST1 066 05	26
NUT M8	ST1 066 06	6-10-12-14-18-20-26-33-36-50
NUT M10	ST1 066 07	14-18-20-22-26-50
NUT M10 LH	ST1 066 08	18-22-26
NUT M12	ST1 066 09	18-46
NUT M12 LH	ST1 066 10	18
NUT M16	ST1 066 11	18
ACORN NUT M8	ST1 066 15	18-54
LOCK NUT M4	ST1 067 01	8-36
LOCK NUT M5	ST1 067 02	6-12-26-32
LOCK NUT M6	ST1 067 03	2-4-6-10-12-14-16-20-24-26-27-30-32-34-36-38-50-52-56
LOCK NUT M8	ST1 067 04	2-4-6-10-12-14-18-20-24-26-33-38-40-42-44-46-48-52-54-56
LOCK NUT M10	ST1 067 05	2-4-6-10-14-20-22-26-40-44-46-50-52
LOCK NUT M12	ST1 067 06	2-4-6--8-12-22-36-42-50-54-56
LOCK NUT M14	ST1 067 07	8

LOCKNUT M16	ST1 067 08	20-22
BOLT M3X8	ST1 068 01	54
SOCKET HEAD CAP SCREW M5X10	ST1 069 01	27
SOCKET HEAD CAP SCREW M5X12	ST1 069 02	56
SOCKET HEAD CAP SCREW M5X16	ST1 069 03	27-30
SOCKET HEAD CAP SCREW M5X20	ST1 069 04	40-42
SOCKET HEAD CAP SCREW M6X10	ST1 069 05	48
SOCKET HEAD CAP SCREW M6X20	ST1 069 06	30-48
SOCKET HEAD CAP SCREW M8X30	ST1 069 07	48
SOCKET HEAD CAP SCREW M8X45	ST1 069 08	6
SOCKET HEAD CAP SCREW M10X20	ST1 069 09	40
SOCKET HEAD CAP SCREW M10X30	ST1 069 10	40
SOCKET SET HEAD M5X25	ST1 069 11	32
SOCKET SET SCREW M6X12	ST1 070 01	48-50
SOCKET SET SCREW M6X20	ST1 070 03	32
SOCKET SET SCREW M6X30	ST1 070 04	20
SOCKET SET SCREW M6X45	ST1 070 05	22
SOCKET SET SCREW M8X8	ST1 070 06	10
SOCKET SET SCREW M8X8	ST1 070 07	20-50-56
SOCKET SET SCREW M8X12	ST1 070 09	33
SOCKET SET SCREW M8X20	ST1 070 10	26
SOCKET SET SCREW M8X25	ST1 070 11	20-48
PAN HEAD SCREW M4X16	ST1 071 01	10
PAN HEAD SCREW M4X25	ST1 071 02	14
PAN HEAD SCREW M4X30	ST1 071 03	22
PAN HEAD SCREW M4X65	ST1 071 04	6-12
PAN HEAD SCREW M5X12	ST1 071 05	26
PAN HEAD SCREW M5X16	ST1 071 06	12 38
PAN HEAD SCREW M5X20	ST1 071 07	6
PAN HEAD SCREW M6X16	ST1 071 08	38
RIVET 3X8	ST1 072 01	52
RIVET 3X15	ST1 072 02	6-12

RIVET 5X15	ST1 072 03	36
RIVET 5X16	ST1 072 04	18
ROLL PIN Ø 2X16	ST1 073 01	10-34
ROLL PIN Ø 2X20	ST1 073 02	8-43
ROLL PIN Ø 3X20	ST1 073 03	46
ROLL PIN Ø 3X24	ST1 073 04	26
ROLL PIN Ø3X30	ST1 073 05	10
ELASTIC ROLLER PIN Ø4X10	ST1 073 06	50
ROLL PIN Ø4X24	ST1 073 07	32-42-56
ROLL PIN Ø4X40	ST1 073 08	8
ROLL PIN Ø5X22	ST1 073 09	36
ROLL PIN Ø 5X30	ST1 073 10	36
ROLL PIN Ø5X40	ST1 073 11	20
ROLL PIN Ø8X45	ST1 073 12	30
PIN 4X28	ST1 073 15	46
RAITAINING RING Ø6	ST1 074 01	32
RAITAINING RING Ø9	ST1 074 02	30-32
RAITAINING RING Ø12	ST1 074 03	42-54
RAITAINING RING Ø15	ST1 074 04	40-42
RAITAINING RING Ø16	ST1 074 05	36
RAITAINING RING Ø35	ST1 074 06	30-36-50
RAITAINING RING Ø40	ST1 074 07	20-22
RAITAINING RING Ø47	ST1 074 08	50
RAITAINING RING Ø55	ST1 074 09	30
SPLIT RAITAINING RING Ø16	ST1 074 10	18
SPRING WASHER Ø4	ST1 075 01	22
SPRING WASHER Ø5	ST1 075 02	6-12-30-38
SPRING WASHER Ø6	ST1 075 03	6-14-57
SPRING WASHER Ø8	ST1 075 04	6-42-46-54-56
SPRING WASHER Ø10	ST1 075 05	44-46-50
SPRING WASHER Ø12	ST1 075 06	8-12-42-46-54
SPRING WASHER Ø16	ST1 075 07	46

INDEX ST1

FLAT WASHER Ø4	ST1 076 01	6-10-12-14
FLAT WASHER Ø5	ST1 076 02	6-12-14-18-30-36-38
FLAT WASHER Ø6	ST1 076 03	2-4-6-10-12-14--30-36-38-40-48-52-56-57
FLAT WASHER Ø8	ST1 076 04	2-4-6-10-12-18-20-33-38-40-42-44-46-48-50-52-54-56
LARGE WASHER Ø10	ST1 076 05	2-4
FLAT WASHER Ø10	ST1 076 06	2-4-6-10-14-18-20-22-26-44-46-50-52
FLAT WASHER Ø12	ST1 076 07	6-12-18-22-36-50-54-56
FLAT WASHER Ø16	ST1 076 08	10-46
WASHER Ø12	ST1 076 09	54
BELT DISTRIBUTOR	ST1 080 01	28
COUNTERSUNK HEAD SCREW M3X16	ST1 080 05	27
COUNTERSUNK HEAD SCREW M6X16	ST1 080 10	28
FLAT COUNTER HEAD SCREW M8X20	ST1 080 15	56
SQUARE BOLT M6X40	ST1 080 21	26
PAN HEAD SCREW M4X10	ST1 080 25	38
STEEL DRIVE RIVET 4X13	ST1 080 35	40-42
HEX SLOTTED NUT M16X1.5	ST1 080 40	46