 



FRONT END FRAME AND PLATFORM ASSEMBLY L. H.

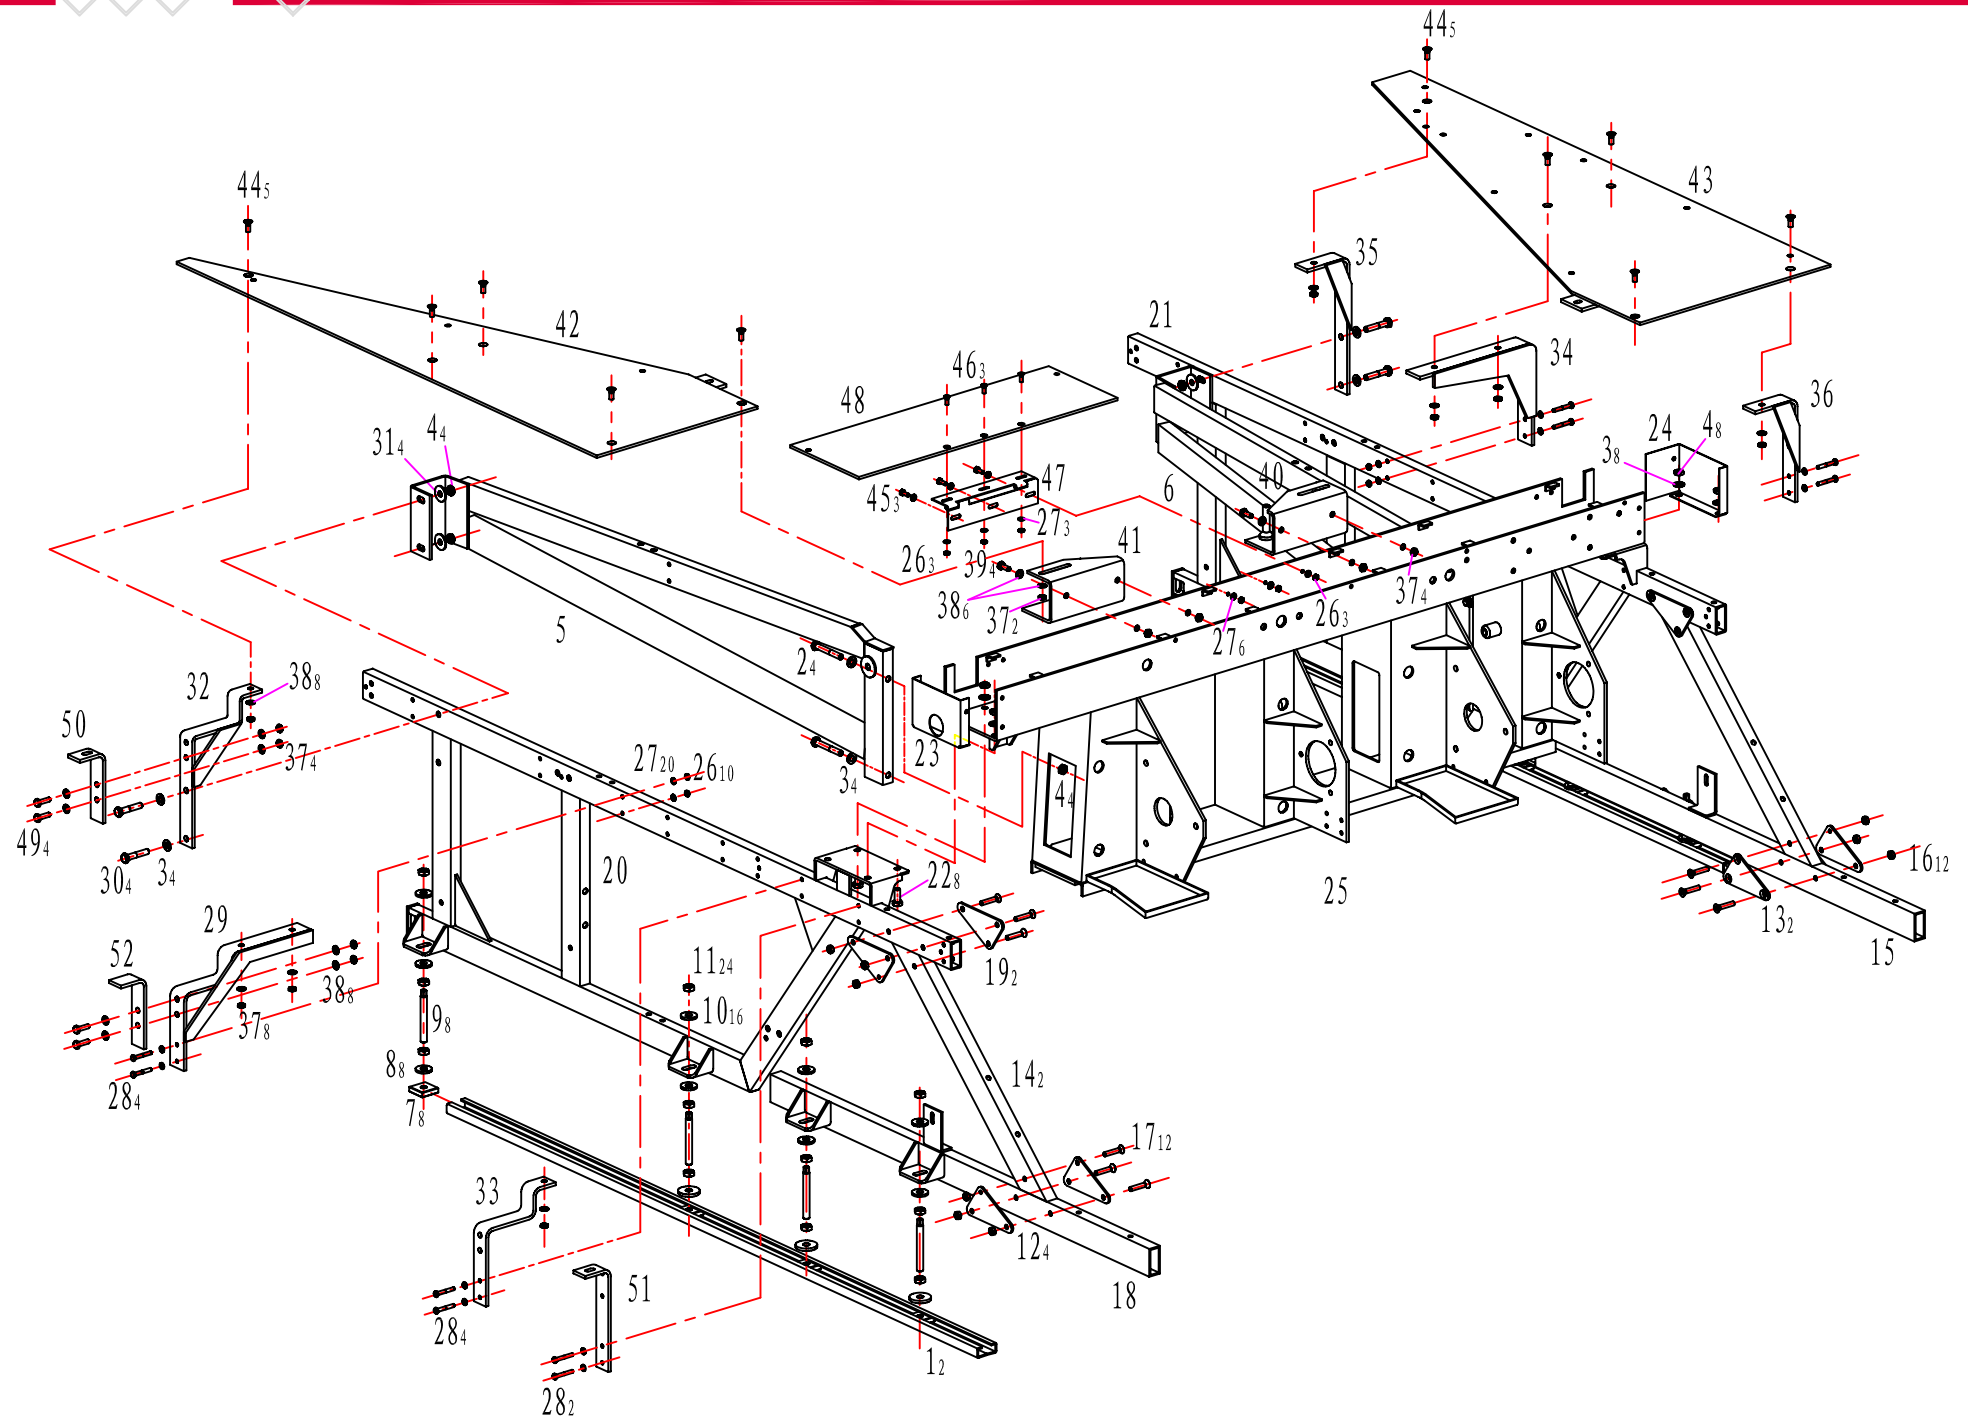

ITEM	CATALOG NO.	DESCRIPTION
1	BL05-31	
2	GB5783-86	M10x70
3	GB97.1-85_10	
4	GB6184-86	M10
5	BL02A-29-00	
6	BL02A-30-00	
7	BL02A-32	
8	BL02A-33	
9	BL02A-35	
10	BL02A-34	
11	GB6184-86	M12
12	BL03-09-11	
13	CEBL05-01-02-03	
14	CEBL05-01-02-04	
15	CEBL05-01-02-01-00	
16	GB6170-86	M8
17	GB2673-86	M8x40
18	CEBL05-01-03-01-00	
19	CEBL05-01-02-02	
20	BL05-27-00	
21	BL05-28-00	

ITEM	CATALOG NO.	DESCRIPTION
22	GB5783-86	M10x25
23	BL02A-01-07-01	
24	BL02A-01-07-13A	
25	BL05-01-07-02-00	
26	GB6184-86	M6
27	GB97.1-85_6	
28	GB5782-86	M6x40
29	CEBL05B-02-11-00	
30	GB5782-86	M10x50
31	GB96-85_10	
32	CEBL05B-02-10-00	
33	CEBL05B-02-12-00	
34	CEBL05B-02-14-00	
35	CEBL05B-02-13-00	
36	CEBL05B-02-15-00	
37	GB6184-86	M8
38	GB97.1-85_8	
39	GB5783-86	M8x20
40	CEBL05B-02-01-00	
41	CEBL05B-02-02-00	
42	CEBL05B-02-04-00	

 
FRONT END FRAME & PLATFORM ASSEMBLY L.H.






FRONT END FRAME & PLATFORM ASSEMBLY L.H.

  
FRONT END FRAME AND PLATFORM ASSEMBLY R. H.

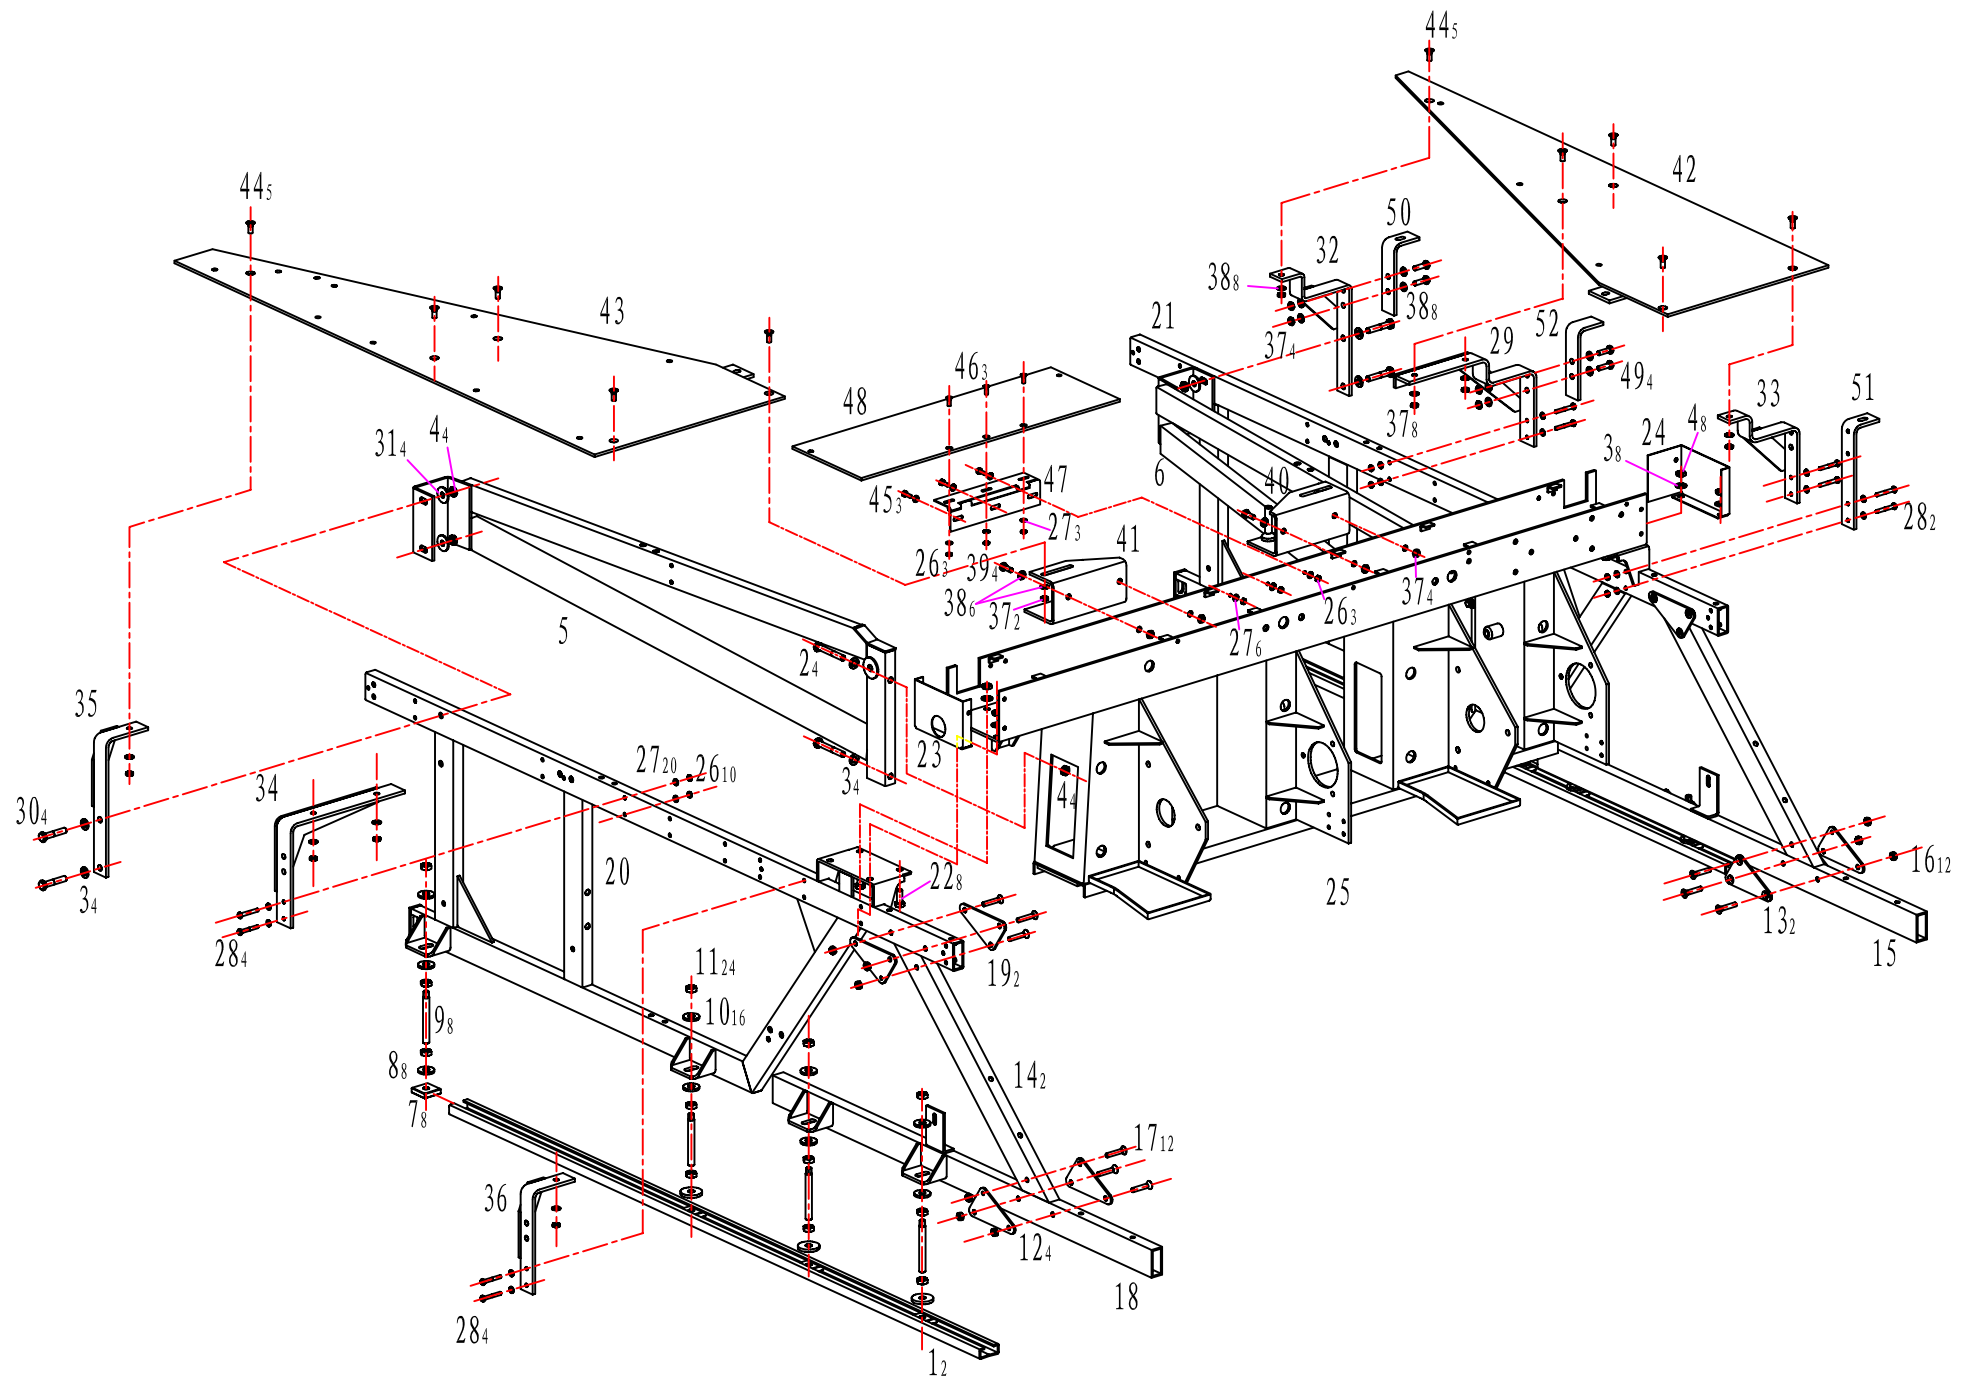



FRONT END FRAME & PLATFORM ASSEMBLY R.H.

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL05-31		22	GB5783-86	M10x25
2	GB5783-86	M10x70	23	BL02A-01-07-01	
3	GB97.1-85_10		24	BL02A-01-07-13A	
4	GB6184-86	M10	25	BL05-01-07-02-00	
5	BL02A-29-00		26	GB6184-86	M6
6	BL02A-30-00		27	GB97.1-85_6	
7	BL02A-32		28	GB5782-86	M6x40
8	BL02A-33		29	CEBL05B-02-11-00	
9	BL02A-35		30	GB5782-86	M10x50
10	BL02A-34		31	GB96-85_10	
11	GB6184-86	M12	32	CEBL05B-02-10-00	
12	BL03-09-11		33	CEBL05B-02-12-00	
13	CEBL05-01-02-03		34	CEBL05B-02-14-00	
14	CEBL05-01-02-04		35	CEBL05B-02-13-00	
15	CEBL05-01-02-01-00		36	CEBL05B-02-15-00	
16	GB6170-86	M8	37	GB6184-86	M8
17	GB2673-86	M8x40	38	GB97.1-85_8	
18	CEBL05-01-03-01-00		39	GB5783-86	M8x20
19	CEBL05-01-02-02		40	CEBL05B-02-01-00	
20	BL05-27-00		41	CEBL05B-02-02-00	
21	BL05-28-00		42	CEBL05B-02-04-00	

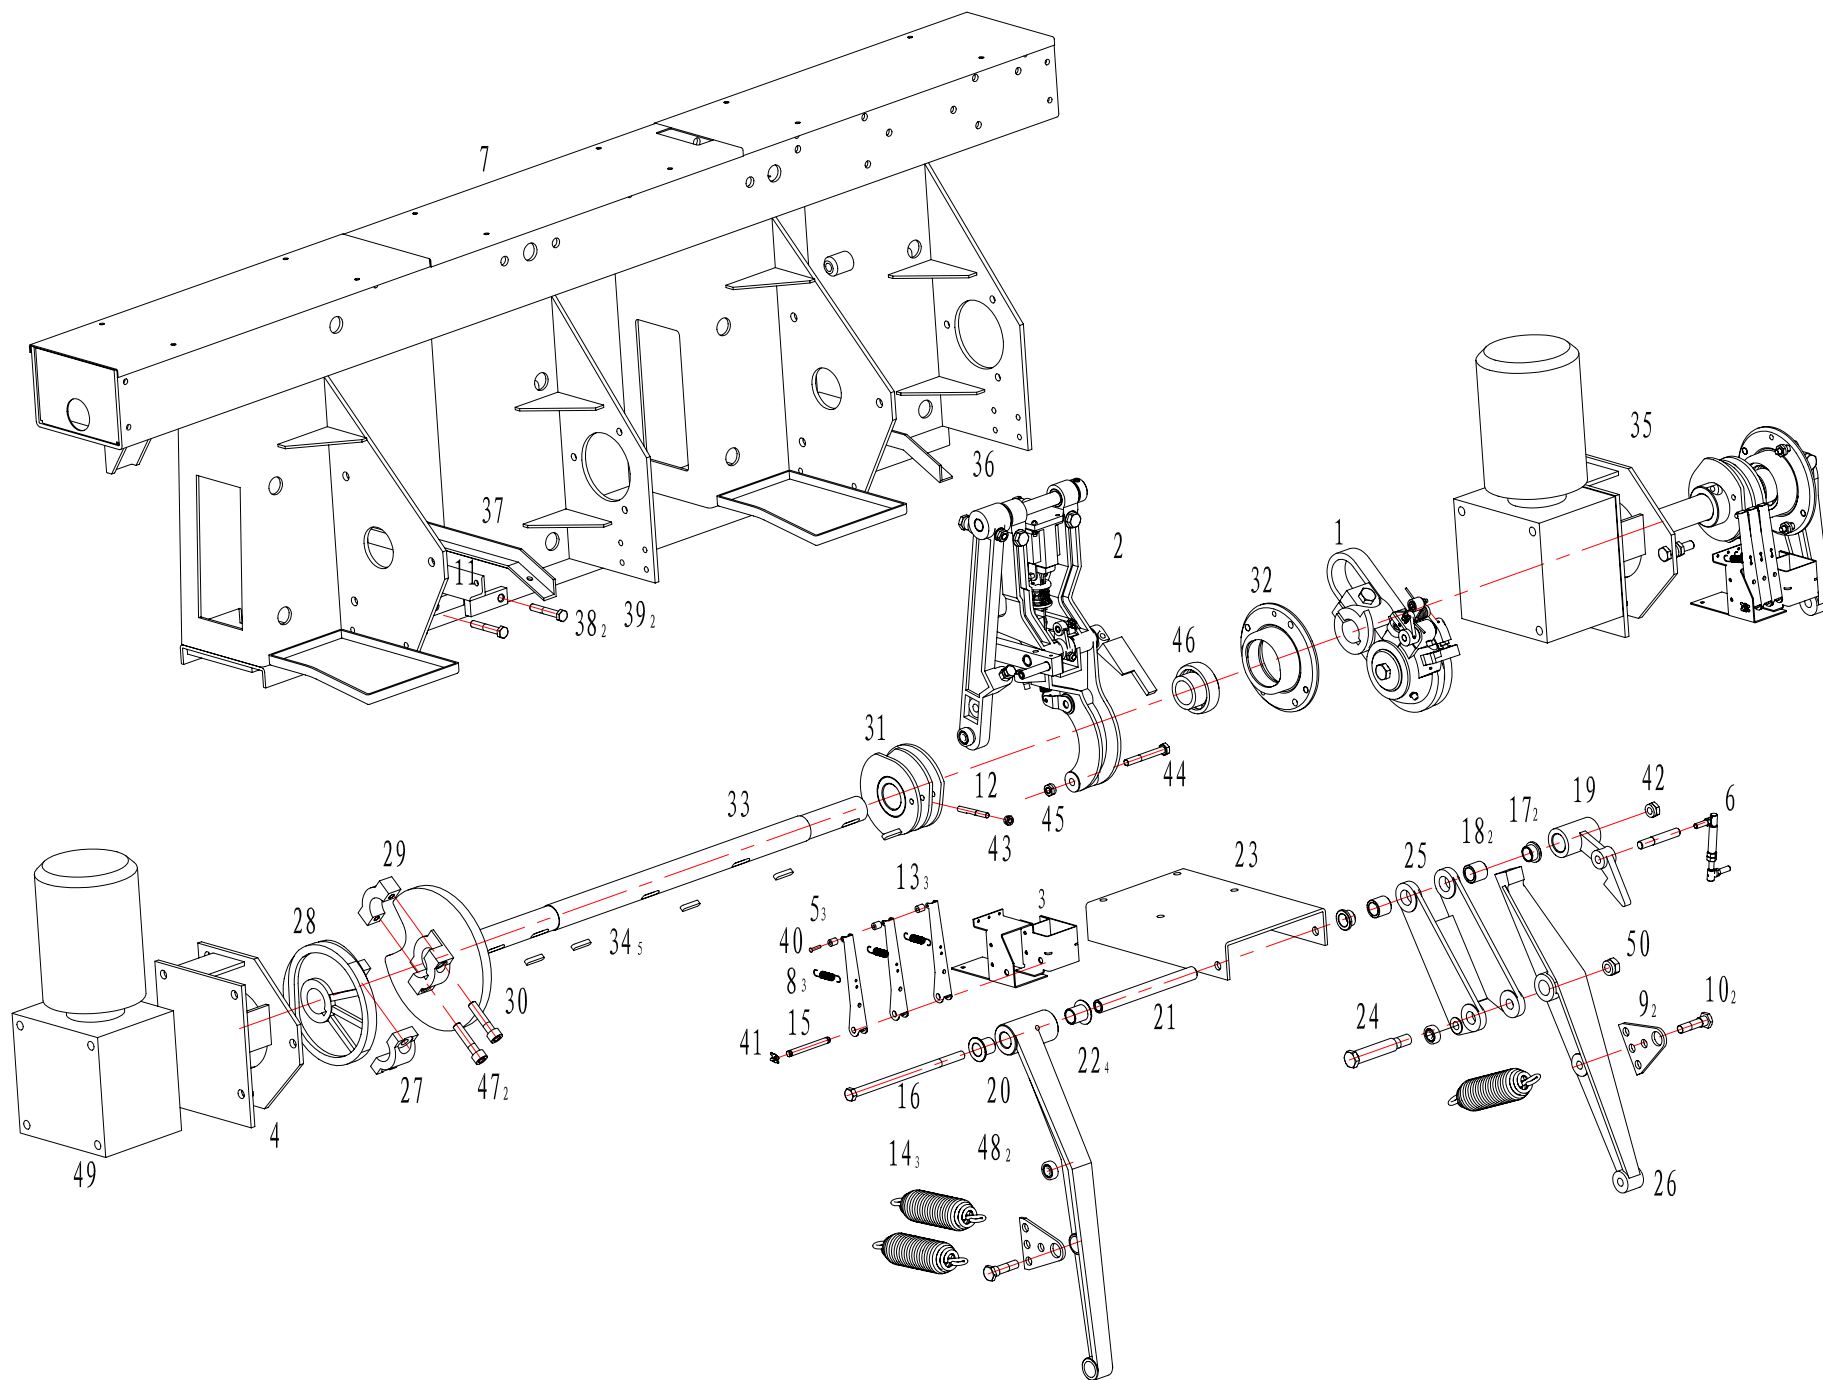 

ITEM	CATALOG NO.	DESCRIPTION
1	BL03-01-01-00	TABLE DRIVE & CAM ASSEMBLY
2	BL03-01-02-00	SOLENOID OPERATED SHUTTLE ASSEMBLY
3	BL03-01-03-00	HOUSING WELDMENT ASSEMBLY
4	BL05-01-38-05	BRACKET GEAR BOX
5	BL02A-01-05	BEARING SWITCH LEVER
6	BL03-01-06-00	LINK ROD
7	BL05-01-07-00	CROSS BEAM WELDMENT
8	BL03-01-08	SPRING
9	BL02A-01-09	SPRING HOLDER
10	BL03-01-10	SCREW
11	BL03-01-11-00	INSULATOR
12	BL03-01-12	CLAMP STUD
13	BL03-01-13	SWITCH LEVER
14	BL03-01-14	SPRING
15	BL03-01-15	SHAFT
16	BL03-01-16	SCREW SHAFT
17	BL02A-01-17	FLANGED SLEEVE BEARING
18	BL02A-01-18	COLLAR
19	BL02A-01-19	SPOTTING ARM CATCH
20	BL03-01-20	RESPOTTING ARM LINK ASSEMBLY
21	BL02A-01-21	SHAFT

ITEM	CATALOG NO.	DESCRIPTION
22	BL02A-01-22	FLANGED SLEEVE BEARING
23	BL02A-01-23	SHAFT PLATE
24	BL03-01-24	SHAFT
25	BL03-01-26	SPOTTING ARM LINK
26	BL03-01-27	UPPER SPOTTING ARM LINK
27	BL02A-01-29	SHUTTLE CAM HUB CAP
28	BL02A-01-30	TABLE CAM
29	BL03-01-31	CAP
30	BL02A-01-32	SHUTTLE CAM
31	BL03-01-33-00	CAM ASSEMBLY
32	BL03-01-34	LUTCHET
33	BL03-01-35	TABLE SHAFT
34	BL02A-01-35A	KEY
35	BL03-01-38-00	SWEEP DRIVE ASSEMBLY
36	BL02A-01-39B	LIGHT BRACKET <1>
37	BL02A-01-39A	LIGHT BRACKET <2>
38	GB6170-86	NUT
39	GB5782-86	SCREW
40	GB867-86	STUD
41	BLB01-6	WASHER
42	GB6184-86	NUT

TABLE DRIVE & CAM ASSEMBLY



[illegible]

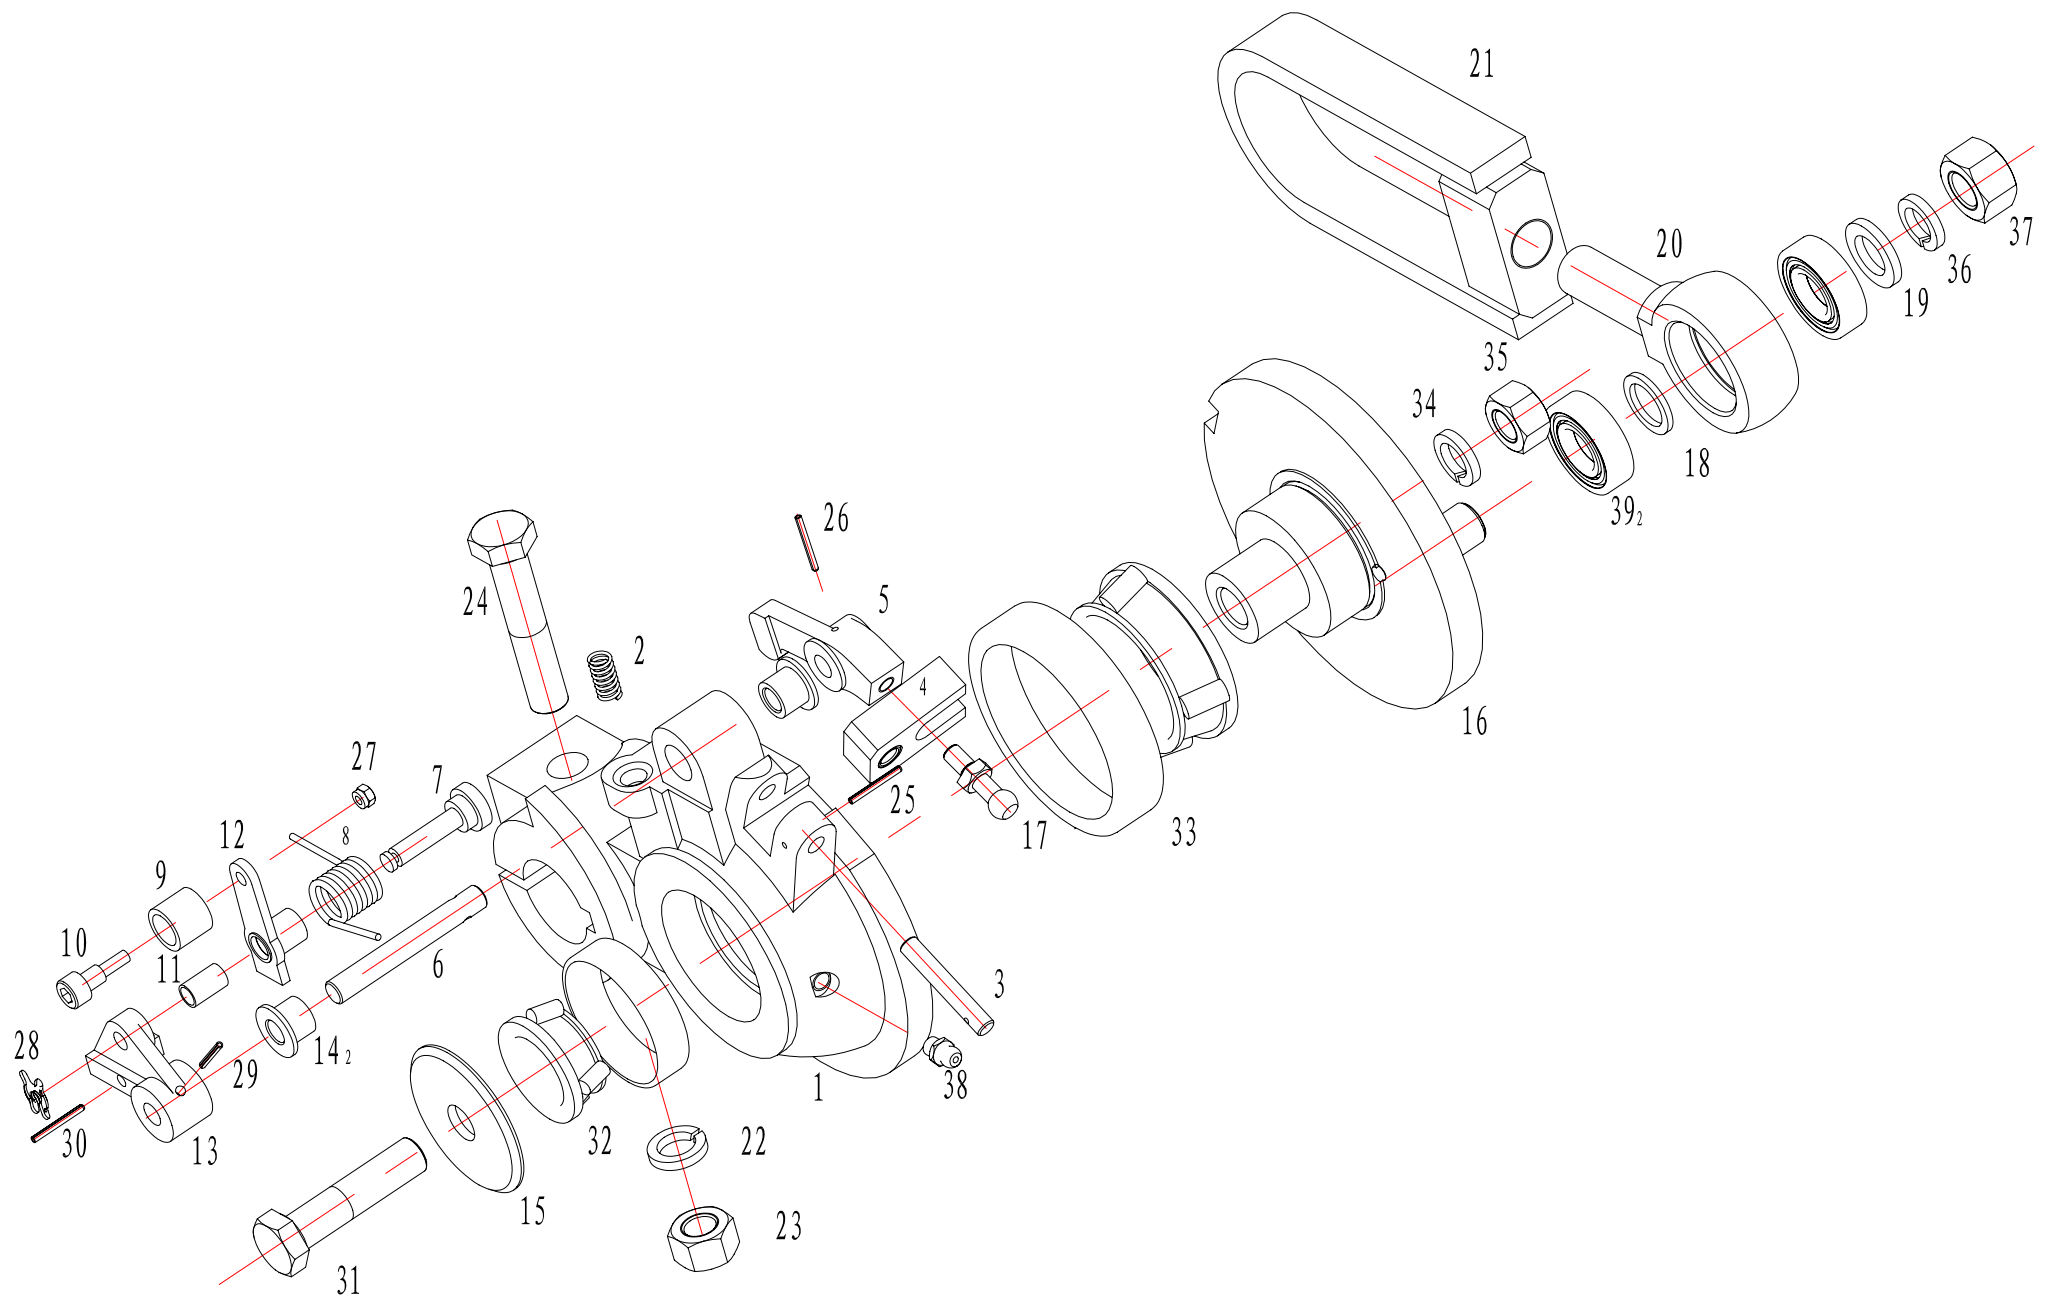 


TABLE DRIVE ASSEMBLY BL03-01-01-00




 



TABLE DRIVE ASSEMBLY BL03-01-01-00

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL03-01-01-01	HOUSING,CRANK(TABLE DRIVE)	22	GB93-87	WASHER,12
2	BL02A-01-01-02	SPRING	23	GB6170-86	NUT,M12
3	BL02A-01-01-03	PIVOT PIN	24	GB5782-86	SCREW,M12X60
4	BL02A-01-01-04-00	LATCH,	25	GB879-86	ROLL PIN,2X20
5	BL03-01-01-05	ARM,LATCH ASSEMBLY	26	GB879-86	ROLL ,PIN,2X20
6	BL02A-01-01-06	PIN	27	GB6184-86	LOCKNUT,M4
7	BL02A-01-01-07	PIN	28	BLB001-06	X-WASHER,12
8	BL02A-01-01-08	SPRING	29	GB879-86	ROLL PIN
9	BL03-01-01-09	ROLLOR	30	GB879-86	GROOVE PIN
10	BL03-01-01-10	SCREW,SHOULDER	31	GB5782-86-86	SCREW
11	BL02A-01-01-11	BUSHING	32		CONE & SEAL ,BEARING
12	BL02A-01-01-12-00	LINK & HUB ASSEMBLY	33		CUP,ROLLER BEARING
13	BL03-01-01-13	LINK	34	GB93.1-86	RING,35
14	BL02A-01-01-14	FLANGE BEARING	35	GB6170-86	NUT
15	BL03-01-01-15	SHIELD	36	GB693-87	WASHER,12
16	BL03-01-01-16	ECCENTRIC	37	GB6170-86	NUT,M8
17	BL03-01-01-17	ROLL PIN	38	GB1152-89	GREASE FITTING,M6
18	BL02A-01-01-18	RETAINING RING	39		BEARING,80102
19	BL02A-01-01-19	SPACER	40		
20	BL03-01-01-20	ROD END	41		
21	BL03-01-01-21-00	YOKE WELDMENT	42		

 

 SHUTTLE OPERATOR & SOLENOID ASSEMBLY BL03-01-02-00

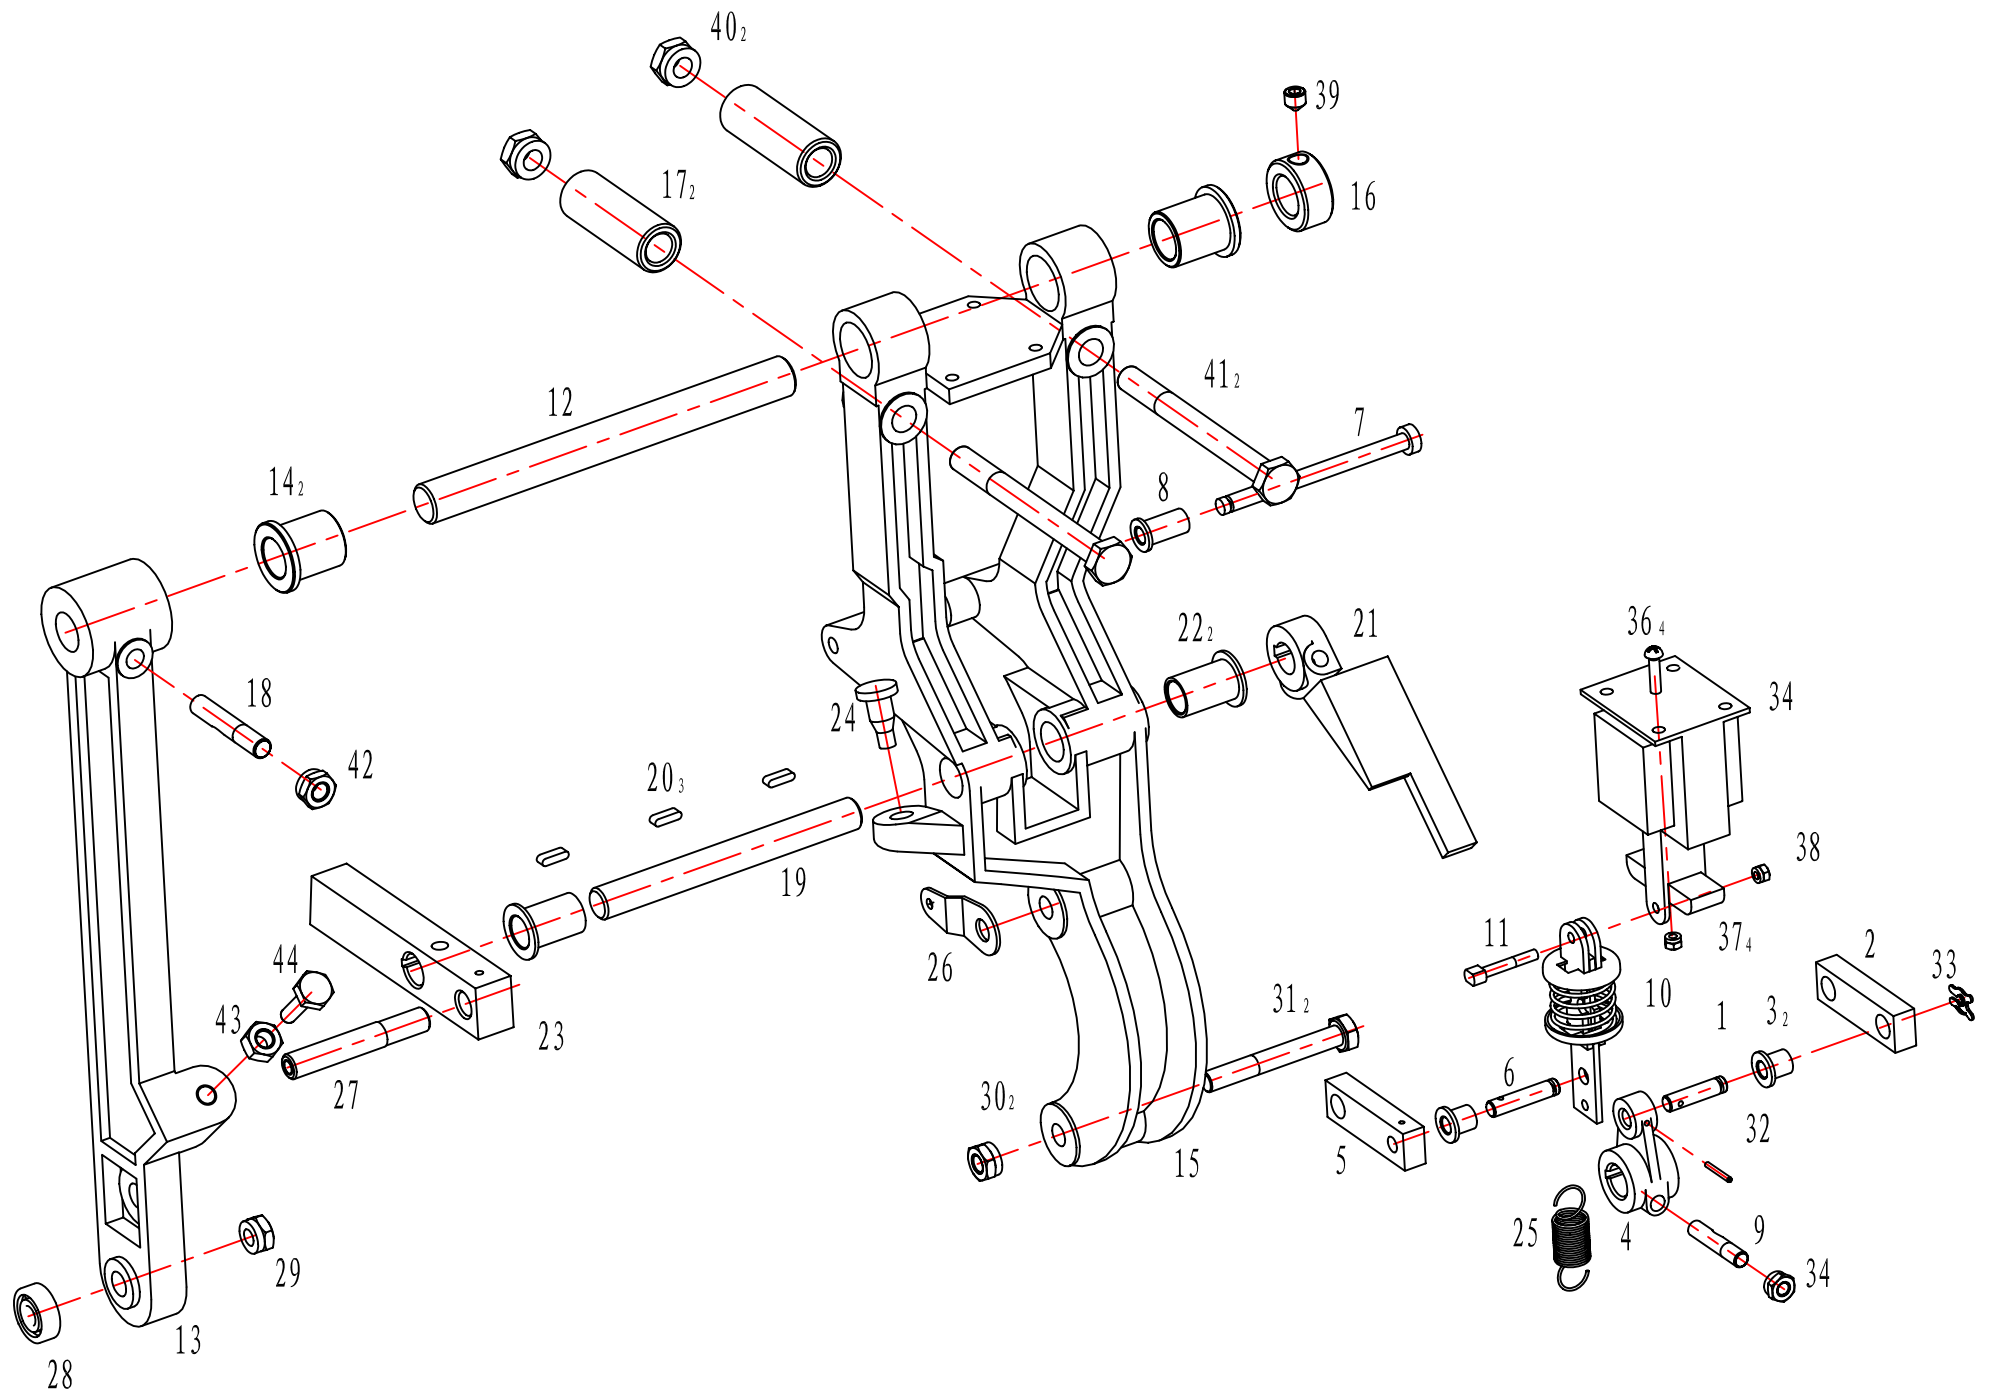




SHUTTLE OPERATOR & SOLENOID ASSEMBLY BL03-01-02-00

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-01-02-01	PIN	22	BL02A-01-02-26	FLANGE BEARING
2	BL02A-01-02-02	LINK ASSEMBLY	23	BL02A-01-02-27	STOP LEVER ASSEMBLY
3	BL02A-01-02-03	BUSHING	24	BL02A-06-02-04	RUBBER BUMPER
4	BL02A-01-02-04	LINK	25	BL02A-01-02-30	SPRING
5	BL02A-01-02-05	LINK ASSEMBLY	26	BL02A-01-02-31	SPRING CLIP
6	BL02A-01-02-06	PIN	27	BL02A-01-02-32	ROLL PIN
7	BL02A-01-02-07-00	SHAFT HEADED	28		BEARING,CF 10K
8	BL02A-01-02-08	FLANGED BEARING	29	GB6184-86	NUT,M10
9	BL02A-01-02-09	ROLL PIN	30	GB6184-86	NUT,M8
10	BL02A-01-02-10-00	SPRING	31	GB5782-86	SCREW,M8X60
11	BL03-01-02-16	ROLL BIN	32	GB879-86	PIN
12	BL02A-01-02-17	SHAFT	33	BLB001-6	RING 6
13	BL03-01-02-18	LEVER	34	GB6184-86	RING,35
14	BL02A-01-02-19	FLANGE BEARING	35		SOLENOID
15	BL02A-01-02-20	BRACKET CASTING	36	GB818-85	SCREW M4X16
16	BL03-01-02-21	COLLAR	37	GB6184-86	NUT,M4
17	BL03-01-02-22	TUBE ASSEMBLY	38	GB6184-86	NUT,M4
18	BL03-01-02-23	CLAMP STUD	39	GB78-85	SCREW,M8X8
19	BL03-01-02-24	SHAFT	40	GB6184-86	NUT,M10
20	BL03-01-02-24A	KEY	41	GB5782-86	SCREW,M8
21	BL03-01-02-25	CAM LINK	42	GB6170-86	NUT,M8

 [illegible]

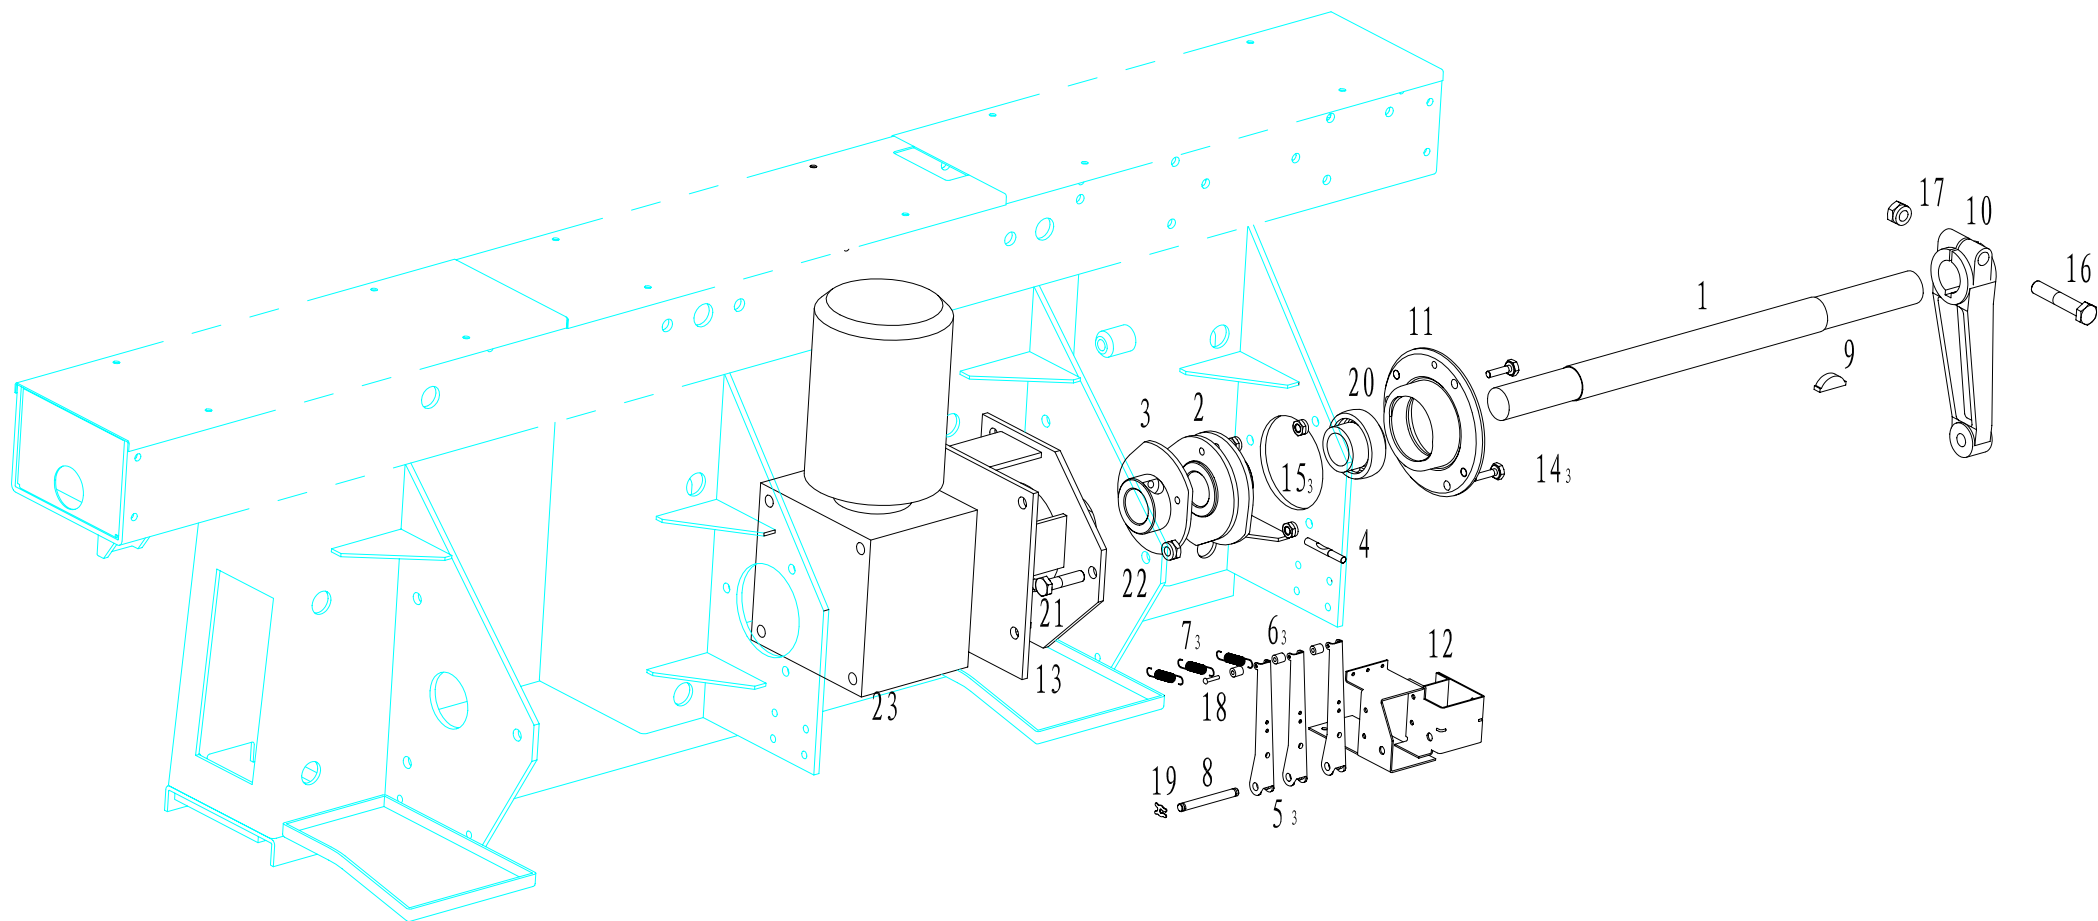

SWEEP & TABLE CAM ASSEMBLE BL03-01-38-00


 



TABLE DRIVE & CAM ASSEMBLY

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL03-01-38-01	SHAFT,SWEEP	22	GB6184-86	NUT, M10
2	BL03-01-38-02A-00	CAM WELDMENT,SWEEP	23		FRONT END GEARBOX
3	BL03-01-38-03A-00	CAM WELDMENT,SWEEP			
4	BL03-01-12	LOCKNUT			
5	BL03-01-13	SWITCH LEVER ASSEMBLY			
6	BL02A-01-05				
7	BL02A-01-14	SPRING			
8	BL03-01-15	SHAFT			
9	BL02A-01-35				
10	BL03-01-38-04	CRANK ARM			
11	BL03-01-34	SELF ALIGNING BEARING			
12	BL03-01-03-00	HOUSING WELDMENT			
13	BL05-01-38-05	TABLE CONNECTING WELDMENT			
14	GB5782-86	SCREW,M8X25			
15	GB6184-86	NUT,M8			
16	GB5782-86	SCREW,M12X65			
17	GB6184-86	NUT,M12			
18	GB867-86	SCREW,3X15			
19	BLB001-06	WASHER,8			
20	90506	BEARING 60506			
21	GB5782-86	SCREW,M10X45	42		

 

BIN ASSEMBLY BL03-02-00

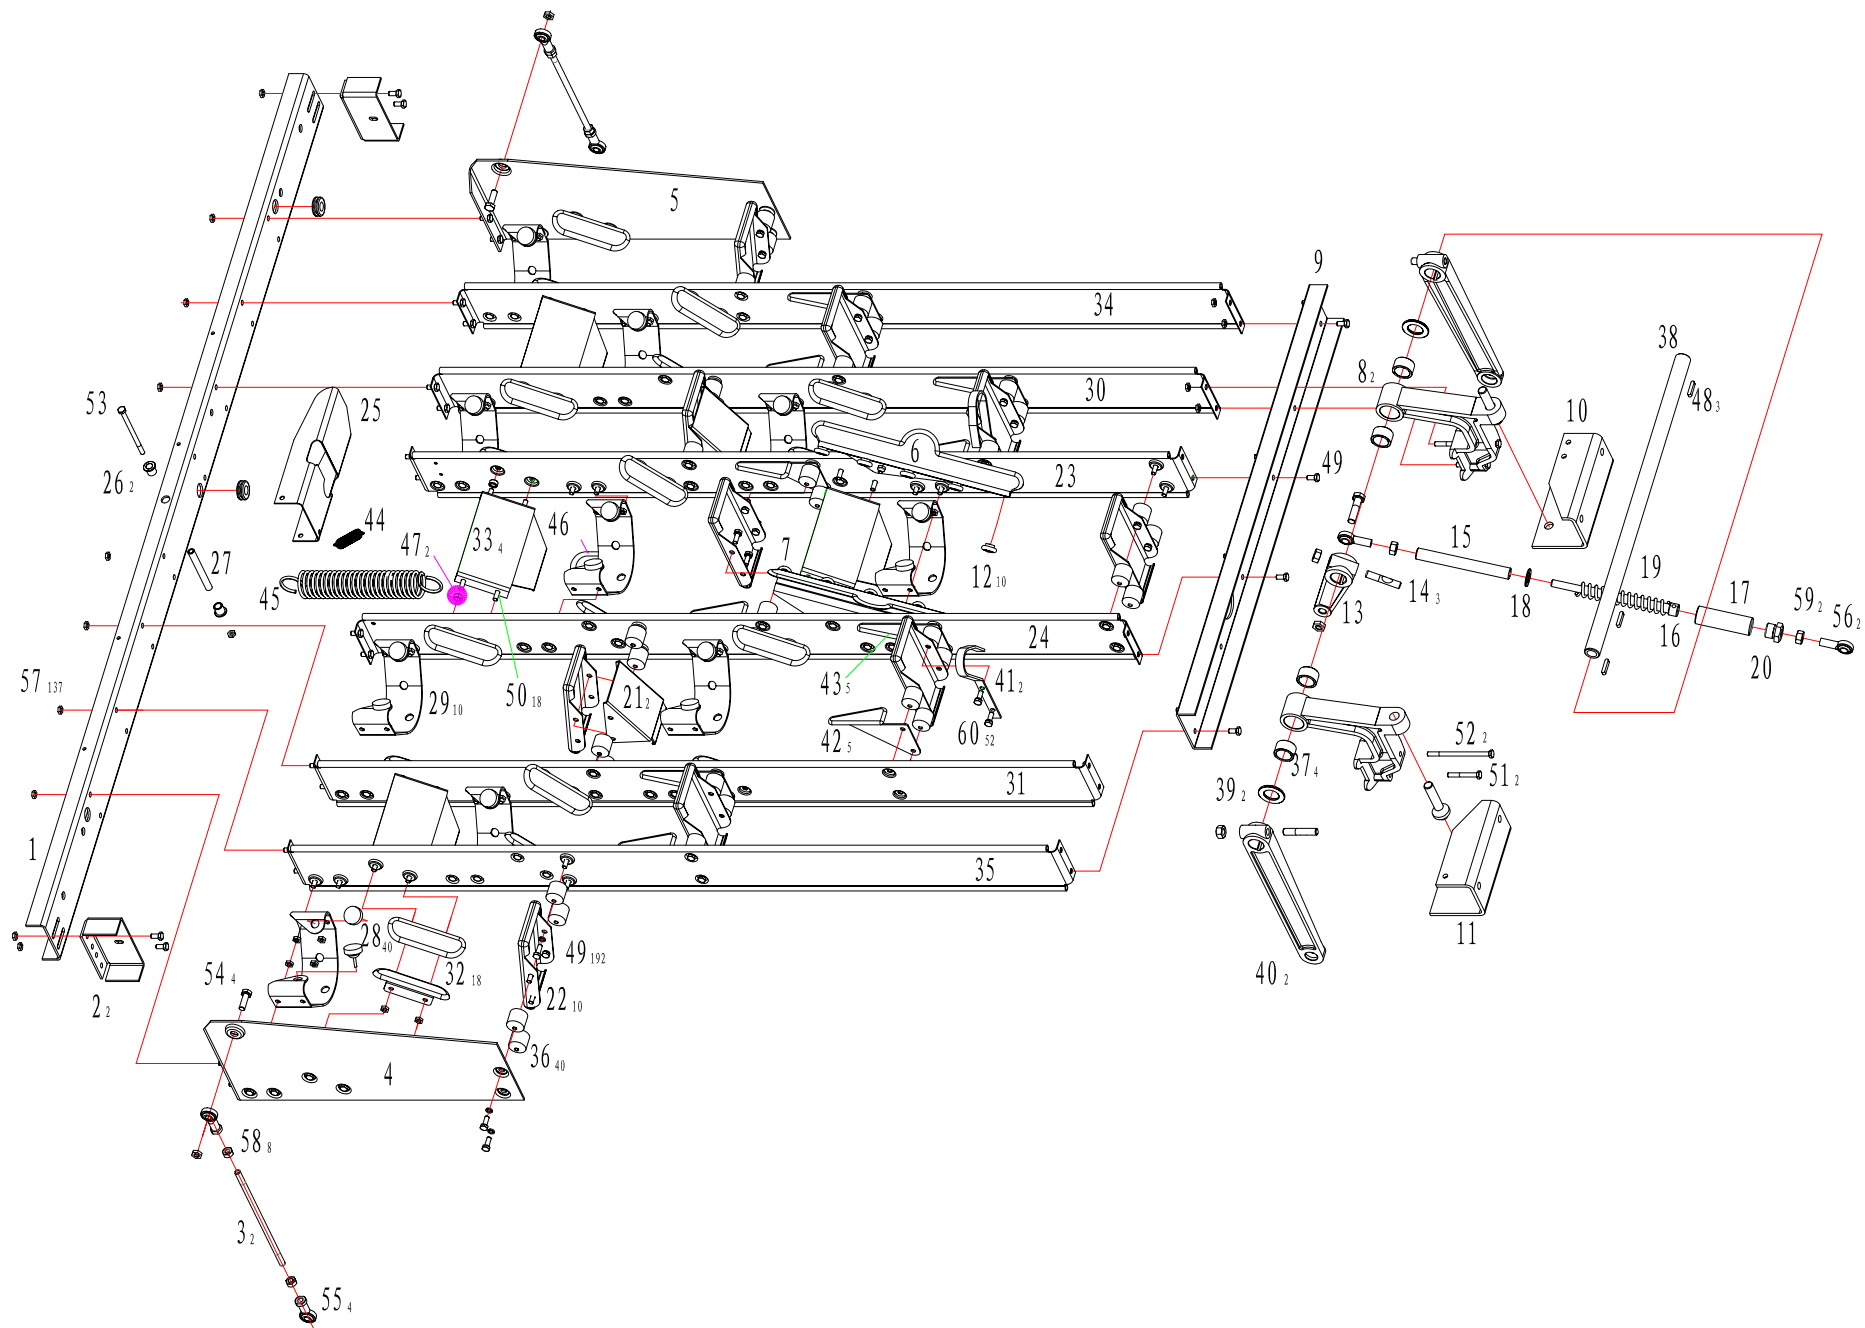


 


ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-02-03	CHANNEL WELDMENT	22	BL02A-02-26	SPACER-PIN BUTT GUIDE
2	BL02A-02-04	BRACKET SUPPORT	23	BL02A-02-27A	STRINGER CENTER R.H. & L.H.
3	BL03-02-05	ROD	24	BL02A-02-27B	STRINGER #1 PIN
4	BL02A-02-06A	PIN GUIDE L.H.-BIN ASSEMBLY	25	BL02A-02-28	STRINGER -OUTSIDE R.H.
5	BL02A-02-06B	PIN GUIDE R.H.-BIN ASSEMBLY	26	BL02A-02-29	BEARING FL.L(562X.688X378)
6	BL02A-02-08B	TRACK ASSEMBLY R.H.	27	BL02A-02-30	SPACER-ROLLER AY-DISTRIBUTOR
7	BL02A-02-08A	TRACK ASSEMBLY.-BIN ASSEMBLY	28	BL02A-02-31	SPACER-GROMMET # 2250
8	BL03-02-09	BRACKET ASSEMBLY,-BIN ASSEMBLY	29	BL02A-02-32	BRACKET-BIN ASSEMBLY
9	BL02A-02-10	SHORT CHANNEL	30	BL02A-02-33A	STRINGER CENTER R.H.
10	BL02A-02-11A-00	BRACKET WELDMENT R.H.-BIN ASSEMBLY	31	BL02A-02-33B	STRINGER # PIN L.H.
11	BL02A-02-11B-00	BRACKET WELDMENT L.H.-BIN ASSEMBLY	32	BL02A-02-34	PIN GUIDE
12	BL03-02-12-00	BEARING RESPOT CELL ASSEMBLY	33	BL02A-02-35	SPACER PIN HEAD GUIDE
13	BL03-02-14	LEVER BIN ASSEMBLY	34	BL02A-02-36A	STRINGER OUTSIDE R.H.(1)
14	BL03-02-15	STUD CLAMP	35	BL02A-02-36B	STRINGER OUTSIDE L.H.(6)
15	BL03-02-17	LONG TUBE	36	BL02A-02-37-00	SHOCK MOUNT (ENCAPSULATED INSE-RTS)
16	BL03-02-18	ROD ASSEMBLY	37	BL02A-02-38	BEARING-SLEEVE
17	BL03-02-18A	TUBE-SHORT	38	BL02A-02-39	SHAFT
18	BL02A-02-19	WASHER SPRING	39	BL02A-02-40	WASHER-THRUST OILITE (IT 1503)
19	BL03-02-20	SPRING-SHUTTLE ROD	40	BL03-02-41	LEVER
20	BL03-02-01	TUBE-PLUG	41	BL02A-02-42	GUIDE NO.1 PIN
21	BL02A-02-25	SPACER-HEAD GUILD-BIN	42	BL02A-02-43A	PIN GUIDE PIN


ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
43	BL02A-02-43B	PIN GUIDE PIN			
44	BL02A-02-44	SPRING			
45	BL02A-02-45	SPRING			
46	BL02A-02-46	BRACKET WELDMENT PIN HEAD (#5)			
47	BL02A-02-47	SPACER			
48	BL03-04-09	KEY-ON-FLAT			
49	GB5783-86	BOLT,M6X12			
50	GB5783-86	BOLT,M6X20			
51	GB5782-86	BOLT,M6X45			
52	GB5782-86	BOLT, M6X75			
53	GB5782-86	BOLT,M6X95			
54	GB5783-86	BOLT,M6X25			
55	S18F	BEARING			
56	SA10F	BEARING			
57	GB6184-86	NUT,M6			
58	GB6184-86	NUT,M8			
59	GB6170-86	NUT,M10			
60	GB5783-86	BOLT,M6X16			

  
BIN ASSEMBLY BL03-02-00



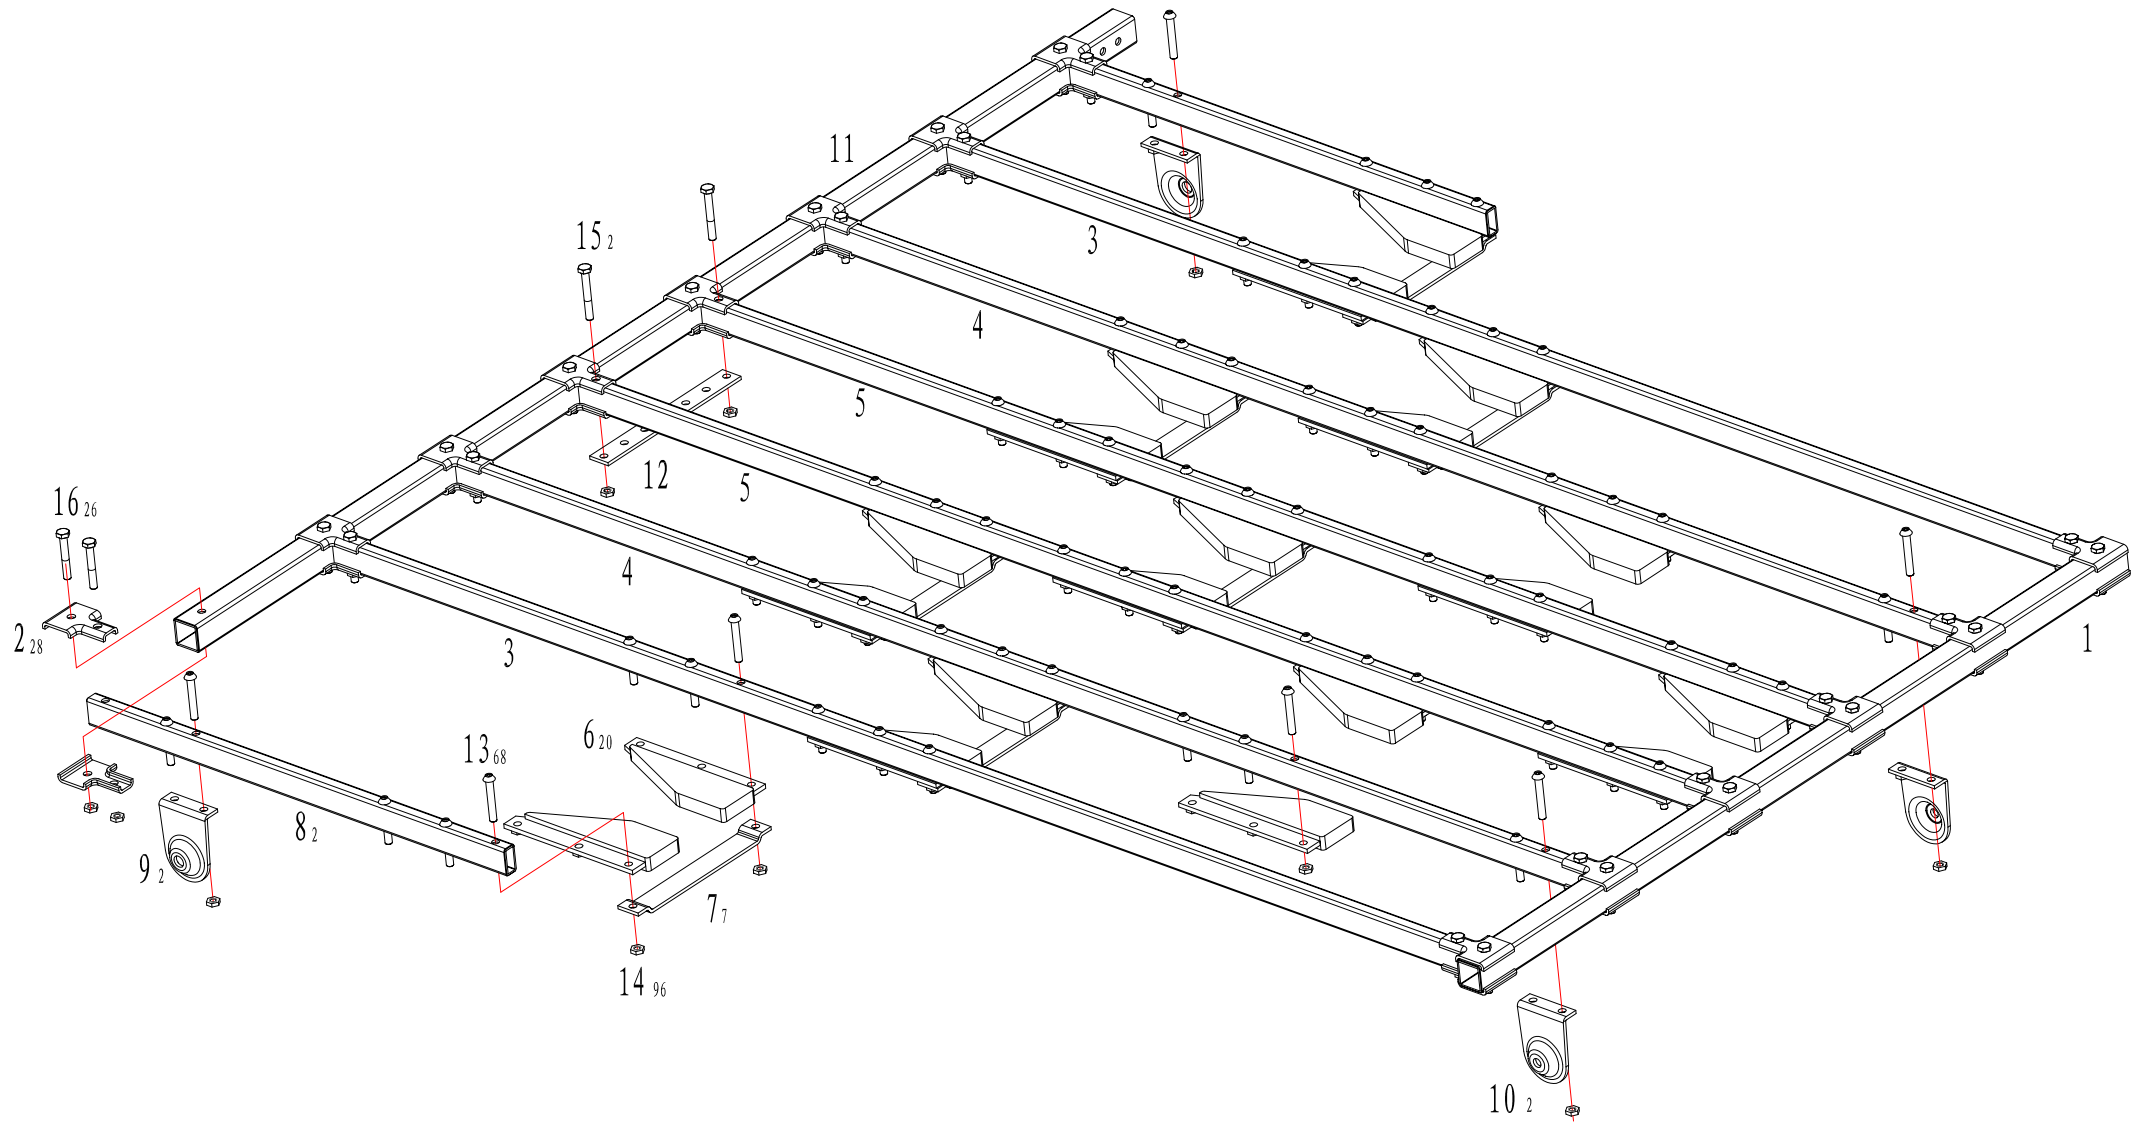

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-02-01-01	TUBE-CROSS SHORT-BIN			
2	BL02A-02-01-02	CLAMP,END-BIN			
3	BL02A-02-01-03	TUBE-OUTSIDE-BIN			
4	BL02A-02-01-04	TUBE-SIDE LONG-BIN			
5	BL02A-02-01-05	TUBE-CENTER-BIN			
6	BL02A-02-01-06-00	PIN HOLDER ASSEMBLY			
7	BL02A-02-01-07	STRAP-BIN-SHUTTLE ASSEMBLY			
8	BL02A-02-01-09	TUBE-SIDE SHORT-BIN			
9	BL02A-02-01-10A	BRACKET-ARM-SHUTTLE ASSEMBLY			
10	BL02A-02-01-10B	BRACKET-ARM-SHUTTLE ASSEMBLY			
11	BL02A-02-01-11	TUBE-CROSS LONG-BIN			
12	BL02A-02-01-12	STRAP-SPRING-BIN			
13		BOLT M6x45			
14	GB1684-86	LOCKNUT			
15	GB5782-86	BOLT,M6x45			
16	GB5782-86	BOLT,M6x40			

 


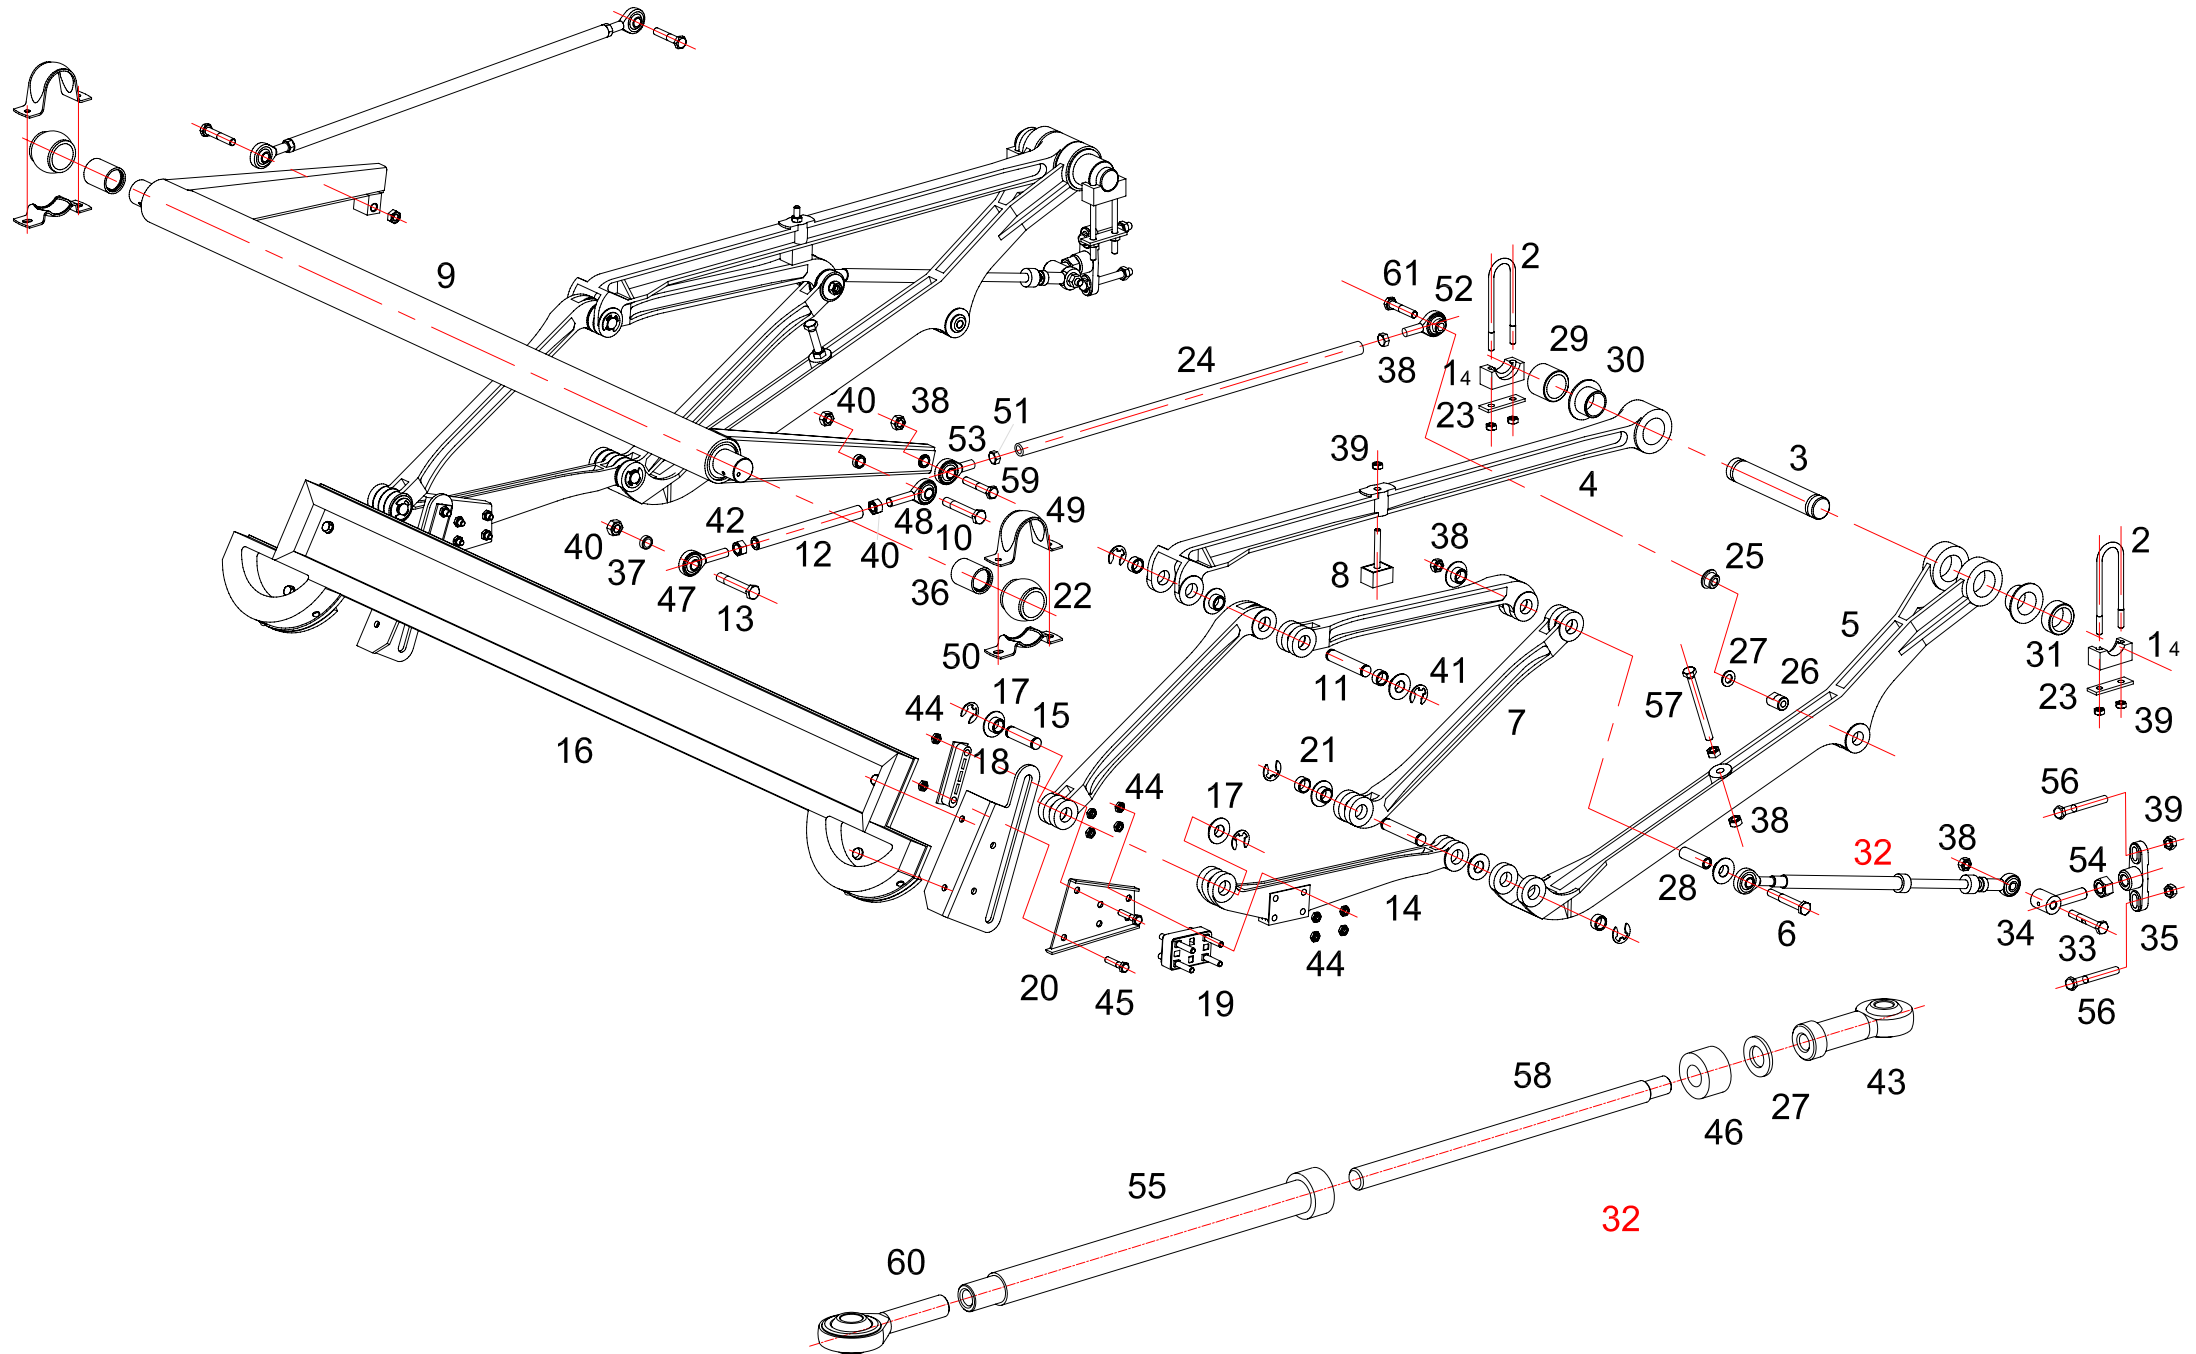 

ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-03-01	SADDLE
2	BL03-03-02	"U" BOLT
3	BL02A-03-03	SHAFT MAIN PIVOT
4	BL02A-03-04	STABILIZING LINK
5	BL02A-03-05	DRIVE LINK
6	BL03-03-06A	BOLT, SPECIAL
7	BL02A-03-07	LINK
8	BL02A-03-08-00	BUMPER
9	BL09-03-09-00	SWEEP ROCK ARM ASSEMBLY
10	BL03-03-10	BOLT, SPECIAL
11	BL02A-03-11	PIN BEARING
12	BL03-03-12	TUBE
13	BL03-03-13	BOLT, SPECIAL
14	BL02A-03-14	SUPPORT LINK
15	BL02A-03-15	PIN BEARING
16	BL02A-03-16-00	SWEEP BAR ASSEMBLY
17	BL02A-03-17	FLANGED BUSHING
18	BL02A-03-18	SLIDE BAR
19	BL03-03-19-00	SHOCK MOUNT ASSEMBLY
20	BL02A-03-20A/B	SHOCK BRACKET L. H./R.H.
21	BL02A-03-21	SLEEVE BUSHING

ITEM	CATALOG NO.	DESCRIPTION
22	BL02A-03-22-02	PILLOW BLOCK
23	BL02A-03-23	CLAMP BAR
24	BL03-03-24	TUBE
25	BL02A-03-25A	FLANGE BUSHING
26	BL03-03-26A	SCREW SLEEVE
27	BL02A-03-27	SPACER
28	BL02A-03-28	SLEEVE BUSHING
29	BL02A-03-29	SPACER, MAIN PIVOT-LONG
30	BL02A-03-30	FLANGE BUSHING
31	BL02A-03-31	SPACER, MAIN PIVOT-SHORT
32	BL03-03-32-00	TELESCOPING LINK ASSEMBLY
33	BL03-03-33	BOLT, SPECIAL
34	BL03-03-34	THREADED LINK
35	BL03-03-35	SHOCK MOUNT BRACKET
36	BL02A-03-22-01	BRASS SLEEVE
37	BL03-03-37	BUSHING
38	GB6170-86 M10	NUT
39	GB6170-86 M8	NUT
40	GB6170-86 M12	NUT
41	GB896-86 16	RETAINING RING
42	GB6170-86 M12	NUT, L. H.

 
SWEEP ASSEMBLY BL02A-03-00





ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
43	SI10F	GREASE FITTING			
44	GB6184-86 M8	NUT			
45	GB5782-86 M8 × 35	BOLT			
46	BL02A-03-32-03	BUMPER			
47	SA 12F	GREASE FITTING, L. H.			
48	SA 12F	GREASE FITTING, R. H.			
49	BL02A-03-22-03	PILLOW BLOCK			
50	BL02A-03-22-04	PILLOW BLOCK			
51	GB6170-86 M10	NUT, L. H.			
52	SA 10F	GREASE FITTING			
53	SA 10F	GREASE FITTING			
54	GB6170-86 M16	NUT			
55	BL03-03-32-01-00	TELESCOPING SLEEVE WELDMENT			
56	GB5782-86 M8 × 80	BOLT			
57	GB5783-86 M10 × 110	BOLT			
58	BL03-03-32-02	ROD			
59	GB5782-86 M10 × 55	BOLT			
60	SA10K	GREASE FITTING			
61	GB5781-86 M10 × 55	BOLT			

 YOKE AND SPOTTING CUP ASSEMBLY BL03-04-00

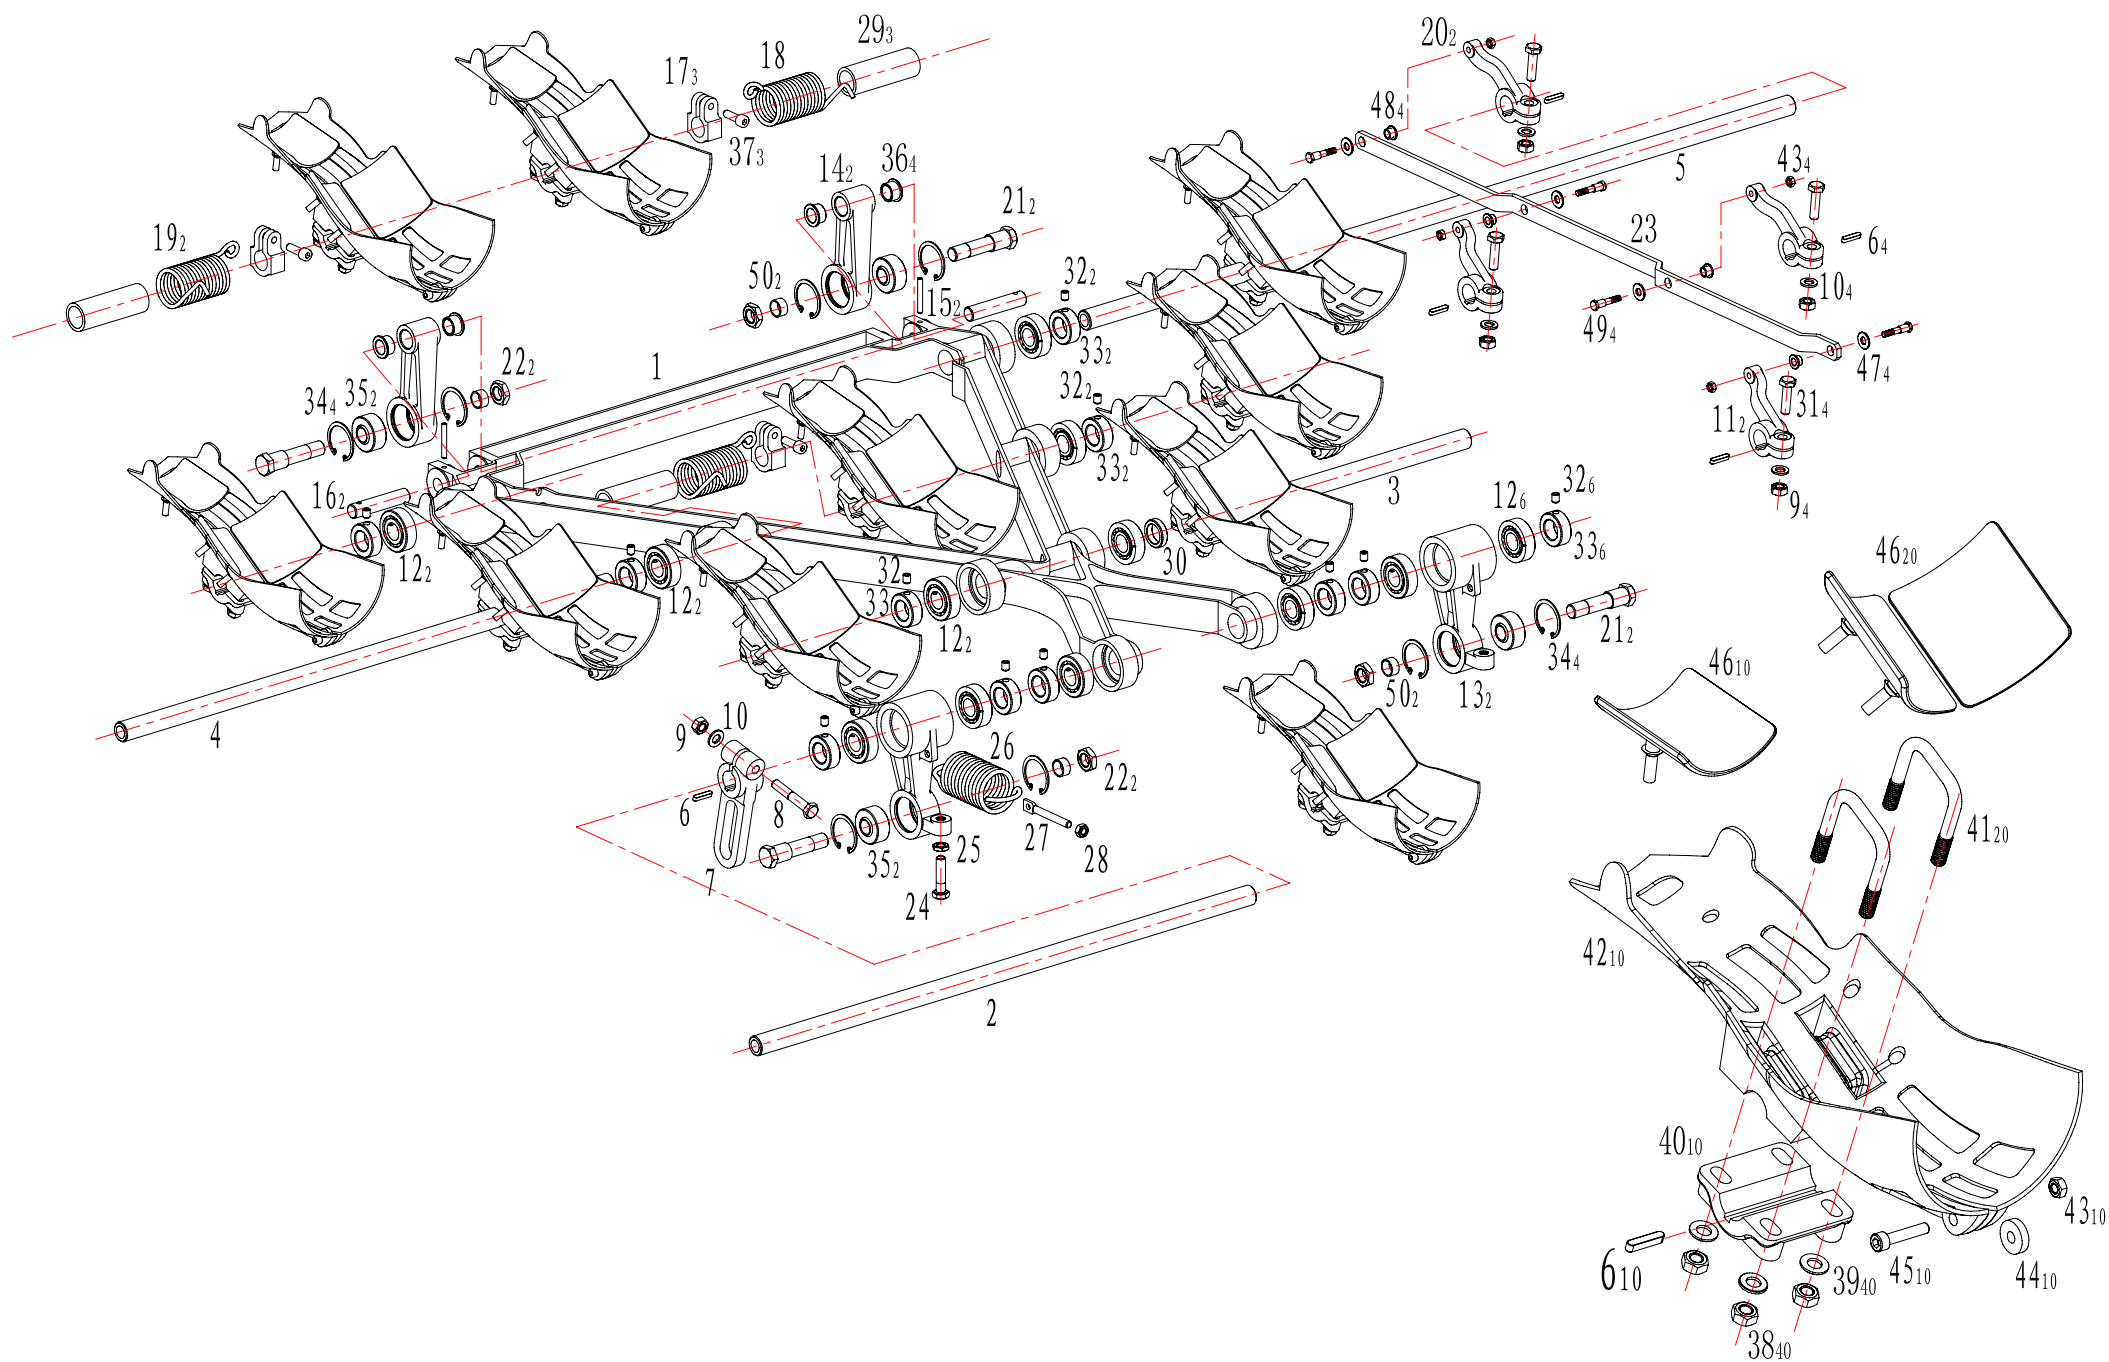


ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-04-05	YOKE	22	GB6172-86(M16)	NUT
2	BL03-04-08	SHAFT#1	23	BL02A-04-24	LINK
3	BL03-04-29	SHAFT#2	24	GB5782-86(M10x40)	BOLT
4	BL03-04-27	SHAFT#3	25	GB6172-86(M10)	NUT
5	BL03-04-26	SHAFT#4	26	BL02A-04-02	SPRING EXTENSION
6	BL03-04-09	KEY, SPECIAL	27	BL03-04-01	BOLT, SPECIAL
7	BL02A-04-07	ACTUATOR ARM	28	GB6170-86(M8)	NUT
8	GB5782-86(M10x50)	BOLT	29	BL02A-04-31	SPRING SLEEVE YOKE
9	GB6184-86(M10)	NUT	30	BL02A-04-32	SPACER
10	GB97.1-85(10)	WASHER	31	GB5782-86(M10X35)	BOLT
11	BL02A-04-16	LEVER INNER YOKE	32	GB77-85(M8x10)	BOLT
12		BUSHING, SPECIAL	33	BL03-04-10	COLLAR WITH SET SCREW
13	BL03-04-11	FRONT LEG ASSEMBLY R.H./L.H.	34	GB893.1-86(40)	RETAINING RING
14	BL02A-04-17	LEG ASSEMBLY REAR	35		BUSHING SPECIAL
15	GB879-86(5x40)	PIN	36	BL02A-04-20	FLANGED BUSHING
16	BL02A-04-19	PIN LEVER REAR YOKE	37	GB70-85(M8x25)	BOLT
17	BL03-04-30	COLLAR SPRING	38	GB6184-86(M8)	NUT
18	BL02A-04-06	SPRING L.H.	39	GB97.2-85(8)	WASHER
19	BL02A-04-21	SPRING R.H.	40	BL02A-04-14	SPOTTING CUP CAP
20	BL02A-04-28	LEVER OUTER YOKE	41	BL03-04-15	"U" BOLT
21	BL03-04-13	SCREW TREAD SHAFT	42	BL02A-04-03	SPOTTING CUP


YOKE & BEARING ASSEMBLY BL03-04-00



 [illegible]

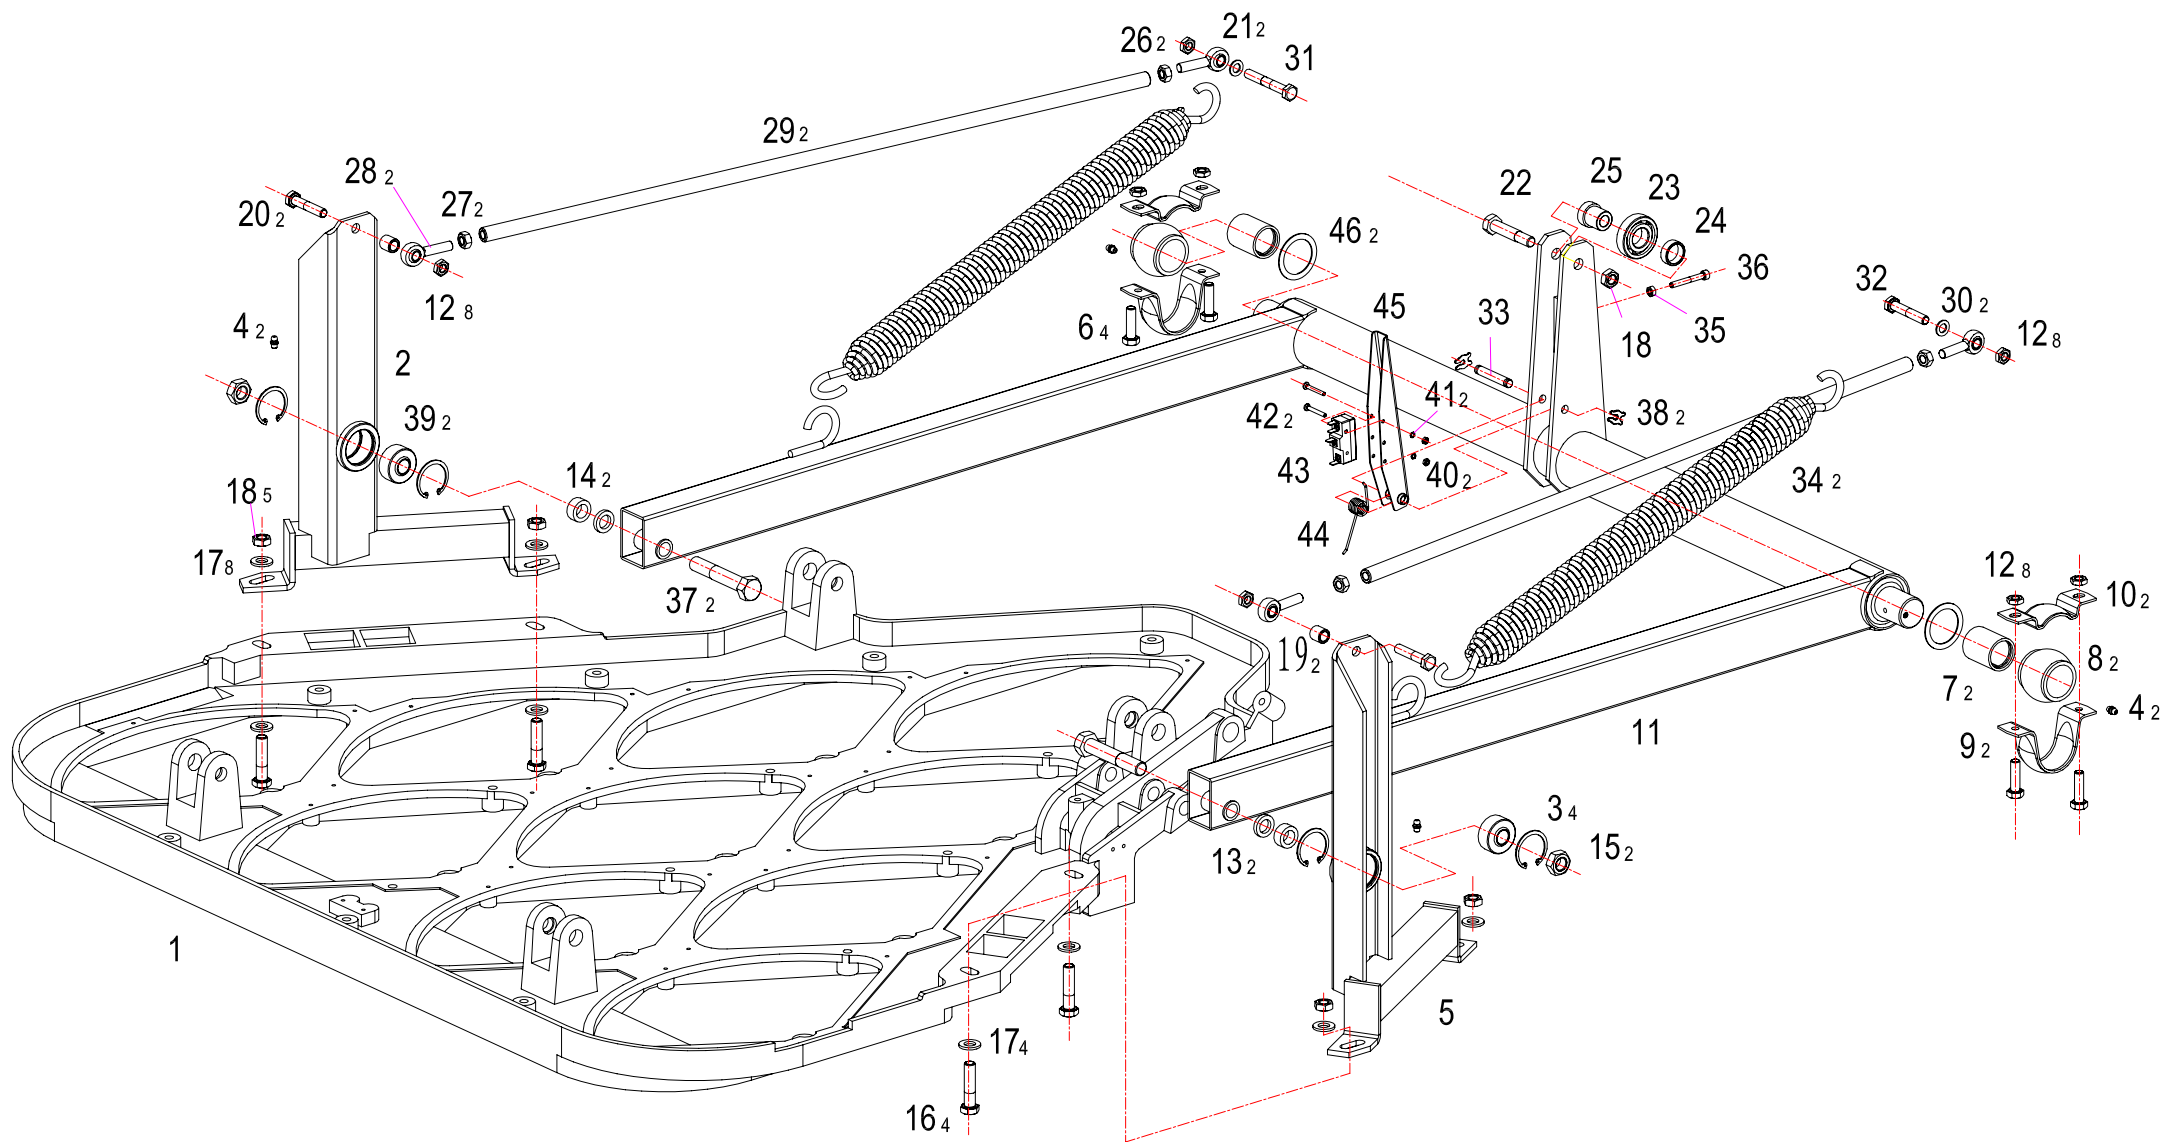

 
SPOT AND RESPOT CONTROL ASSEMBLY BL03-05-00



SPOT & RESPOT CONNECTING ASSEMBLY BL03-05-00


ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL03-05-03-01	TABLE CASTING	22	BL03-05-27	PIN SHAFT
2	BL02A-05-12-00	TABLE SUPPORT ASSEMBLY	23	R14	BEARING
3	GB893.1-86(40)	RING	24	BL02A-05-29	SLEEVE-TABLE DRIVE ASSEMBLY
4	GB1152-89(M6)	NUT	25	BL02A-05-27A	BEARING FLANGED .502x871x1.20
5	BL02A-05-05-00	TABLE SUPPORT ASSEMBLY L.H.	26	GB6170-86(M10)	NUT, L.H.
6	GB5783-86(M10x35)	BOLT	27	GB6170-86(M10)	NUT
7	BL02A-03-22-01	BRASS SLEEVE	28	SA-10F	ROD BEARING
8	BL02A-03-22-02	BALL BUSHING	29	BL03-05-01C	THE ROD (33 1-2 LG)
9	BL02A-03-22-03	CAP-BALL-BUSHING	30	GB848-85(10)	WASHER
10	BL02A-03-22-04	BALL BUSHING SEAT	31	GB5782-86(M10x70)	BOLT
11	BL03-05-02-00	TORQUE-TUBE WELDMENT ASSEMBLY	32	GB5782-86(M10x55)	BOLT
12	GB6184-86(M10)	NUT	33	BL02A-05-32	PIN-HOOK SPOT
13	BL02A-05-04a	SPACER FRONT END	34	BL03-05-18	SPRING
14	BL02A-05-04b	SPACER	35	GB6170-86(M6)	NUT
15	GB6184-86(M16)	NUT	36	GB77-85(M6x45)	BOLT
16	GB5782-86(M12x50)	BOLT	37	BL03-05-04	CONNECTING SHAFT
17	GB97.1-85(12)	WASHER	38	BLB001-10	X WASHER
18	GB6184-86(M12)	NUT	39	SCP-16	ROD BEARING
19	BL02A-05-14A	SPACER-FRONT END	40	GB6170-86(M4)	NUT
20	GB5782-86(M10x50)	BOLT	41	GB93-87(4)	WASHER
21	SA-10F(L)	ROD BEARING	42	GB818-85(M4x30)	BOLT

 
TORQUE TUBE WELDMENT ASSEMBLY BL03-05-00(CONTINUED)

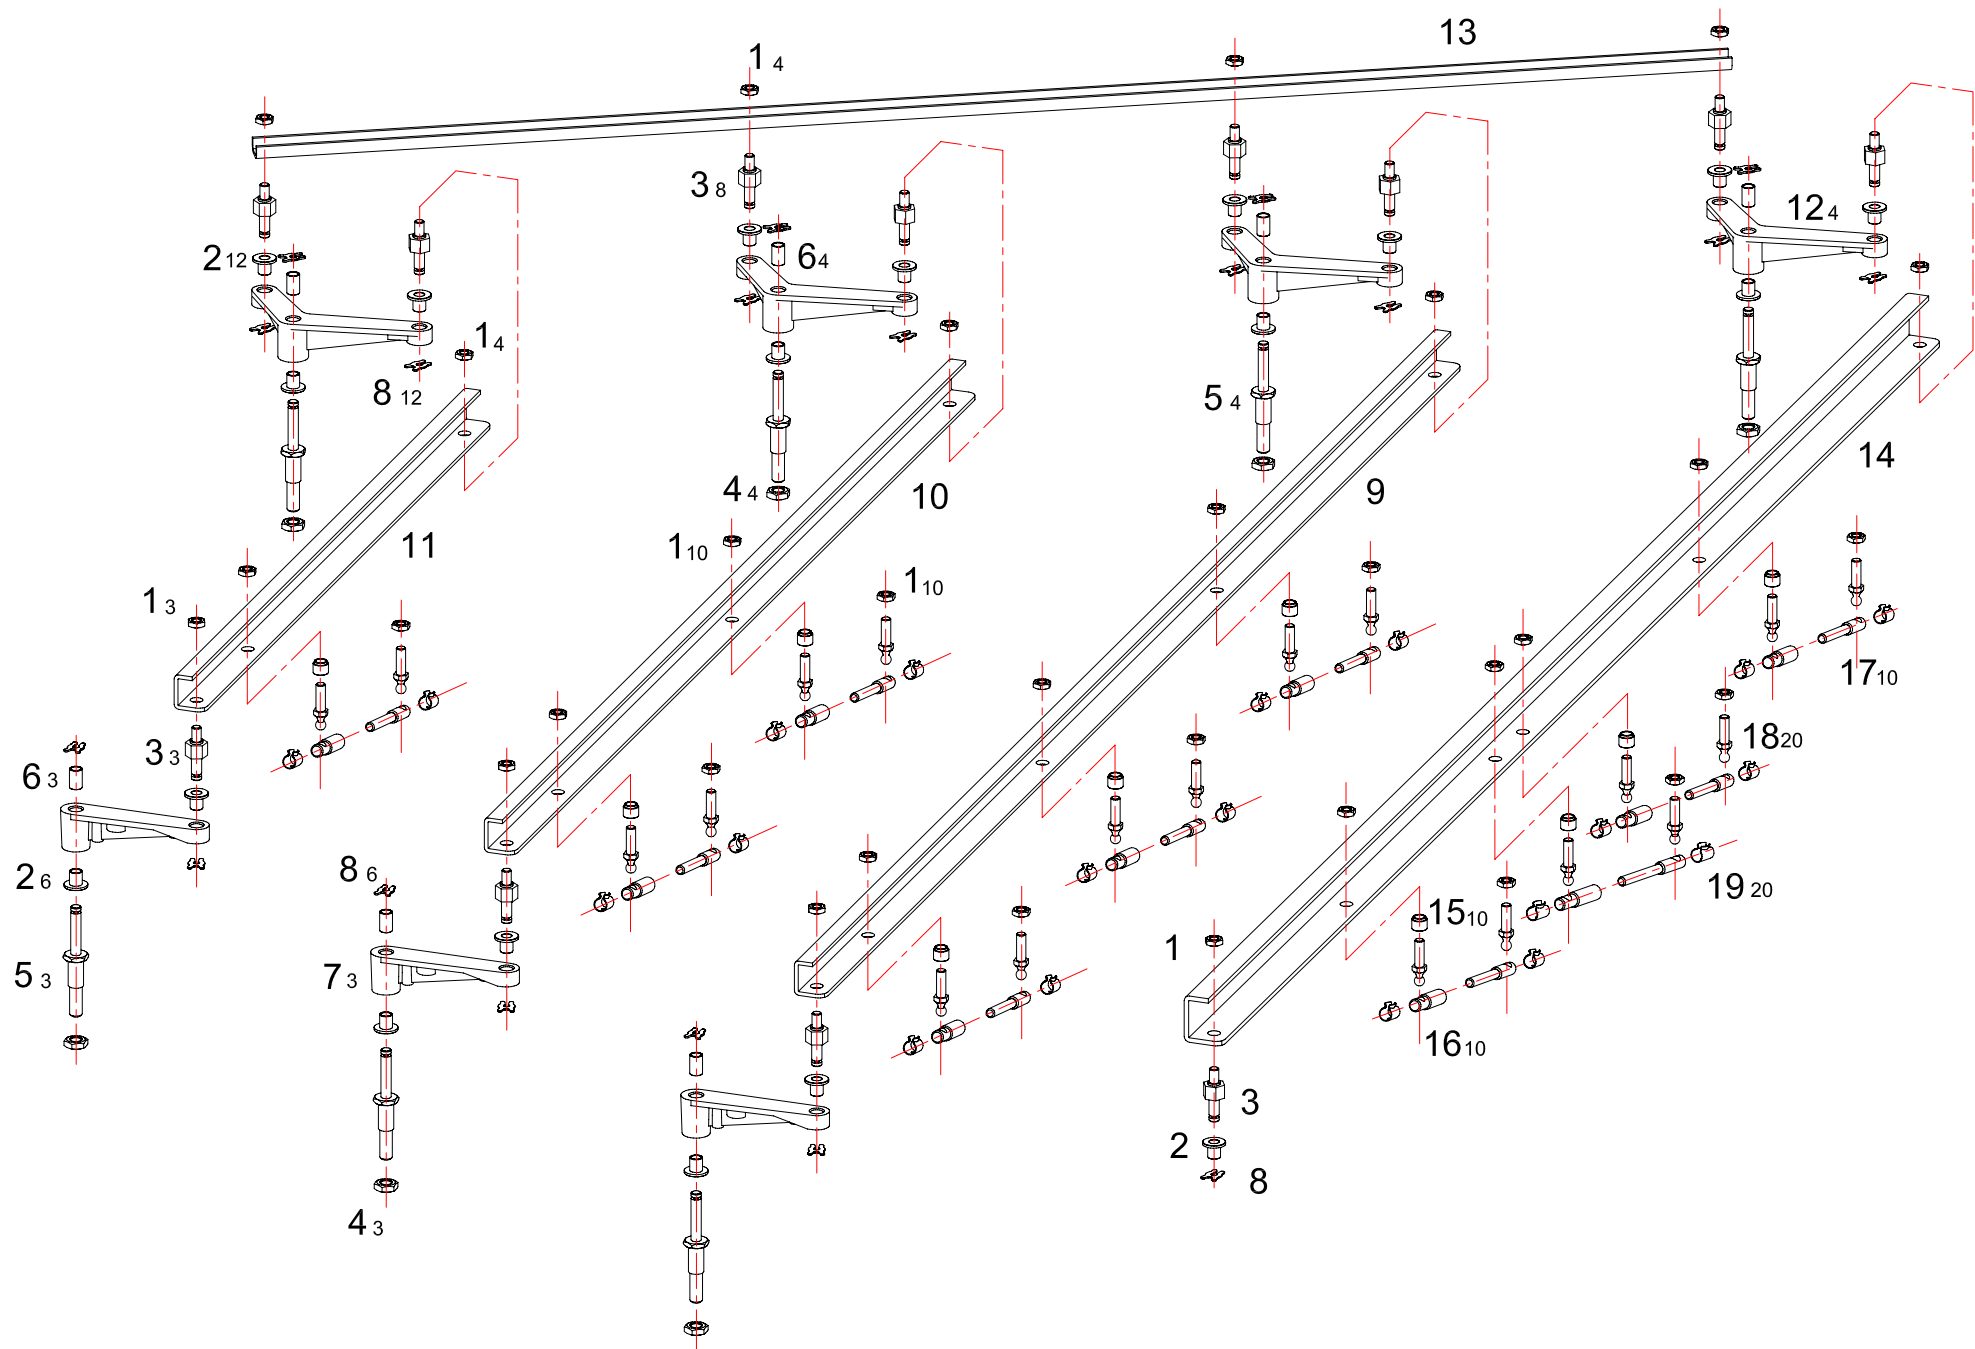

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	GB6184-86(M6)	NUT			
2	BL02A-05-08-15	BUSHING			
3	BL03-05-23	PIN			
4	GB6184-86(M8)	NUT			
5	BL03-05-21	PIN			
6	BL02A-05-19	BUSHING FLANGED RESPOT LEVER			
7	BL02A-05-10	LEVER			
8	BLB001-6	X WASHER			
9	BL02A-05-09C	LINK			
10	BL02A-05-09B	LINK			
11	BL02A-05-09A	LINK			
12	BL02A-05-24	LEVER RESPOT			
13	BL02A-05-22	LINK WIREWAY			
14	BL02A-05-09D	LINK			
15	BL02A-05-28-04a	SHAFT			
16	BL03-05-28-04	PIN			
17	BL03-05-28-03	BALL LINK			
18	BL03-05-28-01	CLIP			
19	BL02A-05-28-02	LOCK SPRING CATCH			

  TORQUE TUBE WELDMENT ASSEMBLY BL03-05-00(CONTINUED)



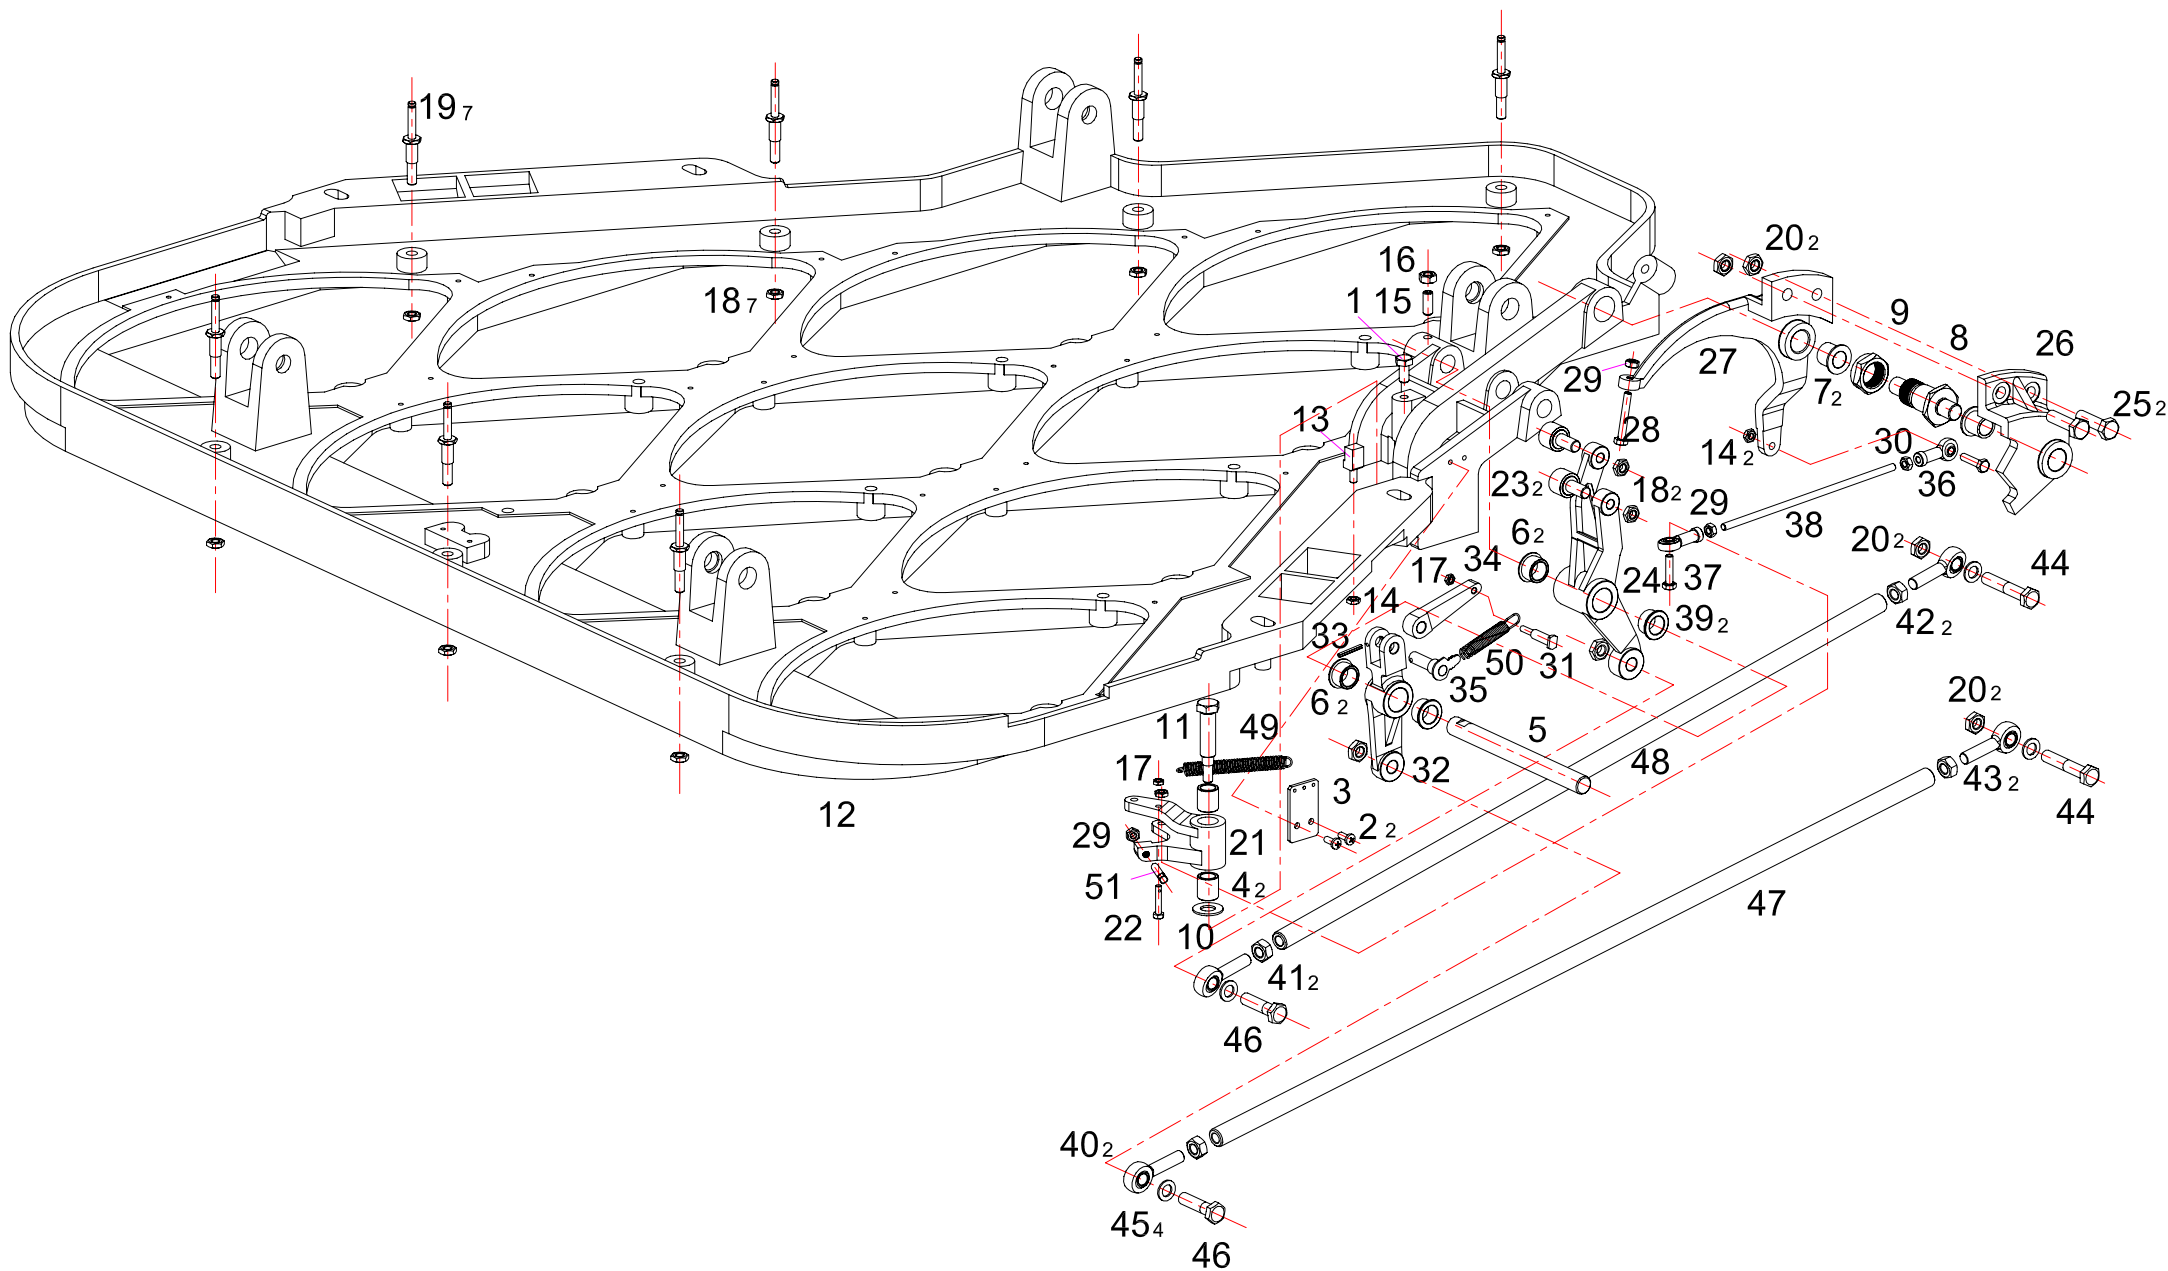



ITEM	CATALOG NO.	DESCRIPTION
1	GB5783-86(M8X16)	BOLT
2	GB818-85(M5X12)	BOLT
3	BL03-05-03-05	BRACKET
4	BL02A-05-03-23	SLEEVE BUSHING
5	BL02A-05-03-18	SHAFT
6	BL02A-04-20	BUSHING
7	BL03-05-03-08	BUSHING
8	BL03-05-03-20	SHAFT
9	BL03-05-03-19	NUT, SPECIAL
10	BL02A-05-03-23A	WASHER
11	BL03-05-03-04	BOLT, SPECIAL
12	BL03-05-03-01	TABLE CASTING
13	BL03-05-03-16	STOP, RESPOT
14	GB6184-86(M6)	NUT
15	GB77-85(M8X20)	BOLT
16	GB6170-86(M8)	NUT
17	GB6184-86(M5)	NUT
18	GB6184-86(M8)	NUT
19	BL03-05-21	PIN
20	GB6184-86(M10)	NUT
21	BL03-05-03-02	NUT

ITEM	CATALOG NO.	DESCRIPTION
22	BL03-05-03-21	BOLT, SPECIAL
23	CF-8	END FITTING
24	BL03-05-03-15	HORIZONTAL MOTOR
25	GB5783-86(M10X35)	BOLT
26	BL02A-05-03-12	LINK AND BEARING ASSEMBLY
27	BL03-05-03-06	CAM LINK BRG. ASSEMBLY
28	GB821-88(M6X40)	BOLT
29	GB6170-86(M6)	NUT
30	GB6170-86(M6)L	NUT, L. H.
31	BL03-05-03-11	PIN
32	BL02A-05-03-13	FINGER LEVER ASSEMBLY
33	GB879-86(φ 3X24)	PIN
34	BL02A-05-03-10	FINGER LINK
35	BL02A-05-03-07-00	PIVOT WELDMENT
36	SI-6F(L)	END FITTING, L. H.
37	SI-6F	END FITTING
38	BL03-05-03-14	LINK
39	GB5783-86(M6X25)	BOLT
40	SA-10F	END FITTING
41	GB6170-86(M10)	NUT
42	GB6170-86(M10)L	NUT, L. H.

  
TABLE ASSEMBLY BL03-05-00(CONTINUED)




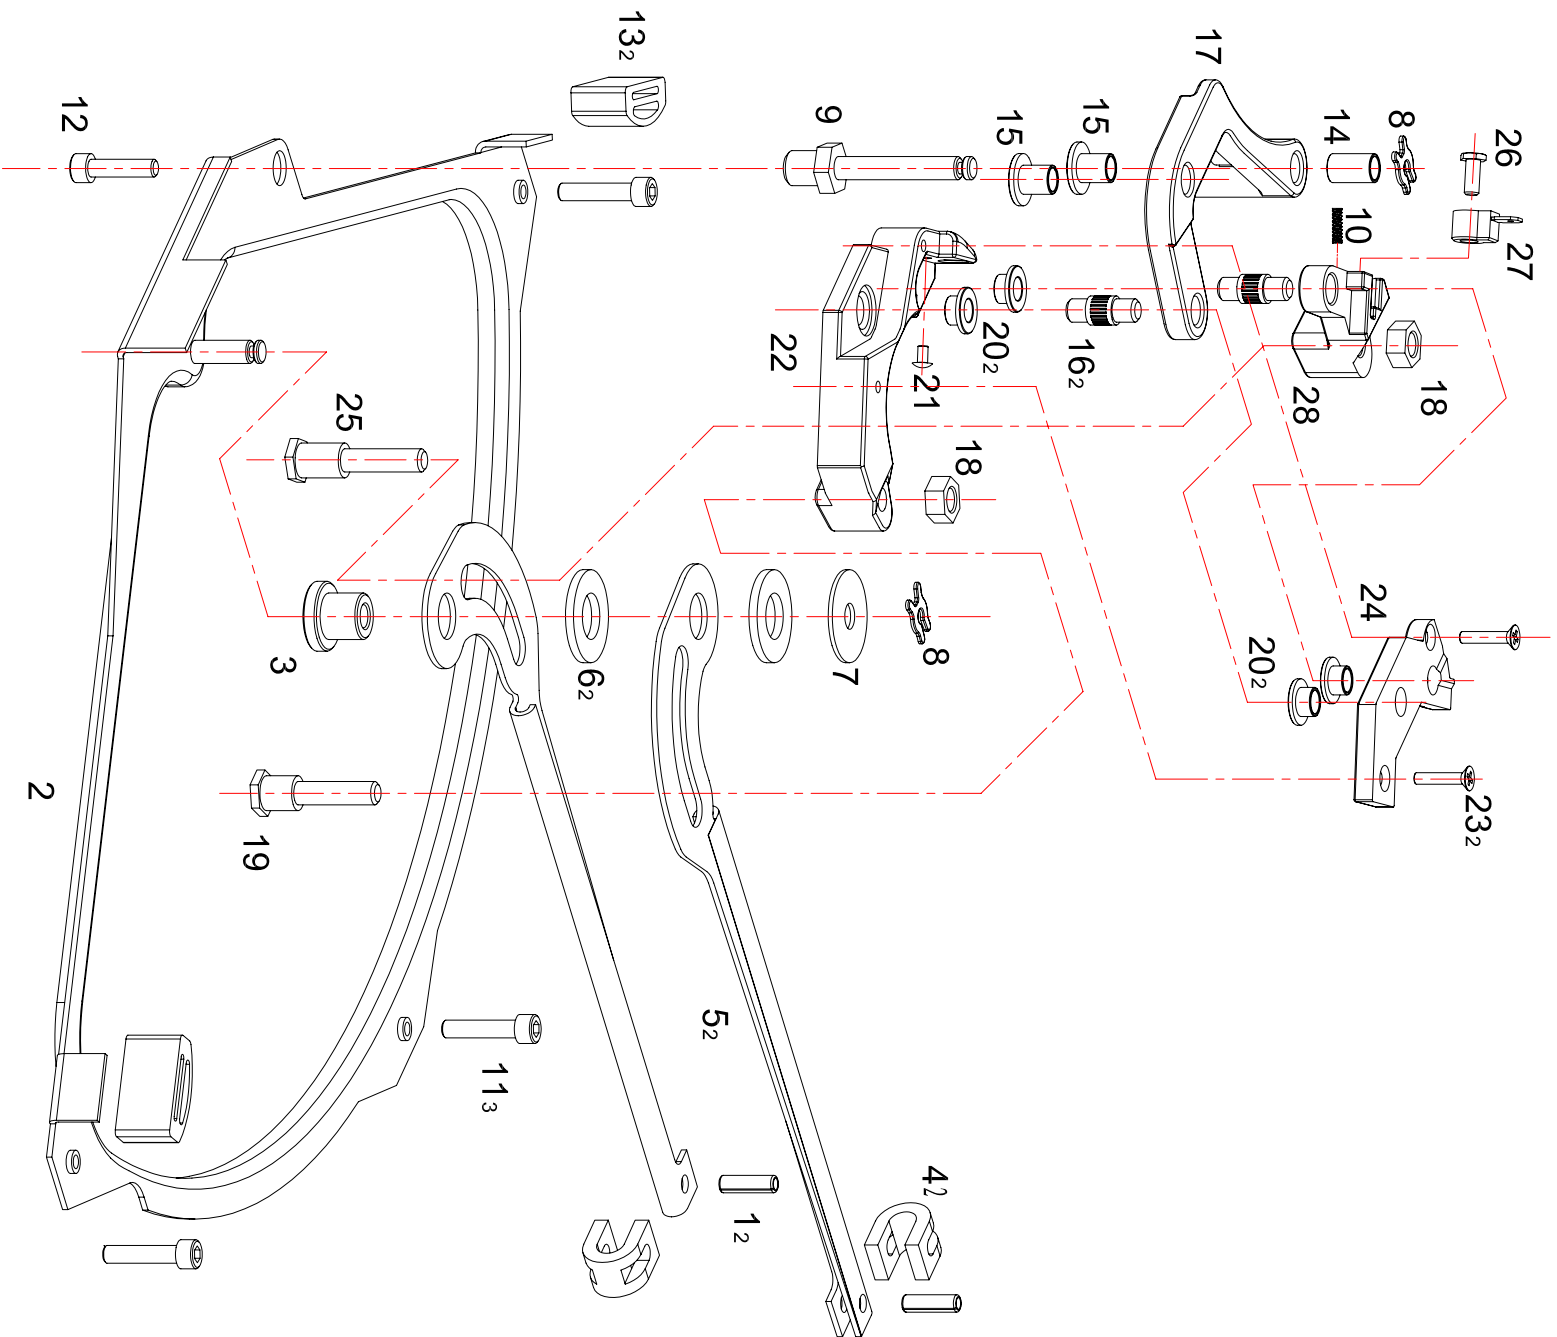




ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	GB879-86(φ 5X14)	PIN	22	BL03-05-08-05-04	YOKE,ARM ASSEMBLY
2	BL03-05-08-02-00	FRAME RESPOT WELDMENT	23	GB819-85(M3x16)	BOLT
3	BL02A-05-08-14	BUSHING	24	BL02A-05-08-05-03	PLATE YOKE ASSEMBLY
4	BL02A-05-08-04	INSERT-RESPOT-PLASTIC	25	BL03-05-08-06	STUD LONG
5	BL02A-05-08-03	FINGERASY-RESPOT	26	BL03-05-08-05-07a	SCREW,STOP
6	BL02A-05-08-12	SPACER-RESPOT CELL	27	BL03-05-08-05-05-00a	INSERT ASSEMBLY
7	BL03-05-08-08	WASHER-RESPOT CELL ASSEMBLY	28	BL02A-05-08-05-02-01	ARM RESPOT YOKE
8	BLB001-6	X WASHER			
9	BL03-05-08-11a	STUD-PIVOT			
10	BL02A-05-08-05-08	SPRING YOKE ARM			
11	GB70-85(M5x16)	BOLT			
12	GB70-85(M5x12)	BOLT			
13	BL02A-05-08-01	BUMPER EXTENSION			
14	BL02A-05-08-19	BUSHING FLANGED RESPOT LEVER			
15	BL02A-05-08-15	BUSHING			
16	BL02A-05-08-09	SHAFT-LEVER ASSEMBLY-RESPOT			
17	BL02A-05-08-10-01	LEVER RESPOT			
18	GB6184-86(M6)	NUT			
19	BL03-05-08-07	STUD-SHORT			
20	BL02A-05-08-05-06	BUSHING, YOKE			
21	BL02A-05-08-05-01	PIVOT-REMI TUBLR.STL			

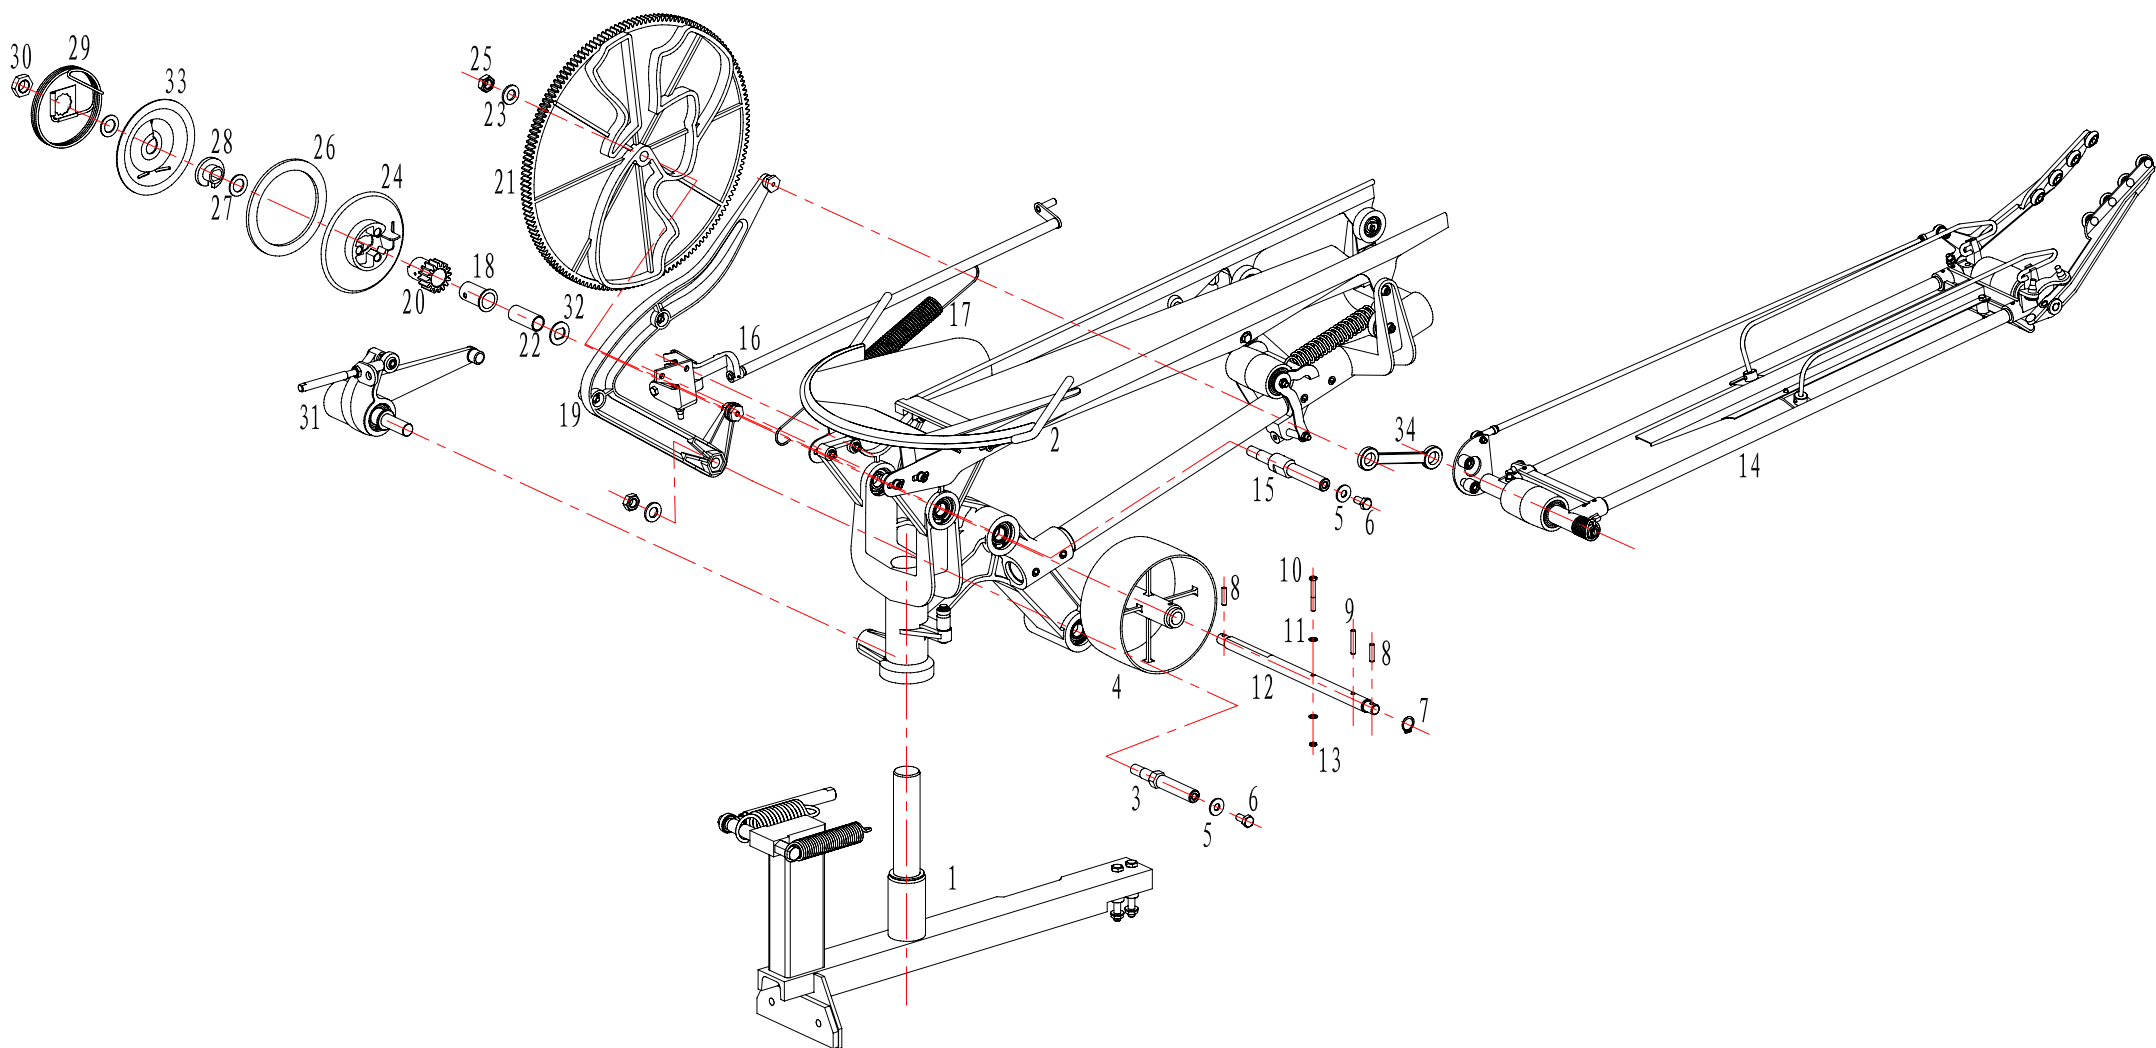 

 

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL04-06-03-00	SUPPORT ASSEMBLY	22	BL02A-06-05-04	SLEEVE-DISTRIBUTOR DRIVE
2	BL03-06-01-00	DISTRIBUTOR SUPPORT ASSEMBLY	23	GB97.1-85	
3	BL03-06-05-15	SHAFT ARM	24	BL02A-06-05-06-00	PINION & SLEEVE ASSEMBLY
4	BL02A-06-05-02	PULLEY-DISTRIBUTOR BELT DRIVE	25	GB6184-86,M12	
5	BL02A-06-05-18	WASHER 11/32x11/16x1/16	26	BL02A-06-05-08	FRICTION DISTRIBUTOR
6	GB5783-86,M6x16		27	BL02A-06-05-12	WASHER-DISTRIBUTOR CLUTCH
7	GB894.1-86	WASHER	28	BL02A-06-05-10	WORM-ADJUSTING-DISTRIBUTOR
8	GB879-86	BOLT	29	BL02A-06-05-11-00	SPRING ASSEMBLY-DISTRIBUTOR DRIVE
9	GB879-86	BOLT	30	BL03-06-05-20	NUT SPECIAL
10	GB5782-86,M5x40		31	BL03-06-05-19-00	
11	GB97.1-85	WASHER	32	BL02A-06-05-03	STRINGER-OUTSIDE R.H.
12	BL03-06-05-01	SHAFT	33	BL02A-06-05-09	CLUTCH PLATE
13	BGB6184-86,M5		34	BL02A-06-02-12	CONNECTING LINK
14	BL03-06-02-00	TUBE ASSEMBLY			
15	BL03-06-05-14	SHAFT,CAM SUPPORT			
16	BL03-06-04-00	TRIP STOP SUPPORT ASSEMBLY			
17	BL02A-06-05-17	SPRING-LINER-DISTRIBUTOR			
18	BL02A-06-05-06-02				
19	BL03-05-16-00	ARM ASSEMBLY			
20	BL02A-06-05-06-01	PINION			
21	BL02A-06-05-13	CAM-INDEX-DIATRIBUTOR			

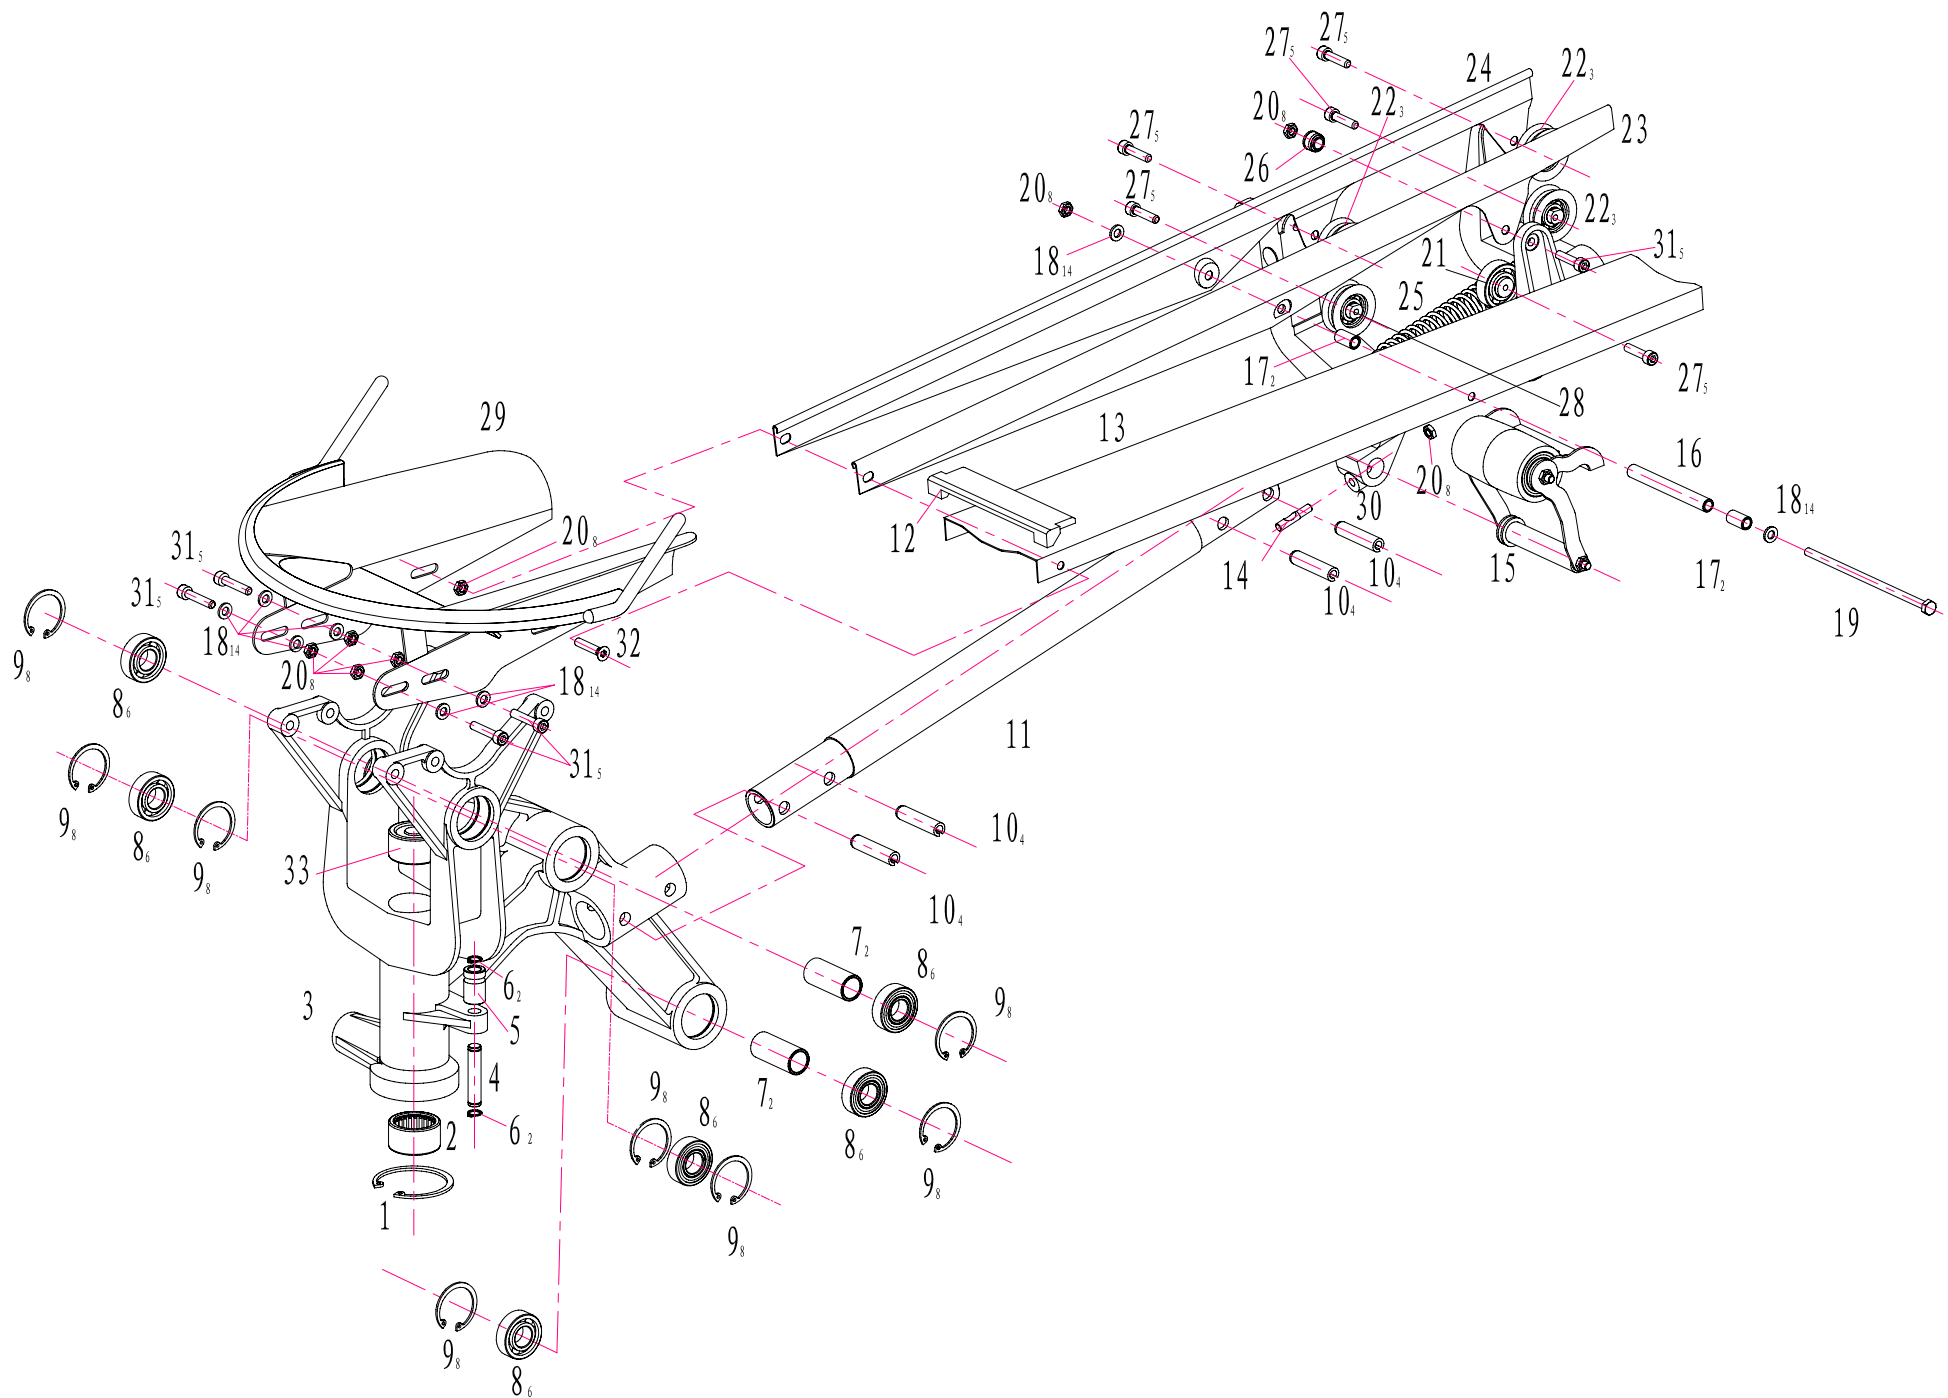 

DISTRIBUTOR SUPPORT ASSEMBLY BL03-06-01-00




ITEM	CATALOG NO.	DESCRIPTION
1	GB893.1-86 55	RING
2		BEARING
3	BL03-06-01-01	MAIN CASTING AND BEARING ASSEMBLY
4	BL02A-06-01-18	PIN,SPRING POST
5	BL02A-06-01-17	SPRING POST,SLEEVE
6	GB894.1-86 9	RING
7	BL02A-06-01-16	SPACER BEARING
8	99502H	BEARING
9	GB893.1-86 35	RING
10	GB879-86 10*45	BOLT
11	BL02A-06-01-02	CARRIAGE SUPPORT TUBE
12	BL02A-06-01-13A	
13	BL02A-06-01-13	BELT RUNNER,REAR
14	BL03-06-01-09	CLAMP STUD
15	BL03-06-01-04-00	PULLEY TIGHTER ASSEMBLY
16	BL02A-06-01-12	SPACER INNER
17	BL02A-06-01-14	SPACER OUTER
18	GB97.1-85 6	WASHER
19	BL03-06-01-11	BOLT,SPECIAL
20	GB6184-86 M6	LEVER OUTER YOKE
21	BL03-06-01-07-00	


ITEM	CATALOG NO.	DESCRIPTION
22	BL03-06-01-06-00	
23	BL02A-06-01-10	SUPPORT GUIDE L.H.
24	BL02A-06-01-15	SUPPORT GUIDE R.H.
25	BL02A-06-01-08	SPRING
26	BL02A-06-01-20-00	
27	GB70-85 M6*25	BOLT
28	BL03-06-01-05-00	.
29	BL02A-06-01-19-00	ORIENTOR PAN ASSEMBLY
30	BL02A-06-01-03	CARRIAGE SUPPORT CASTING ASSEMBLY
31	GB70-85 M6*30	BOLT
32	GB2673-86 M6*30	BOLT
33		SPACER YOKE ASSEMBLY
34		
35		
36		
37		
38		
39		
40		
41		
42		

 DISTRIBUTOR SUPPORT ASSEMBLY BL03-06-01-00



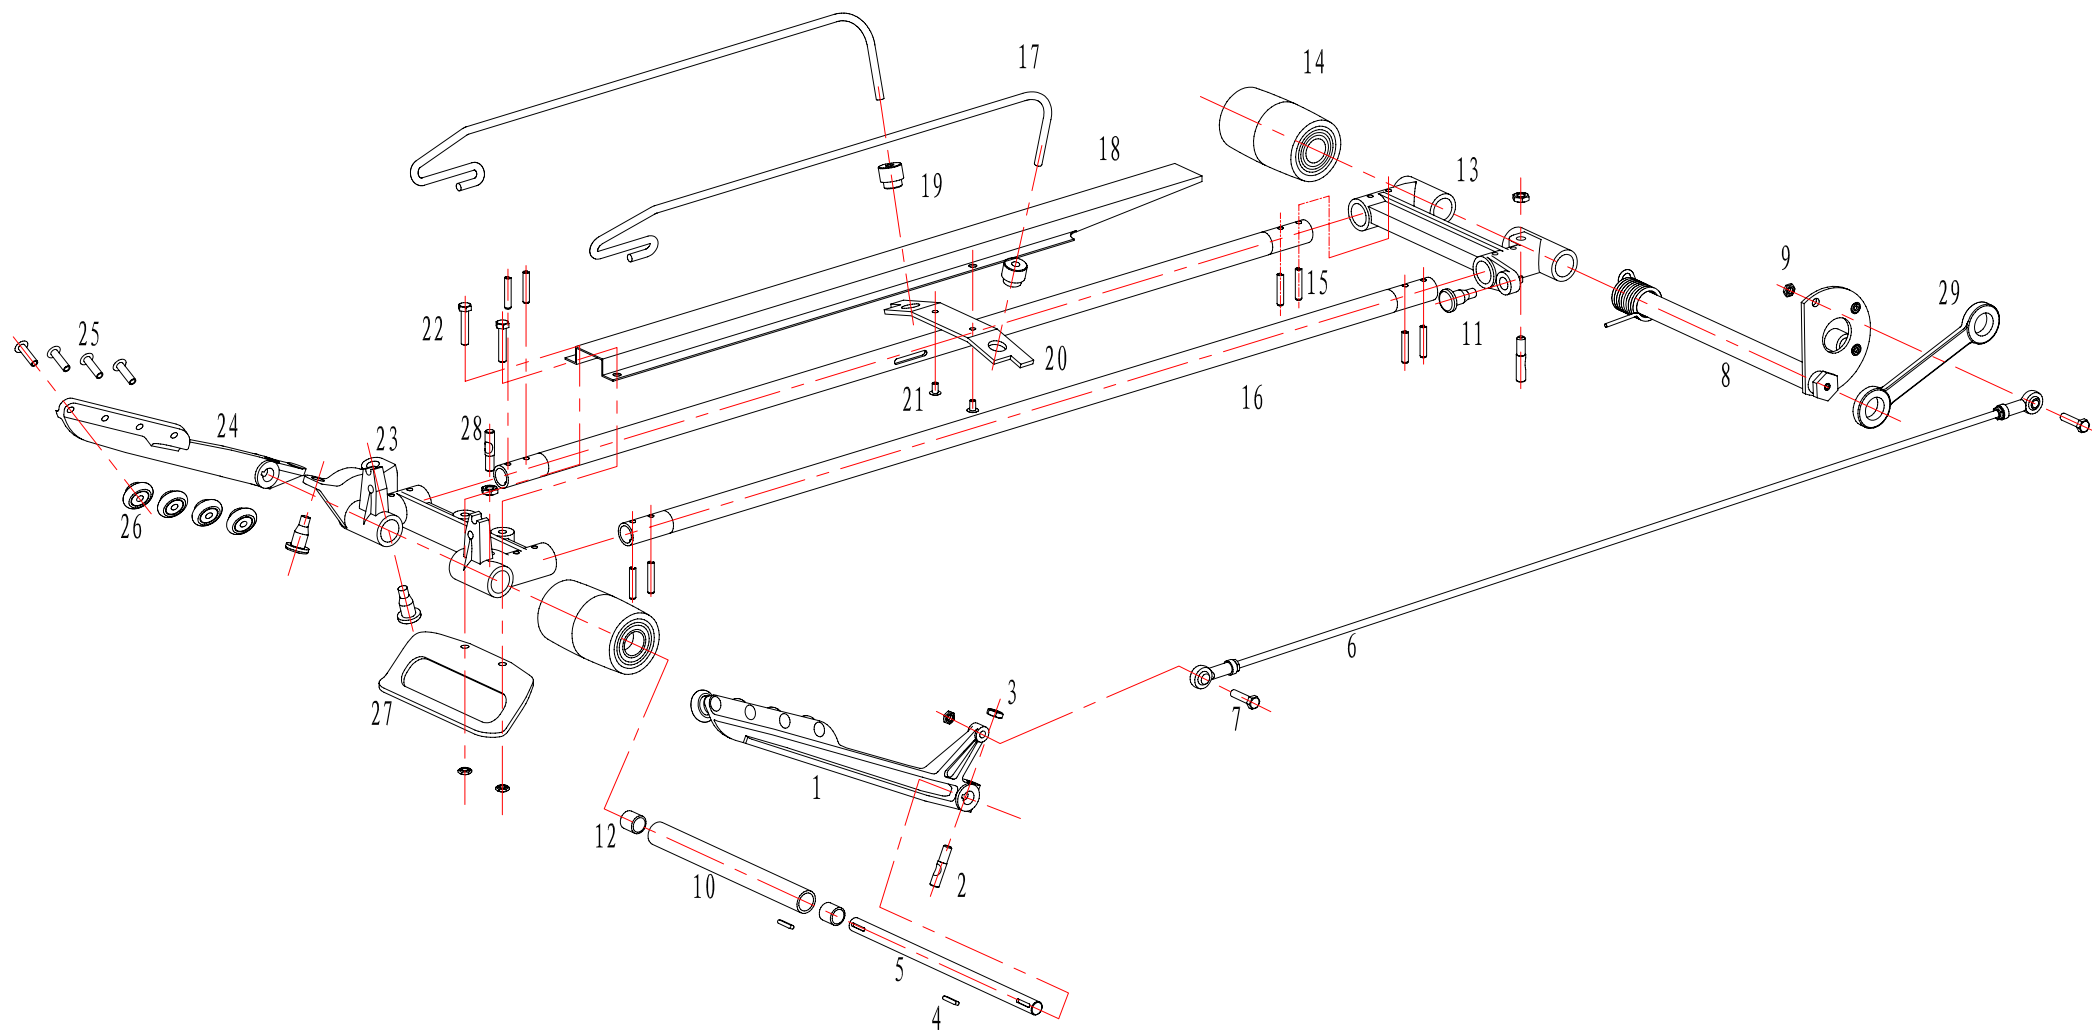


TUBE ASSEMBLY BL03-06-02-00

 

ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG	DESCRIPTION
1	BL02A-06-02-01-00	TRIP ARM ASSEMBLY R.H.	22	GB5783-86 M5x25	
2	BL03-06-01-09	SCREW	23	BL02A-06-02-02	CARRIAGE-FRONT-DIST.
3	GB6184-86,M6		24	BL02A-06-02-03-01	TRIP ARM ASSEMBLY L.H.
4	BL02A-06-02-17	KEY-HY PRO*403	25	GB873-86,5x18	
5	BL02A-06-02-15	SHAFT-DISTRIBUTOR	26	BL03-02-12-00	
6	BL03-06-02-10-00	BALL BEARING ASSEMBLY	27	BL02A-06-02-06	GUARD-BELT-DIST.
7	GB5783-86,M5x20		28	BL03-06-02-05	CLAMP STUD
8	BL03-06-02-11-00	TRIP ROCKER ARM ASSEMBLY	29	BL02A-06-02-12	LINK-CONNECTING DIST.
9	GB6184-86,M5				
10	BL02A-06-02-16-01	TUBE			
11	BL02A-06-02-04	BUMPER			
12	BL02A-01-04-03-02	BEARING SL .378x.503x1/2			
13	BL02A-06-02-13	CARRIAGE CSTG			
14	BL02A-06-01-04-02-00	PULLEY ASSEMBLY-DISTRIBUTOR			
15	GB879-86				
16	BL03-06-02-09	TUBE-DISTRIBUTOR			
17	BL02A-06-02-07	GUIDE-PIN-DIST			
18	BL02A-06-02-08-01	SUPPORT-BELT RUN ASSEMBLY			
19	BL03-06-02-08-03	TUBE			
20	BL02A-06-02-08-02	SUPPORT GUIDE PIN			
21	GB783-86,4x7				


ITEM	CATALOG NO.	DESCRIPTION
1	BL03-06-02-11-01	SHAFT
2	BL02A-06-02-11-02	SPRING
3	BL02A-06-02-11-03	COLLAR
4	BL03-06-02-11-04	NUT, SPECIAL
5	BL02A-06-02-11-05-00	TRIP ROCKER ARM WELDMENT
6	BL02A-06-02-11-06	ROLLER
7	GB894.1-86 6	RETAINING RING
8	GB894.1-86 9	RETAINING RING
9	GB77-85 M6 × 25	SET SCREW

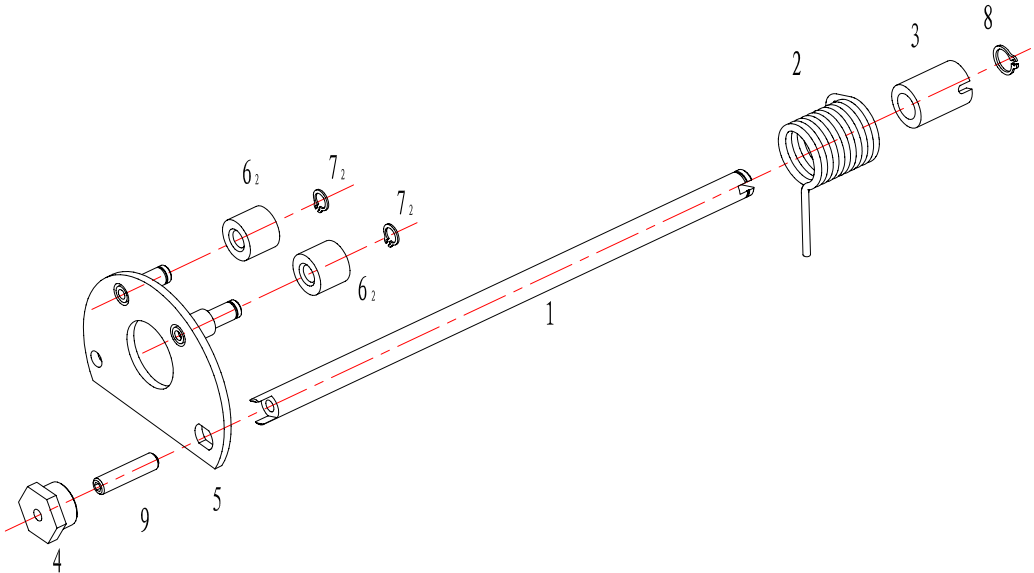 


TRIP ROCKER ARM ASSEMBLY BL03-06-02-11-00




ITEM	CATALOG	DESCRIPTION
1	BL02A-06-03-01	SAFETY LINK SPRING
2	BL02A-06-03-02	LATERAL DRIVE SPRING
3	BL02A-06-03-11	WASHER
4	BL03-06-03-03	SAFETY LINK TUBE
5	BL03-06-03-04	SPACER CLAMP
6	BL03-06-03-05	SPRING POST PIN
7	BL03-06-03-07	SLEEVE
8	BL04-06-03-01-00	DISTRIBUTOR MOUNT WELDMENT
9	BL04-06-03-02	DISTRIBUTOR SUPPORT
10	BL04-06-03-12	ADJUST PILLOW
11	GB5782-86 M8X65	SCREW
12	GB5782-86 M8X80	SCREW
13	GB6170-86 M8	NUT
14	GB6184-86 M8	NUT
15	GB78-85 M8X12	SET SCREW
16	GB97.1-85 8	WASHER
17	SA-8F	ROD END

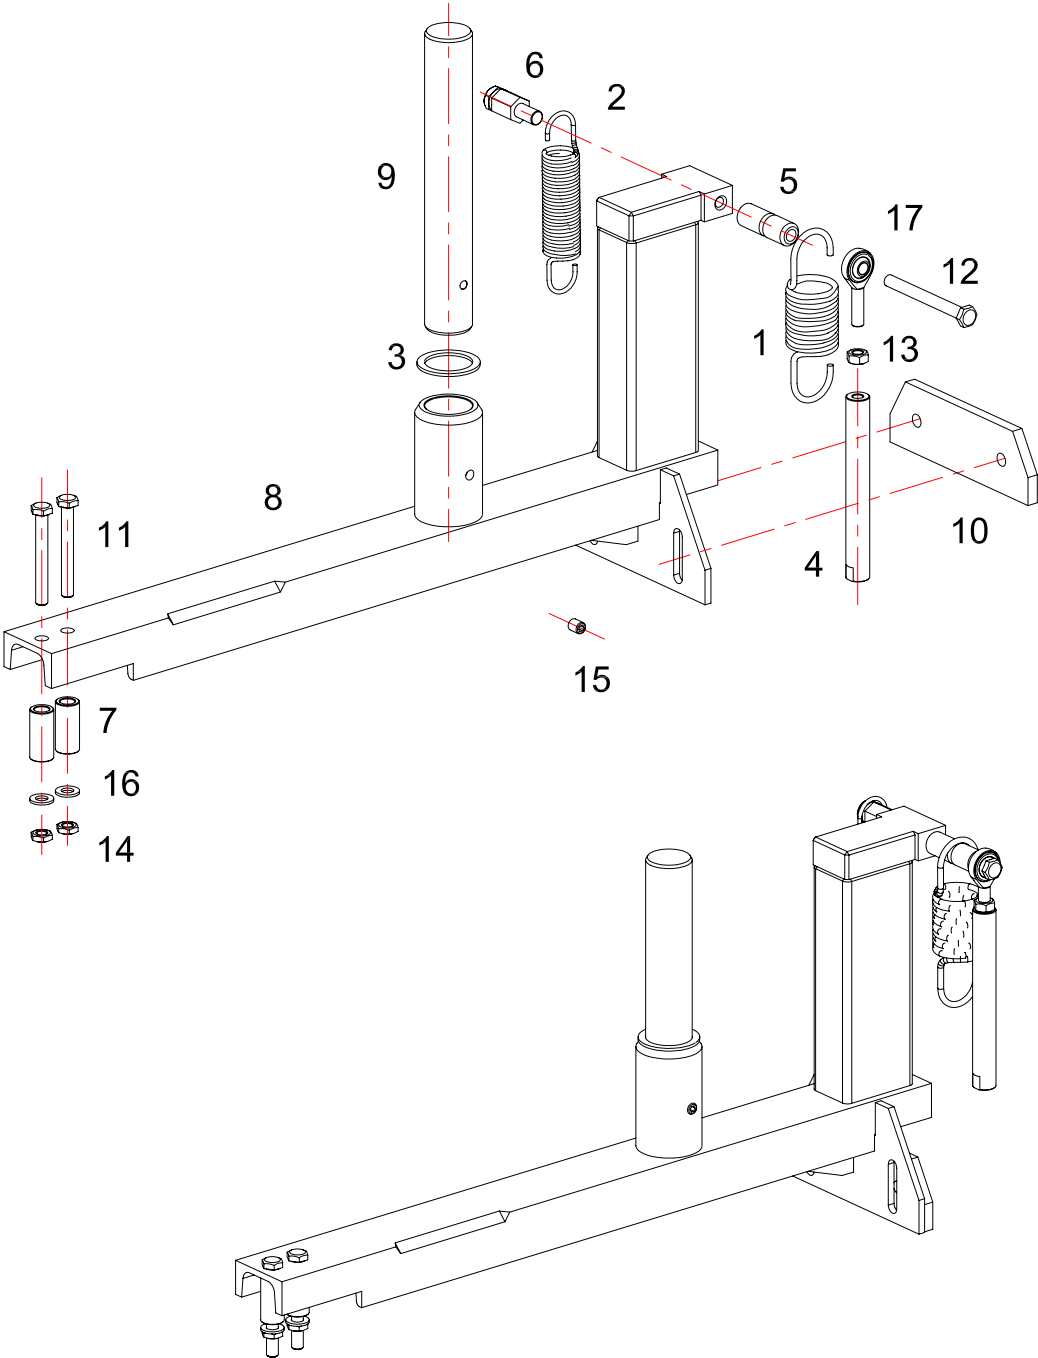 


 TRIP STOP SUPPORT ASSEMBLY BL03-06-04-00

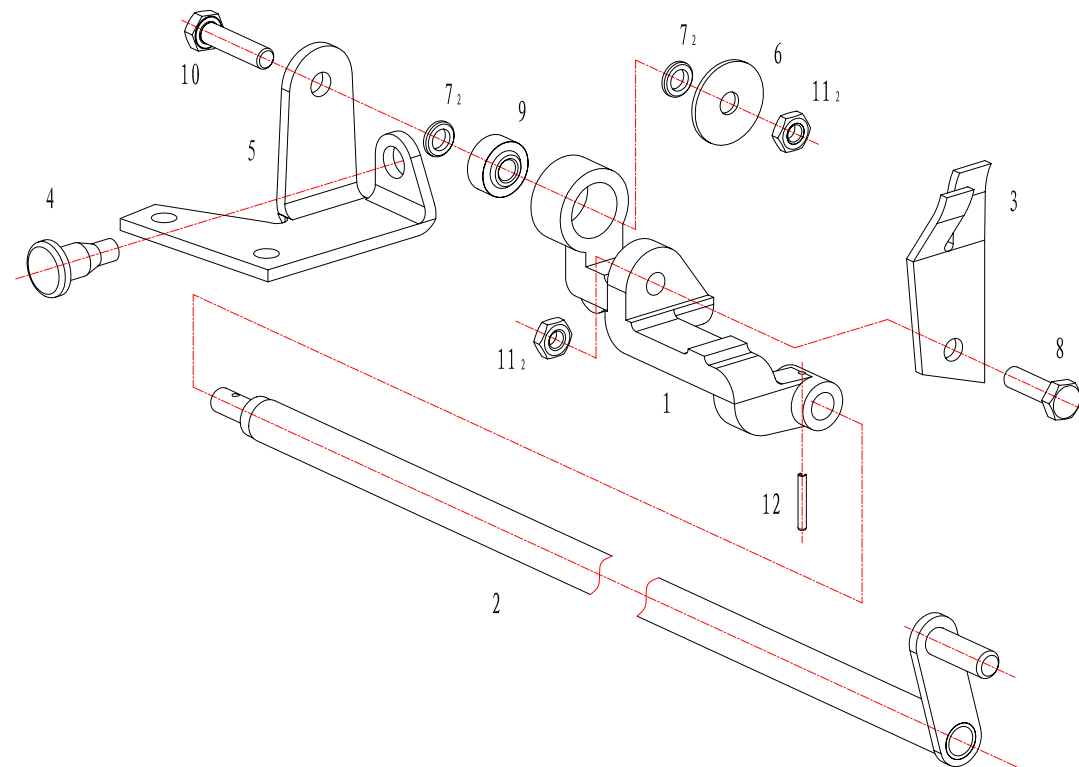


ITEM	CATALOG	DESCRIPTION
1	BL03-06-05-19-01	DRIVE ARM
2	BL02A-06-05-19-02	CLAMP RACE
3	BL03-06-05-19-03	BOLT, SPECIAL
4	BL03-06-05-19-04	NUT, SPECIAL
5	BL03-06-05-19-05	SHAFT, CAM SUPPORT
6	BL02A-06-05-19-06	SPRING SUPPORT
7	BL03-06-05-19-07	ROD, SAFETY LINK
8	BL02A-06-01-16	SLEEVE
9	99502H	BEARING
10	CF-6	CAM FOLLOWER
11	GB6184-86 M6	NUT
12	GB6170-86 M8	NUT
13	GB893.1-86 35	RETAINING RING
14	SI8F	NUT, SPECIAL

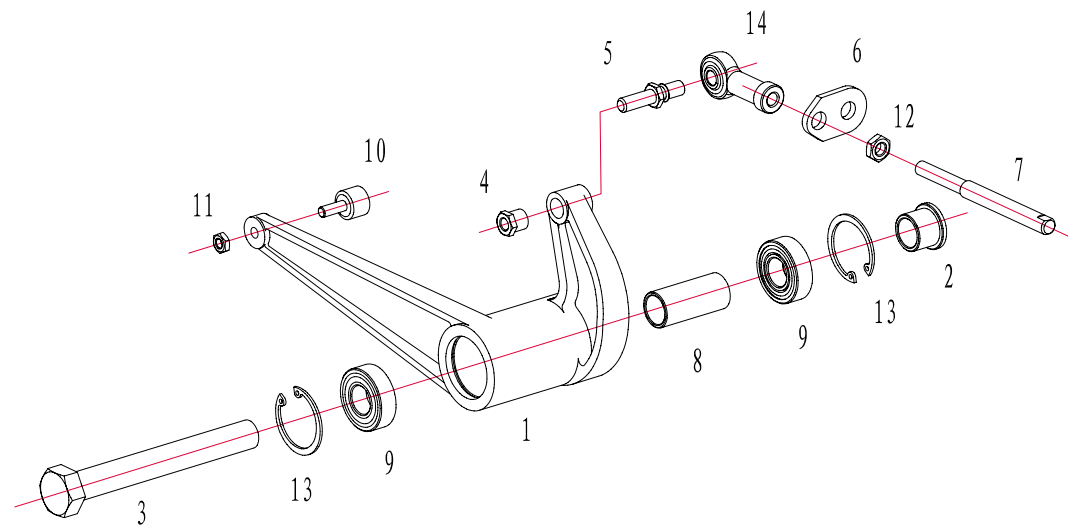 

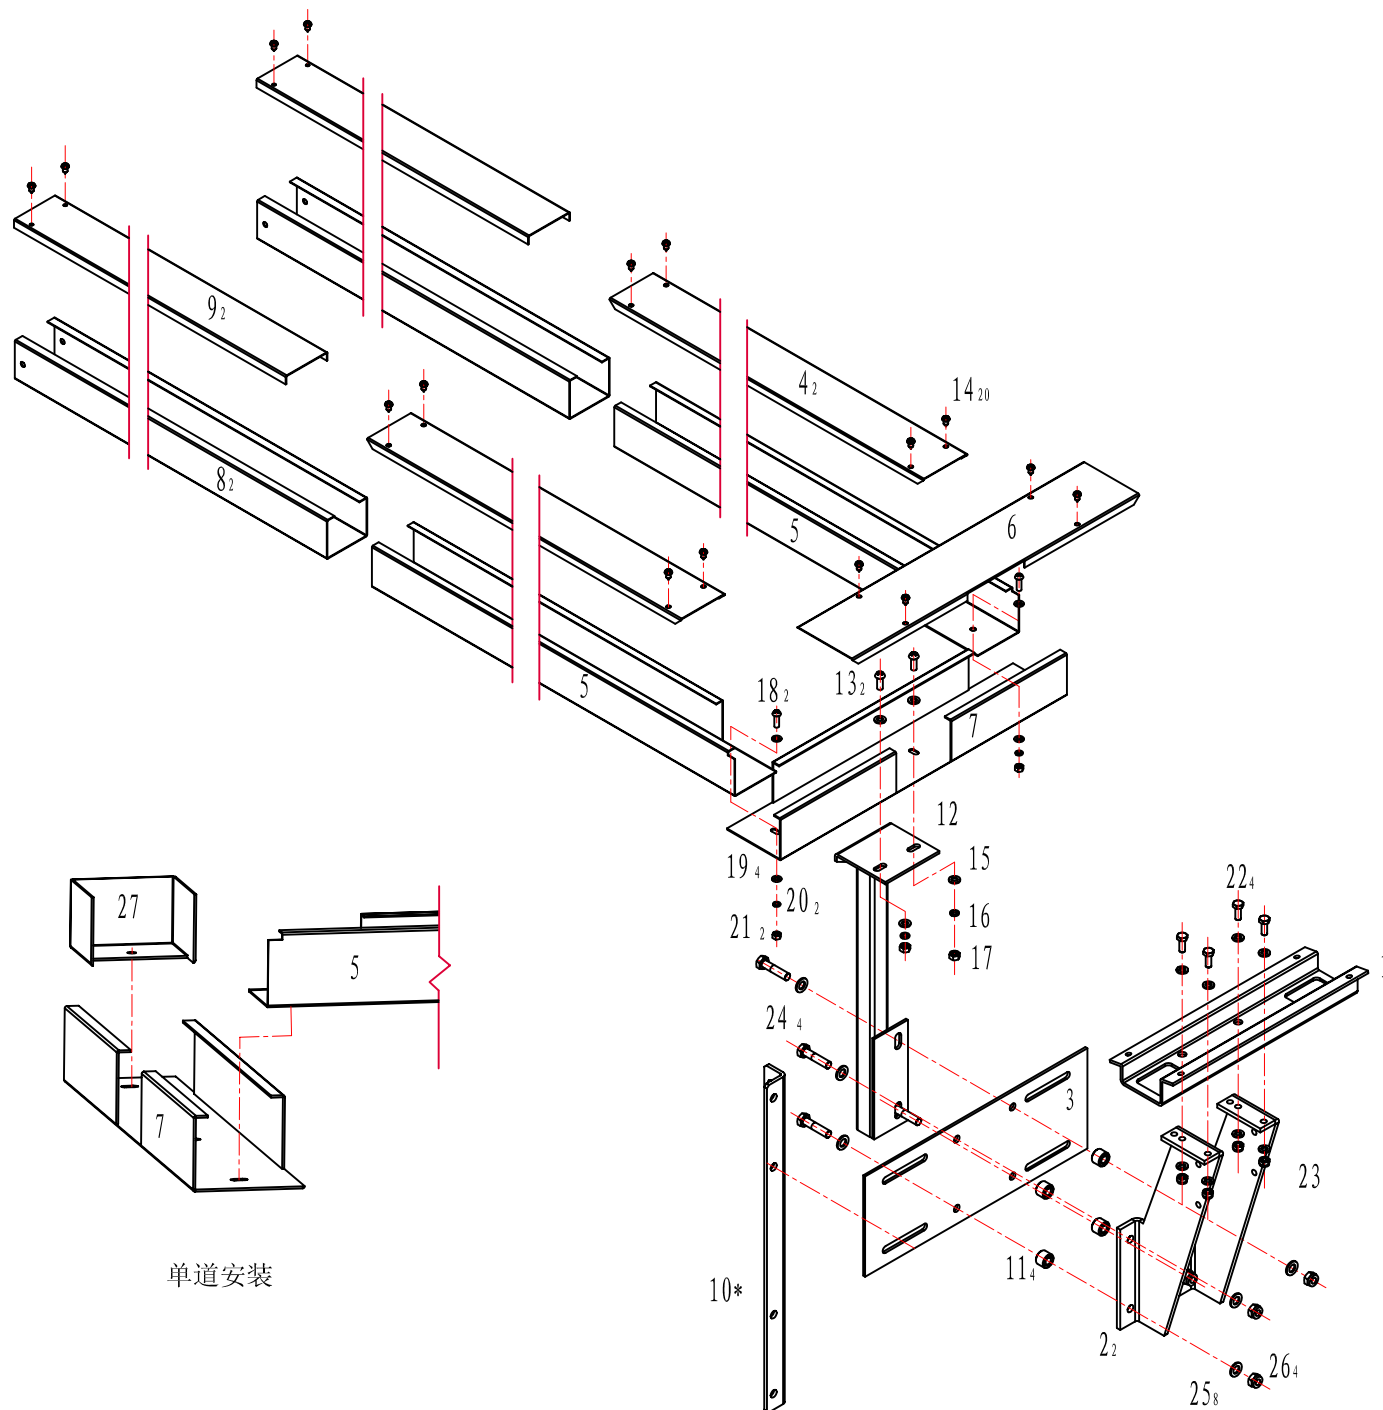 



单道安装

 BACK END CONTROL BOX SUPPORT BL05-07-00




ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL05-07-01	PILLOW	21	GB6170-86	
2	BL05-07-02	RETAINER RING	22	GB5780-86	
3	BL03-07-03	WASHING	23	GB6185-84	SWEEP ROCKER ARM ASSEMBLY
4	CEBL05B-07-04-01		24	GB5780-86	CAP-BALL BUSHING
5	CEBL05B-07-04-02	BUSHING (2)	25	GB97.1-85	BRASS SLEEVE
6	CEBL05B-07-04-03	FLANGED BUSHING (2)	26	GB6185-84	BALL BUSHING SEAT
7	CEBL05B-07-04-04	BRACKET SHOCK MOUNT	27	CEBL05B-07-04-05	BALL BUSHING
8	BL03-07-04-02				
9	BL03-07-04-03B	LINK, THREADED			
10	BL03-07-05	TELESCOPING LINK ASSEMBLY			
11	BL03-07-07A	SHAFT MAIN PIVOT			
	BL03-07-07B	LINK ASSEMBLY			
12	BL05-07-08-00	BUSHING(1)			
13	GB818-85				
14	GB845-85				
15	GB97.1-85	TUBE			
16	GB93-87				
17	GB9170-86				
18	GB818-85				
19	GB97.1-85	SCREW			
20	GB93-87	TUBE			

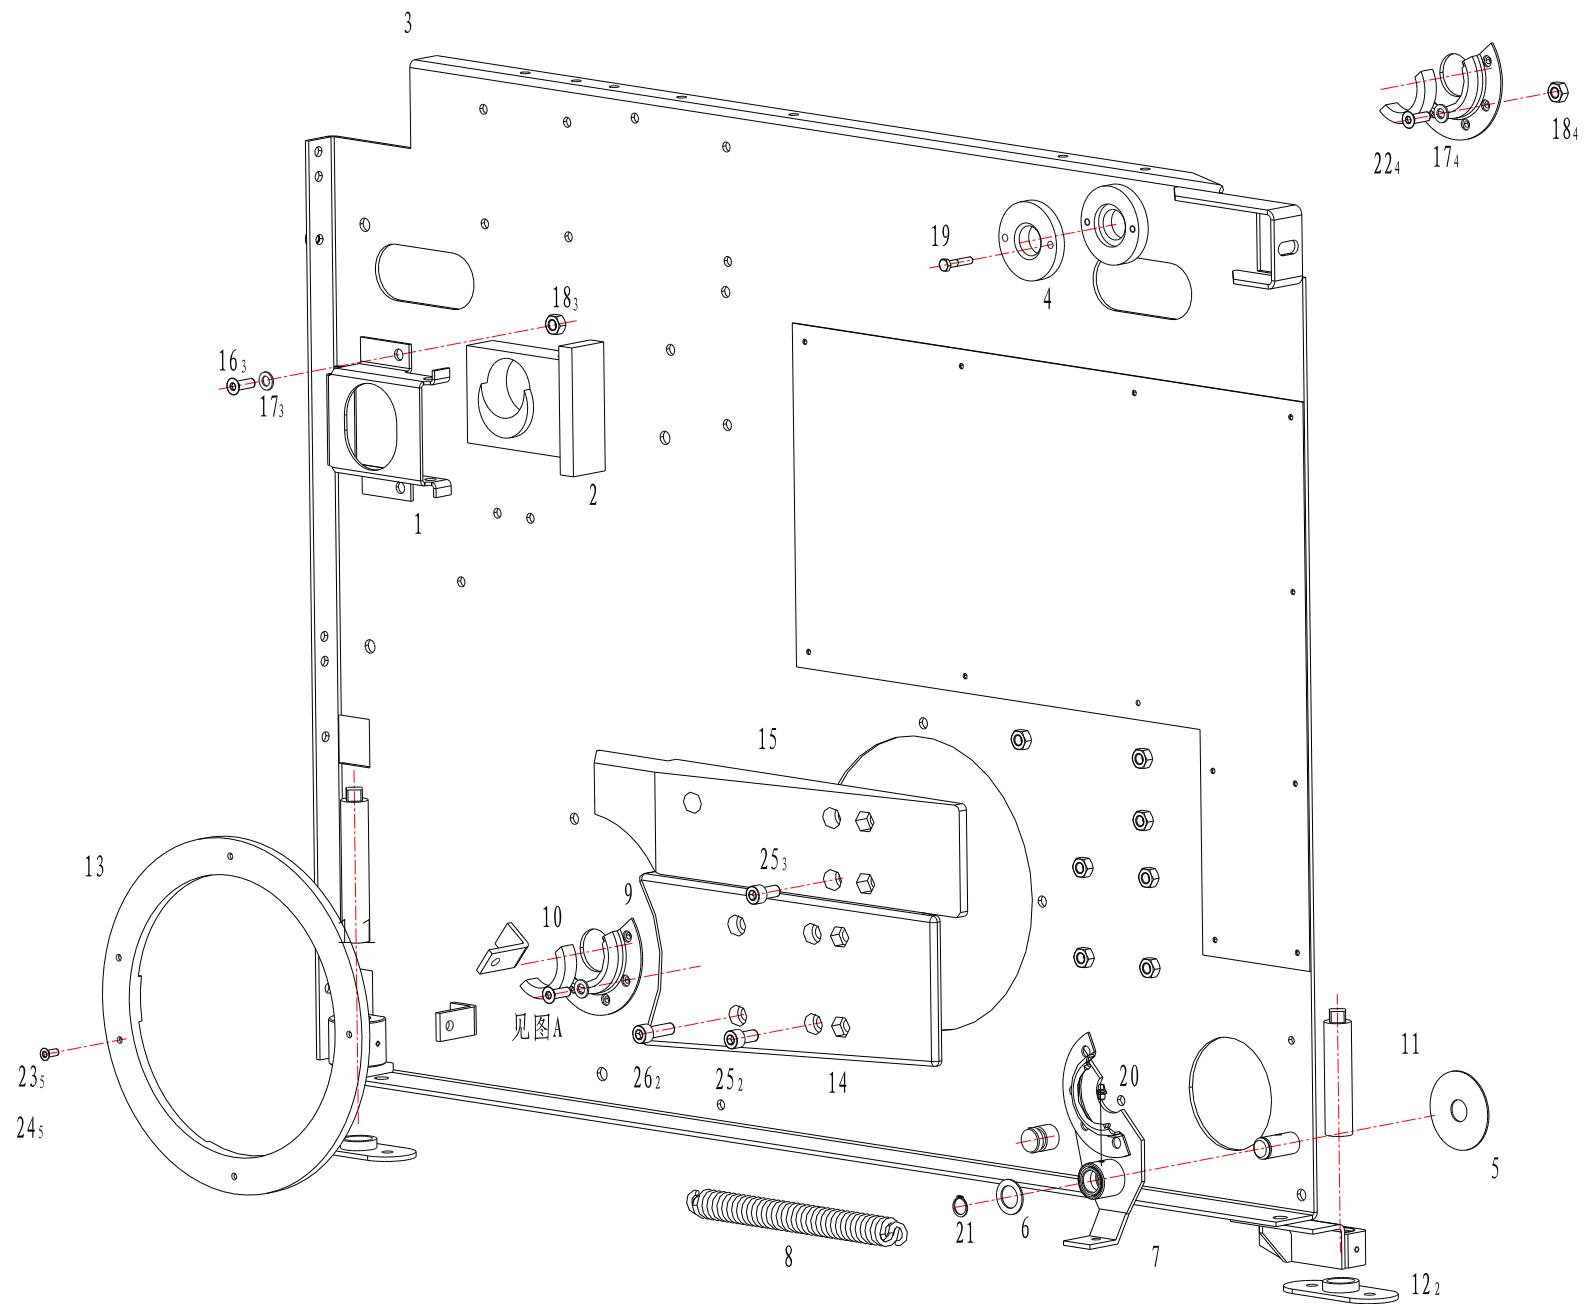 


 


ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-09-01	SUPPORT BOX	22	GB2673-86	SCREW
2	BL02A-09-02	BLOCK	23	GB2673-86	SCREW
3	BL05-09-21-00		24	GB6170-86	NUT
4	BL02A-11-04	BUSHING-CURTAIN ROD	25	GB70-85	SCREW
5	BL02A-09-06	THRUST BEARING	26	GB70-85	SCREW
6	BL02A-09-08	WASHER-FRONT ROLLER SUPPORT			
7	BL02A-09-09-00	BEARING ASSEMBLY,BRACKET			
8	BL02A-09-12	SPRING			
9	BL02A-09-09-03	RETAINER			
10	BL02A-09-16	SUPPORT			
11	BL05-09-20A	JACK SCREW			
12	BL02A-09-22-00	JACK SCREW SKIN			
13	BL05-09-23	DOOR RING			
14	BL05-09-24	PANEL I			
15	BL05-09-25	PANEL II			
16	GB2673-86	SCREW			
17	GB97.1-85	WASHER			
18	GB6170-86	NUT			
19	GB5780-85	SCREW HEX			
20	GB1152-89	GREASE CUP			
21	GB894.1-86	WASHER			

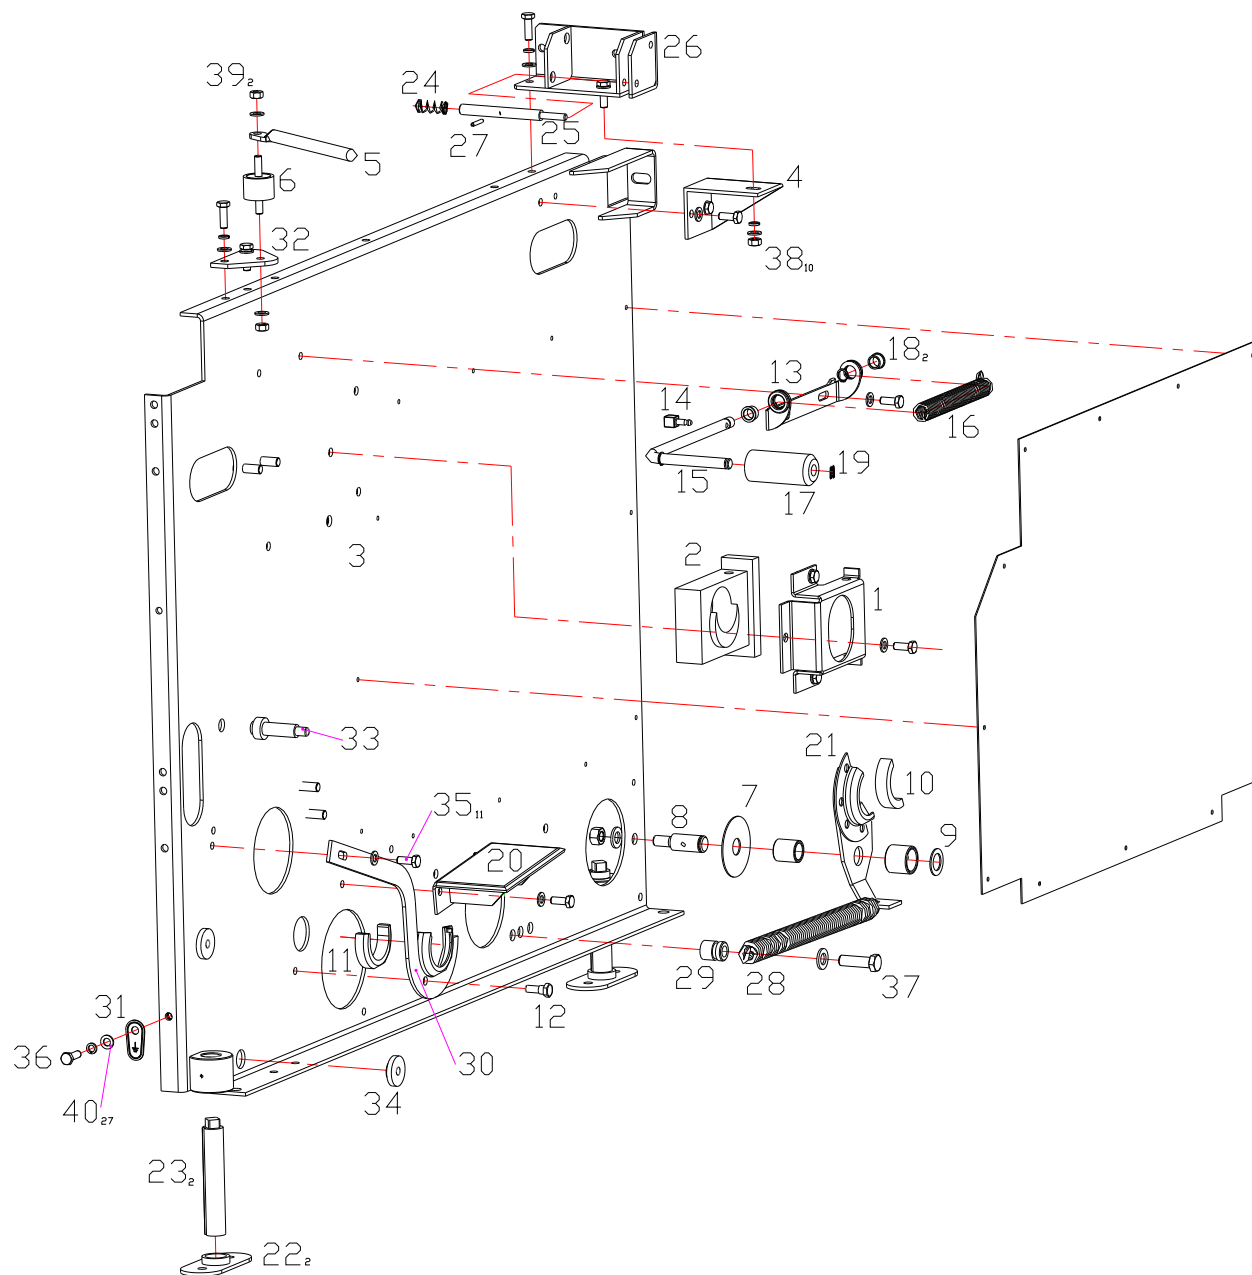 

  KICKBACK ASSEMBLY-SIDE OPPOSITE BALL EXIT








KICKBACK ASSEMBLY-SIDE OPPOSITE BALL EXIT BL05-10-01-00


ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-09-01	SUPPORT BOX	22	BL02A-09-22-00	JACK SCREW SKIM
2	BL02A-09-02	BLOCK RUBBER	23	BL03-09-20	JACK SCREW
2*	BL02A-11-02	BLOCK RUBBER(II)	24	BL02A-10-10-01	SPRING
3	BL05-10-09-00	KICKBACK R.H.(R.H. MACHINE)	25	BL02A-10-10-02	PIN
3*	BL05-12-03-00	KICKBACK L.H. (L.H. MACHINE)	26	BL02A-10-10-03-00	BRACKET
4	BL05-10-01	BRACKET(I)	27	GB879-86	PIN
4*	BL05-12-01	BRACKET(II)	28	BL02A-09-12	SPRING
5	BL02A-10-03	PIN EJECTOR	29	BL02A-09-13	SPRING HOLDER
6	BL03-10-02-00	RUBBER SHOCK MOUNT	30	BL05-10-06-00A/B	SUPPORT WELDMENT A/B
7	BL02A-09-06	THRUST BEARING	31	BL03-10-11	GROUND PLATE
8	BL03-09-07	PIVOT STUD	32	BL05-10-12	TRIANGLE SUPPORT
9	BL02A-09-08	WASHER	33	BL05-10-09-02	SHAFT II
10	BL02A-09-16	SUPPORT BEARING	34	BL05-10-09-02	NUT
11	BL02A-09-16A	SUPPORT BEARING(I)	35	GB5783-86	SCREW
12	BL03-10-07	STEEL RIVET	36	GB5783-86	SCREW
13	BL02A-10-04-01-00	PIN EJECTOR SUPPORT	37	GB5783-86	SCREW
14	BL02A-10-04-01-00	PIN	38	GB6170-86	NUT
15	BL02A-10-04-03	SHAFT	39	GB6184-86	CLAMP NUT
16	BL02A-10-04-04	SPRING	40	GB97.1-85	WASHER
17	BL02A-10-04-05	ROLLER			
18	BL02A-10-04-06	BUSHING			
19	BLB001-12	X-WASHER			
20	BL02A-09-14-00	ANGLE			
21	BL02A-09-09-00	LUTCHET R.H. L.H.			

  ~~ROLLER ASSEMBLY BL03A-13-00~~

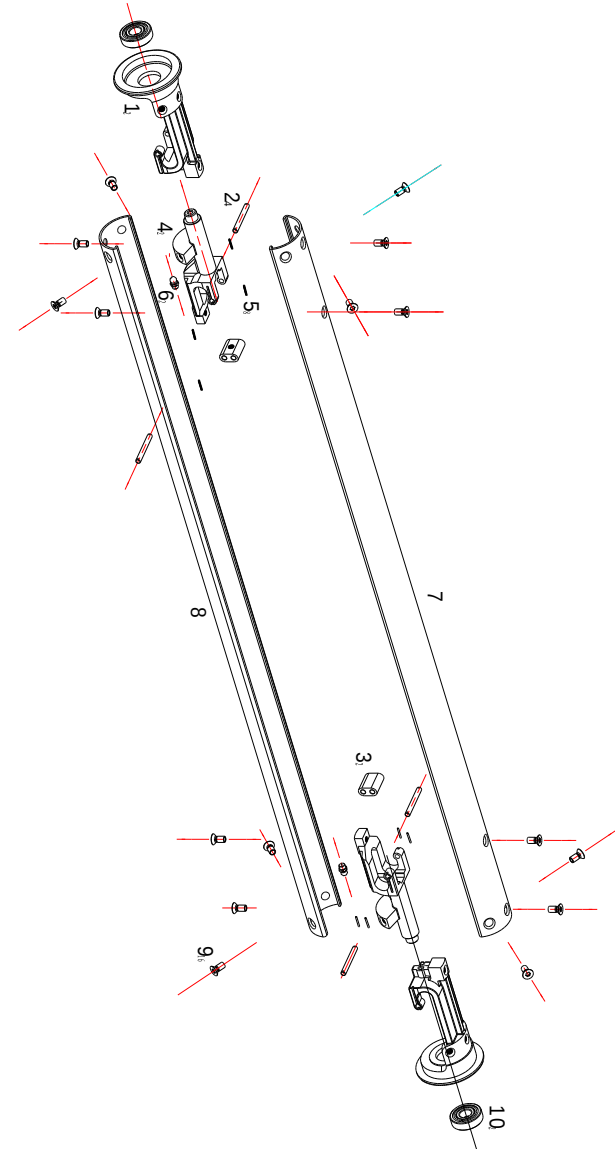


ITEM	CATALOG NO.	DESCRIPTION
1	BL05-14-07-00BR	ANGLE SUPPORT(BR)
1α	BL05-14-07-00BL	ANGLE SUPPORT(BL)
2	BL05-14-01R	BOUNCE PLATE-REAR-R.H.
2α	BL05-14-01L	BOUNCE PLATE-REAR-L.H.
3	BL05-14-02R	BOUNCE PLATE-FRONT-R.H.
3α	BL05-14-02L	BOUNCE PLATE-FRONT-L.H.
4	BL05-14-03A	CHANNEL
5	BL05-14-03	CHANNEL
6	BL02A-14-04	REINFORCEMENT BAR
7	BL05-14-05R	ANGLE SUPPORT(R.H.)
7α	BL05-14-05L	ANGLE SUPPORT(L.H.)
8	BL05-14-06-00	VIBRATION DAMPENER
9	BL05-14-07-00AR	BRACKET I
9α	BL05-14-07-00AL	BRACKET I
10	BI02A-14-08	GROUND CABLE
11	GB97.1-85	WASHER
12	GB93-87	WASHER
13	GB6170-86	NUT
14	GB5783-86	

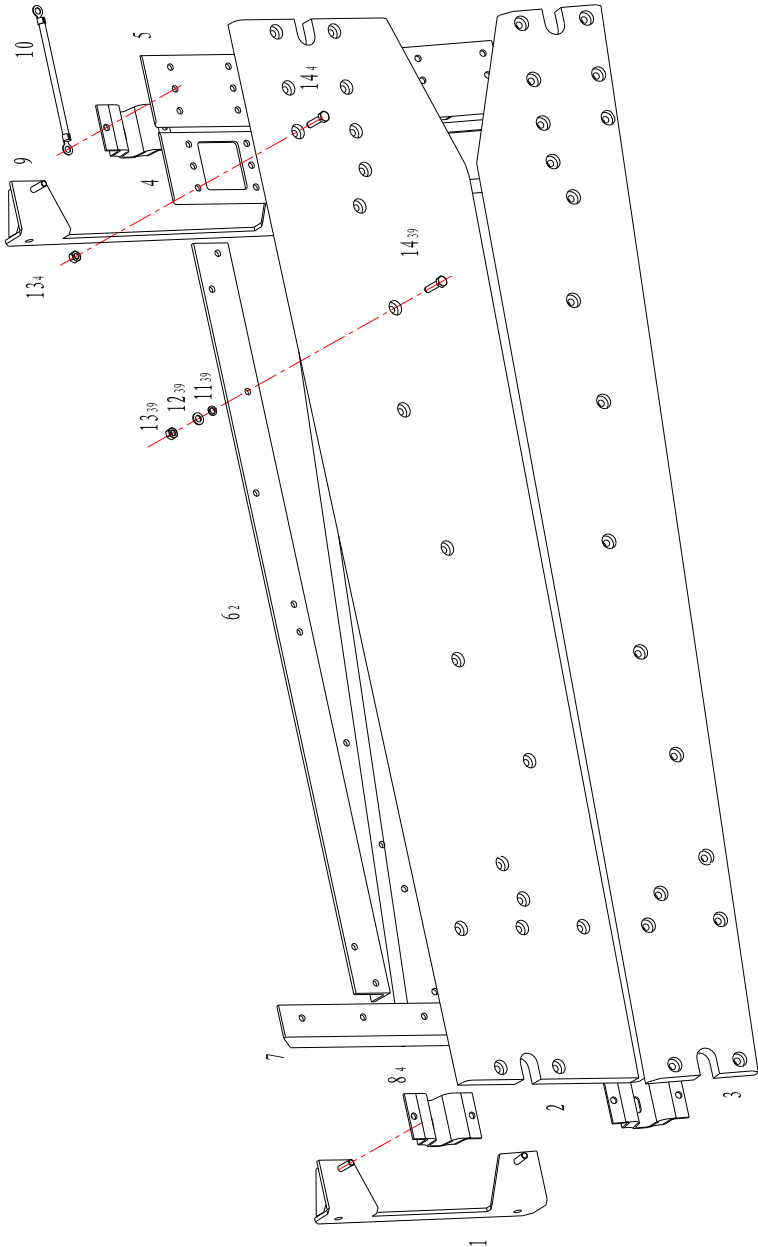 

 




CUSHION,SHOCK ABSORBER ASSEMBLY BL03-17-00

ITEM	CATALOG NO.	DESCRIPTION
1	BL02A-17-05	RIVET RUBBER
2	BL02A-17-06	ABSORBER RUBBER FLAKE
3	BL02A-17-07a/b	ABSORBER RUBBER
4	BL02A-07-13	CURTAIN
5	BL02A-17-08	ABSORBER SPONGE
6	BL02A-17-15(16)	PANEL.R.H.
7	BL02A-17-09(10)	PLANK L.H.
8	BL03-17-01-00	CUSHION,SHOCK ABSORB ASSEMBLY L.H.
9	BL03-17-02-00	CUSHION,SHOCK ABSORB ASSEMBLY R.H.
10	BL03-17-30-00	SHOCK ABSORBER ASSEMBLY
11	GB6170-86 M10	
12	GB97.1-85	
13	BL02A-17-03	WASHER
14	GB2673-86 M10x60	
15	GB2673-86 M10x70	
16	BL02A-17-12	CURTAIN ROD
17	BL02A-17-14	LINK

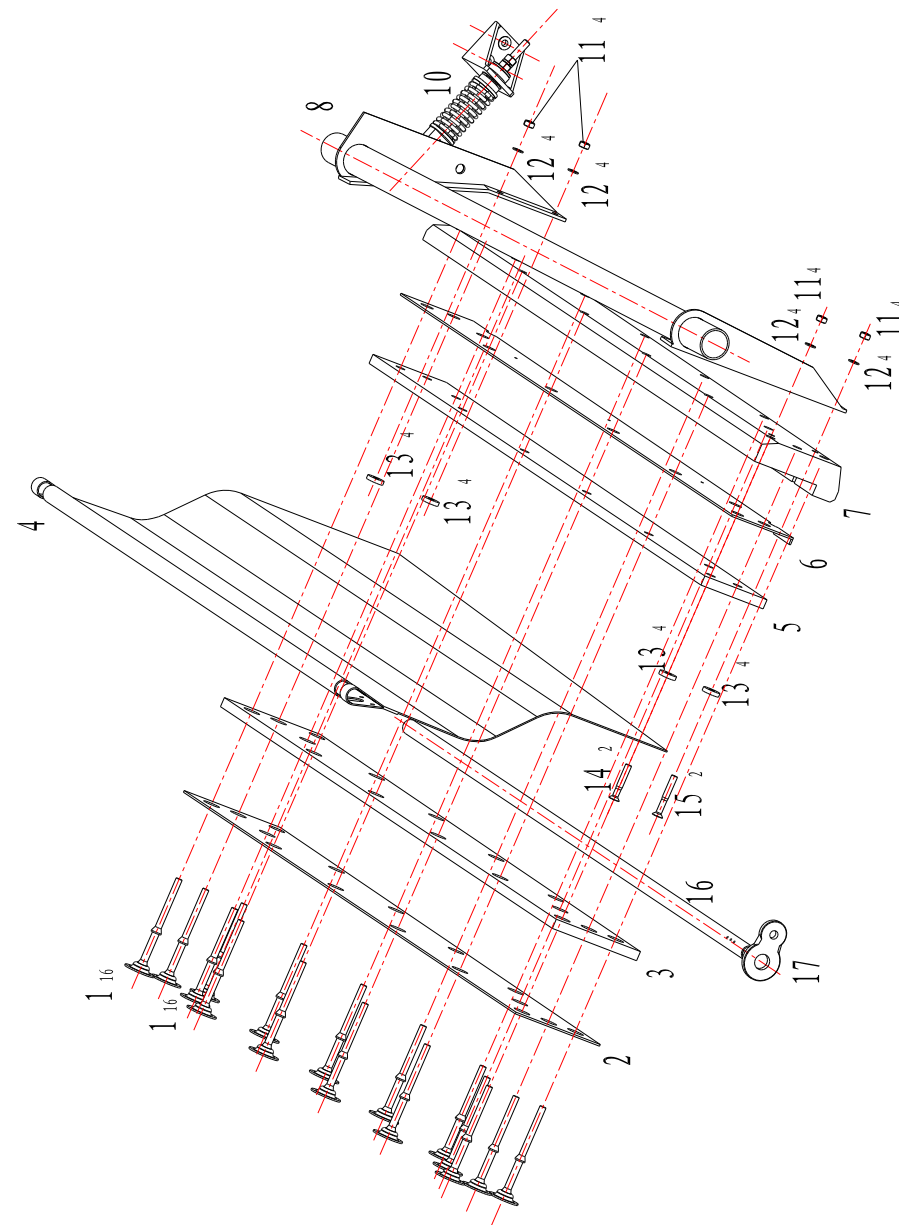 

ITEM	CATALOG NO.	DESCRIPTION
1	BL03-17-30-02	LINK
2	BL03-17-30-05	ADJUST SHAFT
3	GB93-87(12)	
4	BL03-17-30-04	WASHER SPRING SEAT
5	BL03-17-30-09A	SPRING
6	BL03-17-30-11	WASHER SPRING SEAT
7	BL03-17-30-10	BUSH
8	BL03-17-30-08	RUBBER
9	BL03-17-30-06	EAR
10	BL03-17-30-13	SHAFT
11	GB879-86	
12	GB9458-88	
13	GB93-87(16)	
14	GB97.1-85(16)	
15	BL03-17-30-12	
16	GB6170-86 M12	
17	GB5783-86 M8x25	
18	GB93-87(8)	
19		
20		
21		

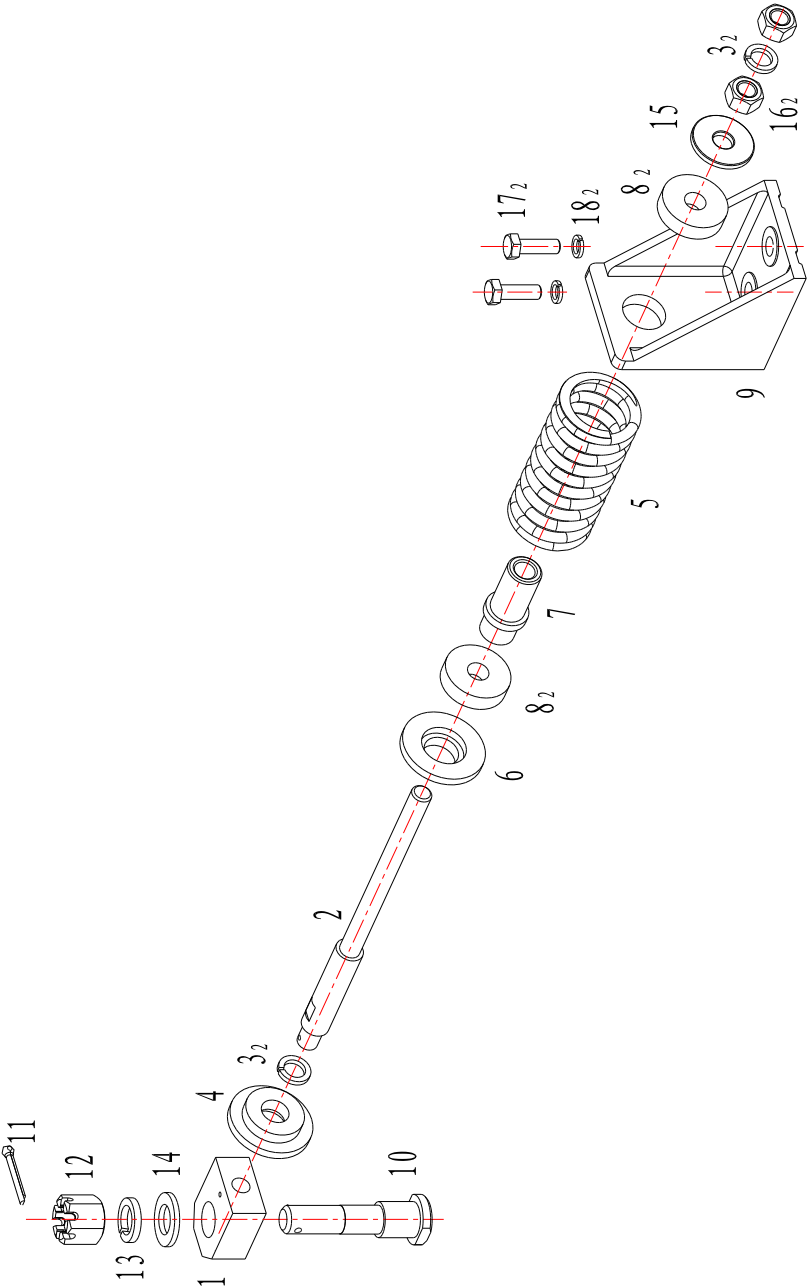 


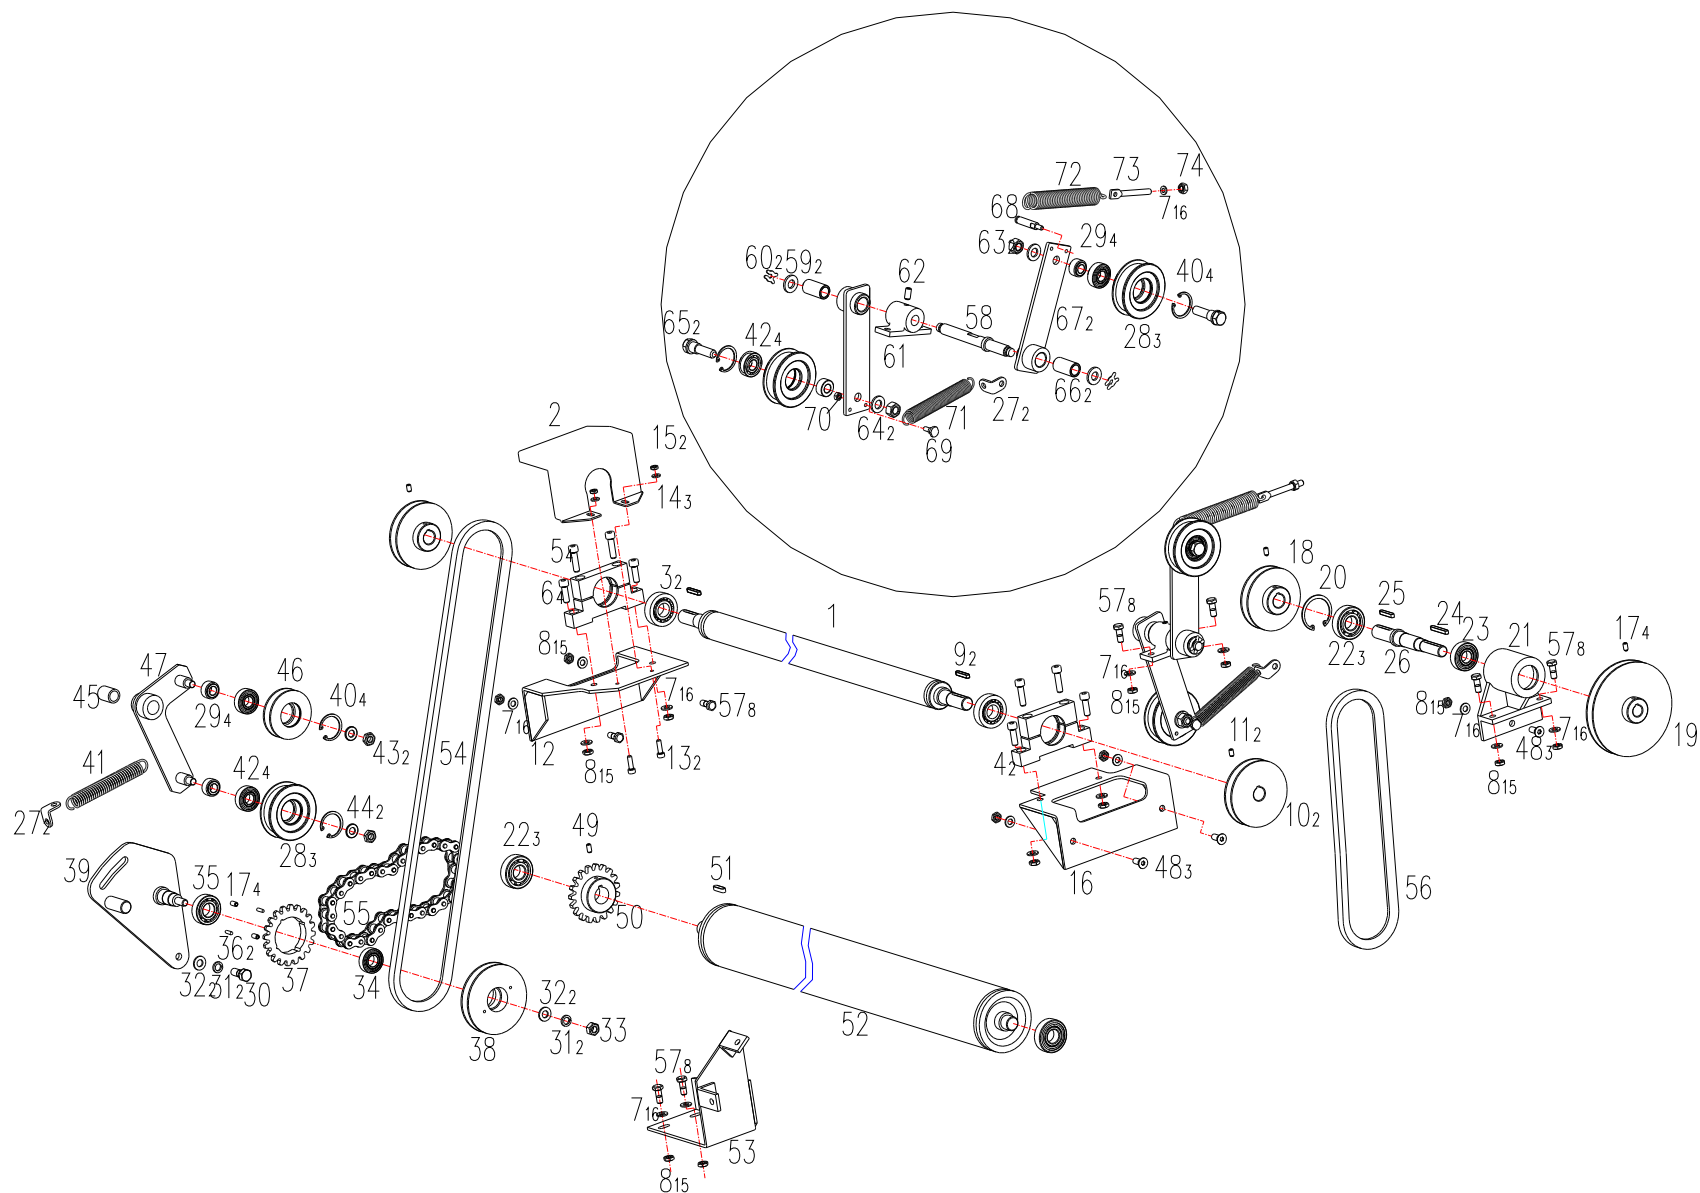  


ITEM	CATALOG NO.	DESCRIPTION
1	BL05-18-06-00	SHAFT BRIDGE, LONG
2	BL05-18-05	HUBCAP
3	1204	
4	BL05-18-04	LUTCHET ASSEMBLY
5	GB70-85, M8x30	
6	GB70-85, M8x25	
7	GB97.1-85, 8	
8	GB6184-86, M8	
9	GB1096-79, 5x30	
10	BL05-18-11	PULLEY II
11	GB77-85, M6x10	
12	BL05-18-03-00A	BRACKET
13	GB70-85, M6x20	
14	GB97.1-85, 6	
15	GB6184-86, M6	
16	BL05-18-03-00	BRACKET
17	GB77-85, M6x12	
18	BL05-18-07-04	PULLEY I
19	BL05-18-07-01	PULLEY I
20	GB93.1-86(47)	
21	BL05-18-07-03	LUTCHET


ITEM	CATALOG NO.	DESCRIPTION
22	GB278-82(80204)	
23	GB278-82(80203)	
24	GB1096-79(5x40)	
25	GB1096-79(5x25)	
26	BL05-18-07-02	SHAFT
27	BL05-18-02-08	SPRING HOLDER
28	BL05-08-06-07	CLAMP STUD
29	BL05-18-02-06	BUSHING
30	GB5780-86(M10x25)	
31	GB93-87(10)	
32	GB97.1-85(10)	
33	GB6170-86(M10)	
34	80103	
35	80104	
36	GB117-86(4x10)	
37	BL05-18-01-02-01	SPROCKET WHEEL I
38	BL05-18-01-02-02	PULLEY
39	BL05-18-01-01-00	ADJUST BRACKET
40	GB839.1-86(35)	
41	BL05-18-02-07	SPRING
42	GB278-82(80202)	

  ROLLER ASSEMBLY BL03-08-18-00





ITEM	CATALOG NO.	DESCRIPTION	ITEM	CATALOG NO.	DESCRIPTION
43	GB6184-86,M10		64		
44	GB97.2-86,10		65	BL05-18-08-02	BOLT
45	BL05-18-02-03	SLEEVE BUSHING	66	BL05-18-08-05	SLEEVE BEARING
46	BL05-18-02-01	CLAMP STUD	67	BL05-18-08-04-00	ARM
47	BL05-18-02-04-00	ANGLE ARM ASSEMBLY	68	BL05-18-08-01	SPRING SCREW
48	GB2673-86,M8x20		69	BL05-18-08-09	SPRING BOLT
49	GB77-85,6x25		70	GB6170-86,M6	
50	BL05-18-09-02	SPROCKET WHEEL	71	BL05-18-08-10	SPRING
51	GB1096-79,6x25		72	BL05-18-08-03	SPRING
52	BL05-18-09-01-00	DRIVE SHAFT	73	BL03-04-01	SCREW
53	BL05-18-10-00	BRACKET SUPPORT L.H. R.H.	74	GB6170-86,M8	
54	A 1473	V BELT			
55	12.7	ROLLER CHAIN			
56	A 827	V BELT			
57	GB5782-86,M8x20				
58	BL05-18-08-06	SHAFT			
59	BL05-18-08-08	WASHER			
60	BLB001				
61	BL05-18-08-07	BRACKET			
62	GB77-85,M8x16				
63	GB6170-86,M12				

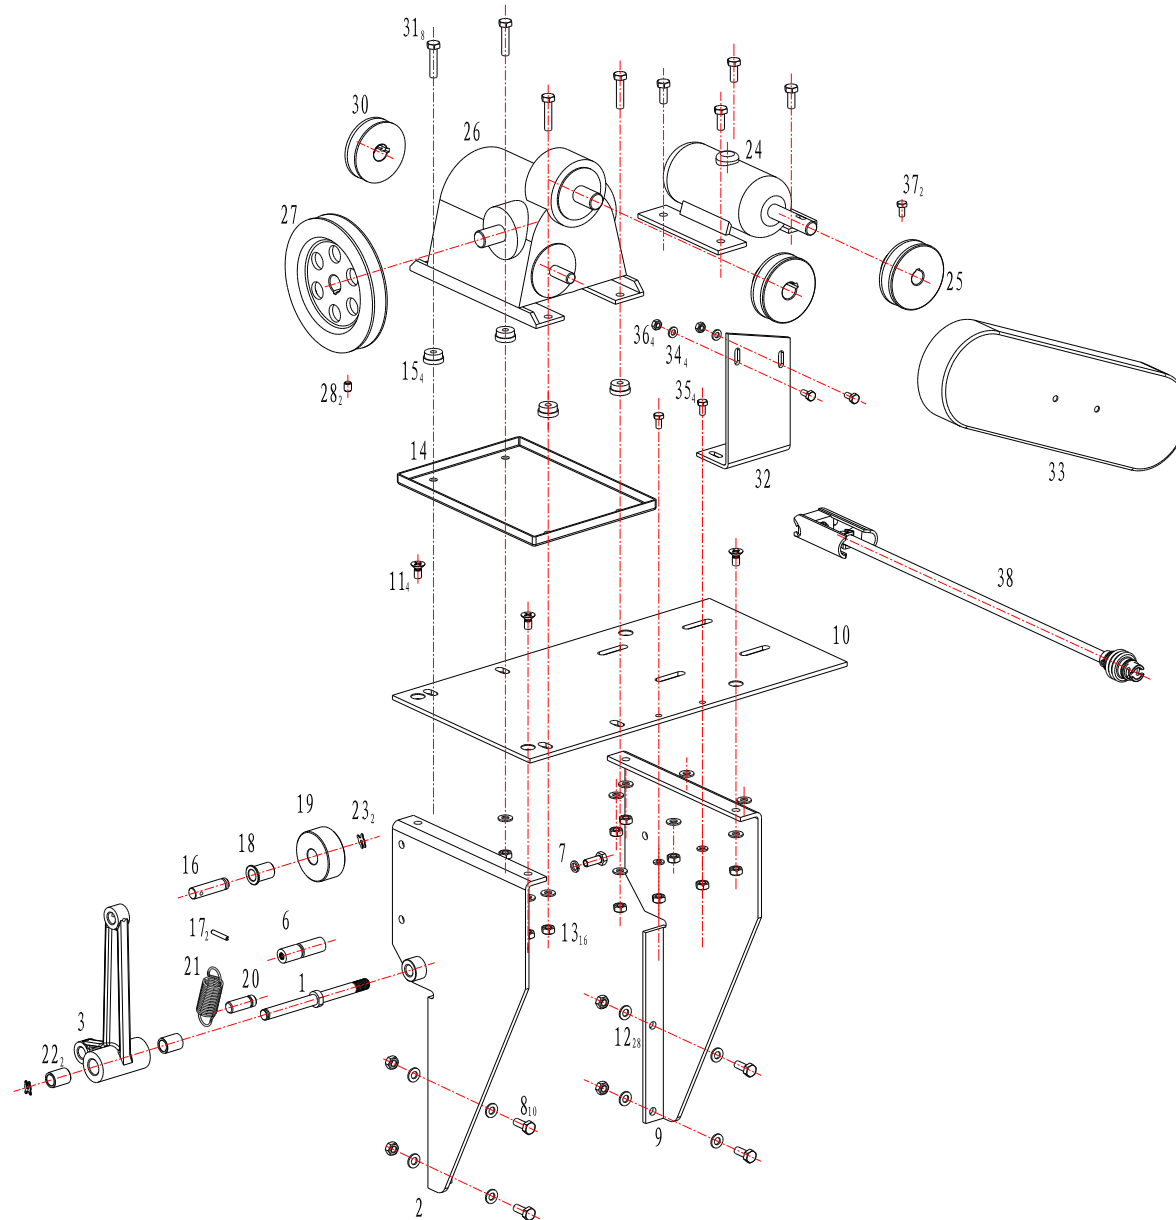 

ITEM	CATALOG NO.	DESCRIPTION
1	BL03-38-03	SHAFT OF BELT TIGHT
2	BL03-38-01-00	MOTOR MOUNT WELDMENT (1) L.H.
3	BL02A-38-04	ARM OF BELT TIGHT
4	GB97.1-85-12	
5	GB6170-86-12	
6	BL03-38-07	SHORT SHAFT
7	GB93-87-8	
8	GB5781-86-8-20	
9	BL03-38-17	MOTOR MOUNT WELDMENT (2) L.H.
10	BL03-38-16	GEAR BOX PLATE
11	GB819-85-8-16	
12	GB97.1-85-8	
13	GB6170-86-8	
14	BL02A-38-15	MOTOR DRIP PAN
15	BL02A-38-23	SHOCK MOUNT
16	BL03-38-08	PIN OF SHORT SHAFT
17	GB879-86-4-26	
18	BL02A-08-28-01-02-02	
19	BL03-38-10	TIGHT PULLEY
20	BL02A-38-19	PIN
21	BL02A-08-18-33	

ITEM	CATALOG NO.	DESCRIPTION
22	BL03-38-05	BUSH
23	BLB001-12	
24		HORIZONTAL MOTOR
25	BL03-38-13A	MOTOR PULLEY
26		HORIZONTAL DECELERATION MACH
27	BL03-38-11	-INE PIN ELEVATOR
28	GB77-85-8-10	.
29	BL03-38-12	GEAR BOX PULLEY
30	BL03-38-20	CARPET BELT DRIVE SLEEVE
31	GB5781-86-8-35	
32	BL03-38-22	BELT GUARD.
33	BL03-38-21	BELT GUARD
34	GB97.1-85-6	
35	GB5781-86-6-12	
36	GB6170-86-6	
37	GB70-85-5-12	
38	BL03-38-14-00A	UNIVERSAL JOINT

BACK-END MOTOR ASSEMBLY BL03-38-00

